




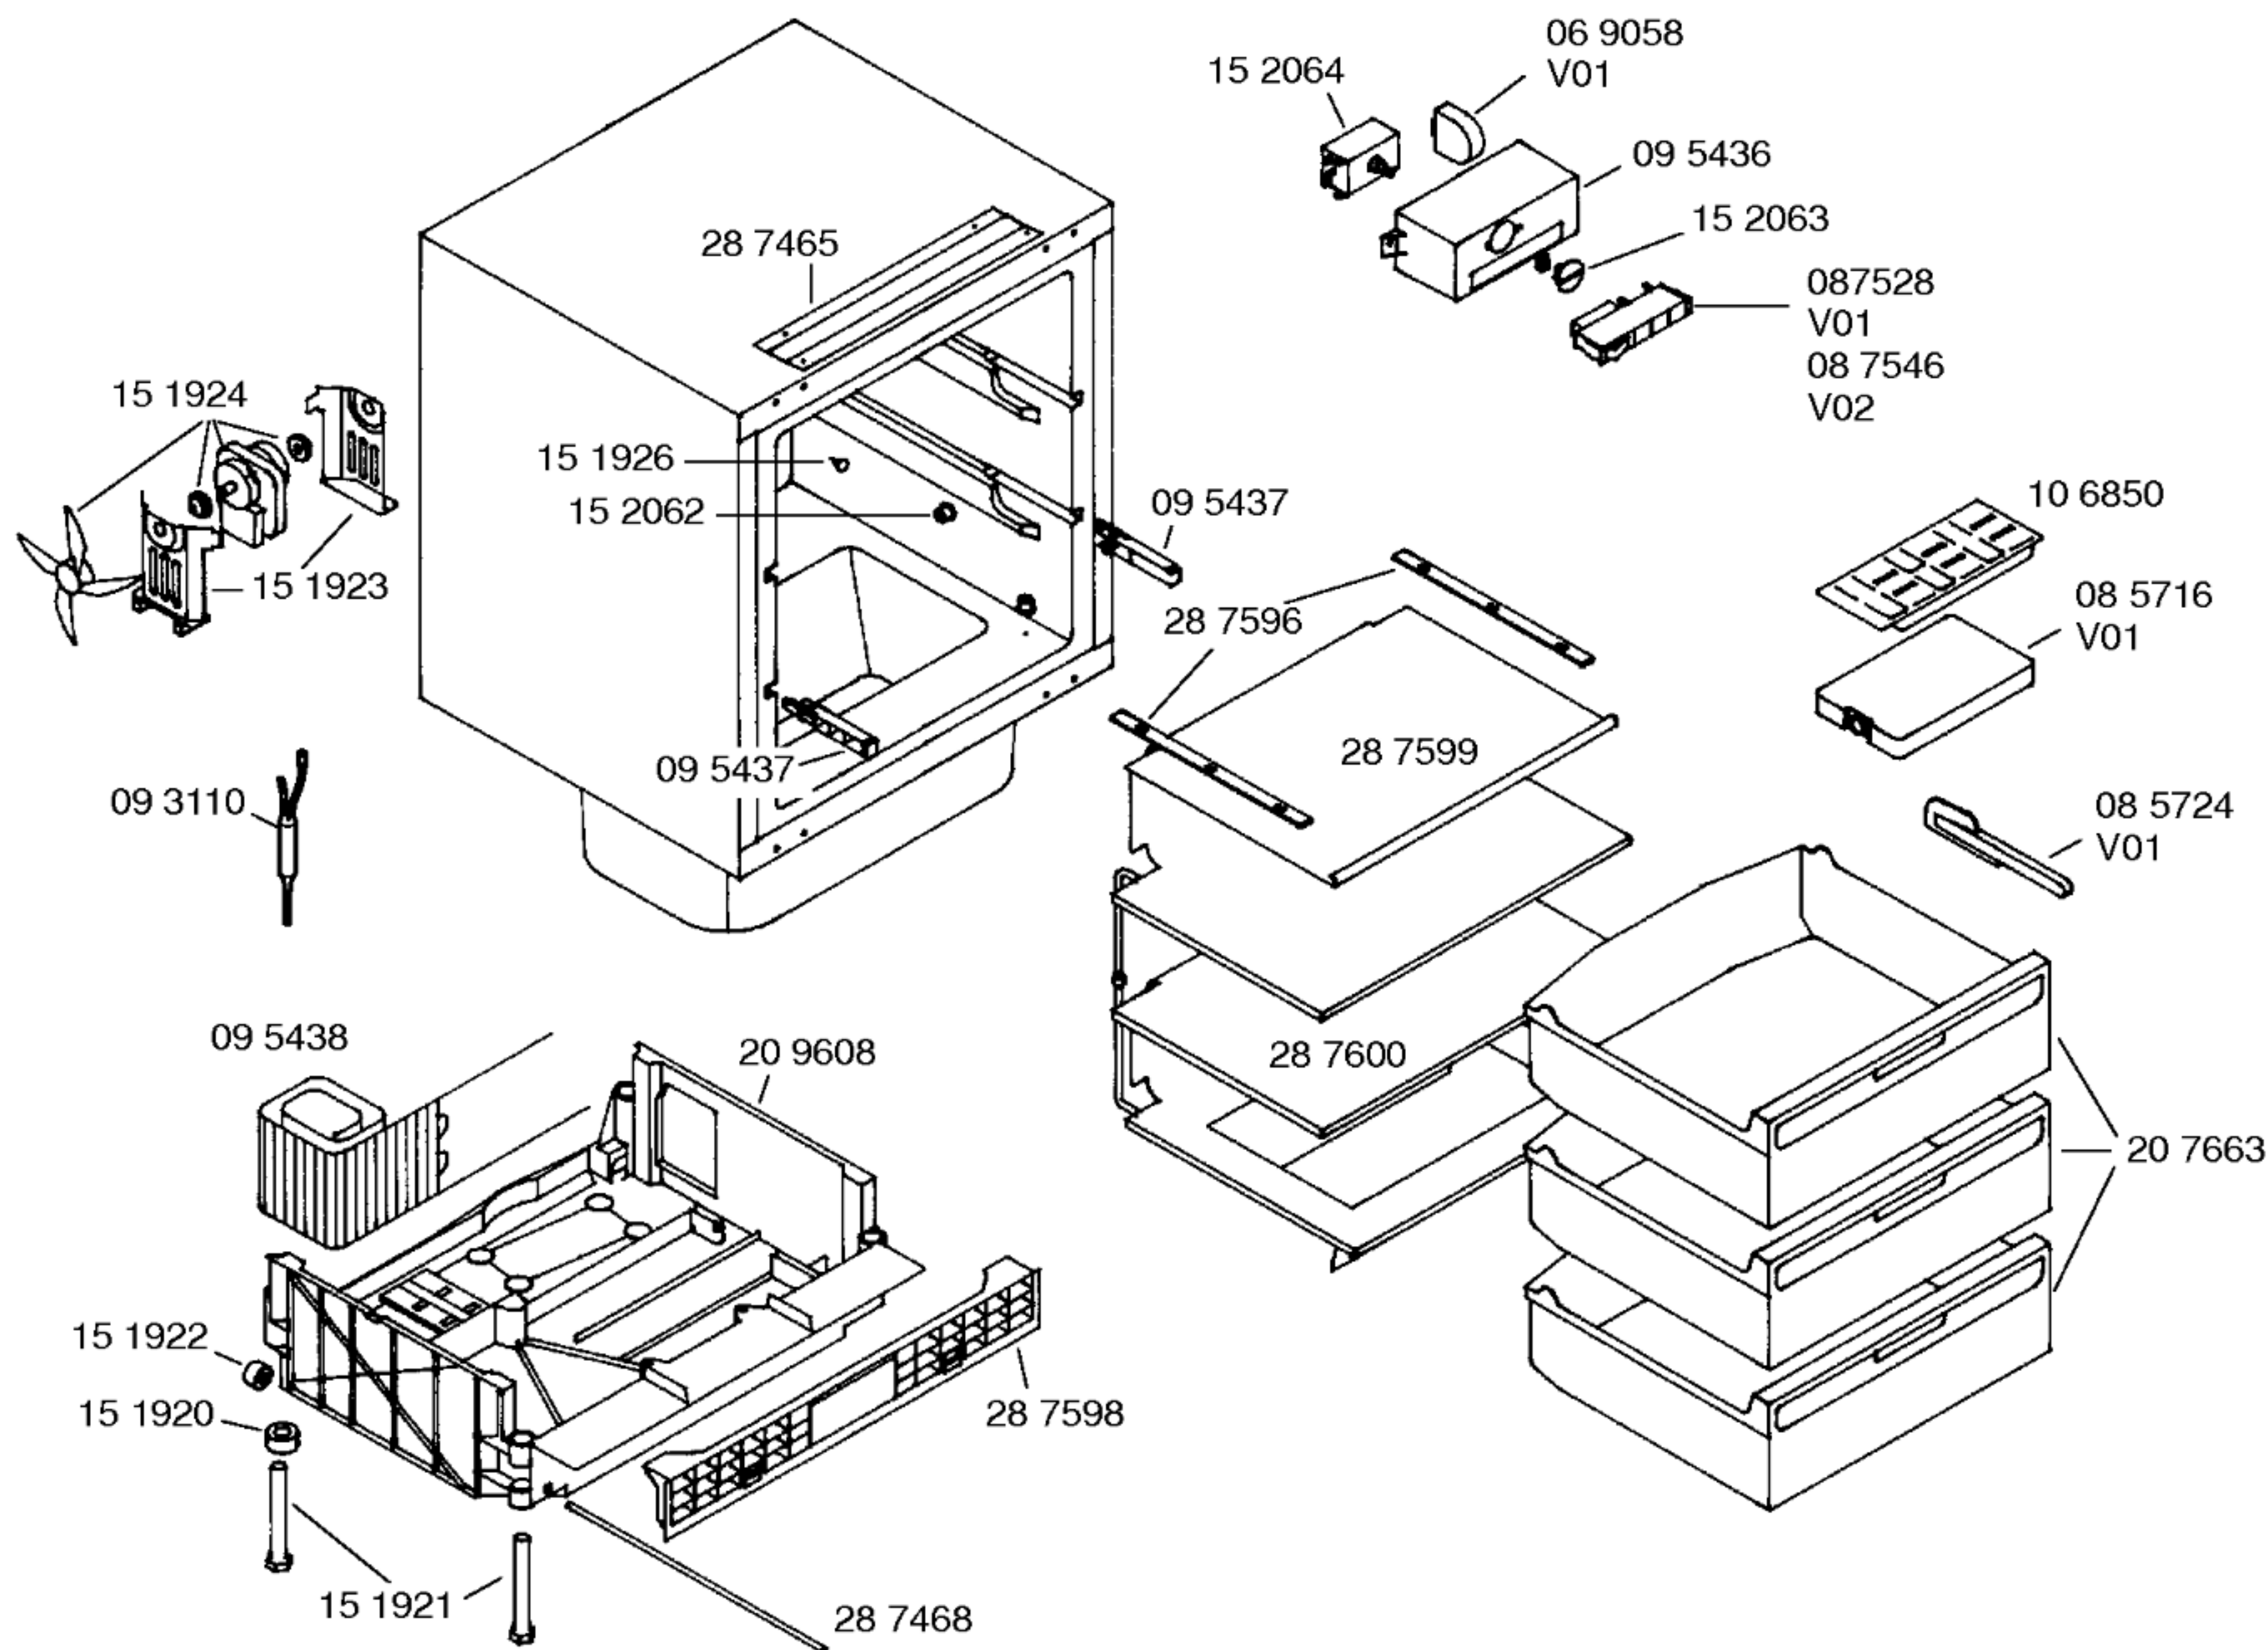

Gebrauchsanweisung
51 7447
Montageanleitung
51 7414

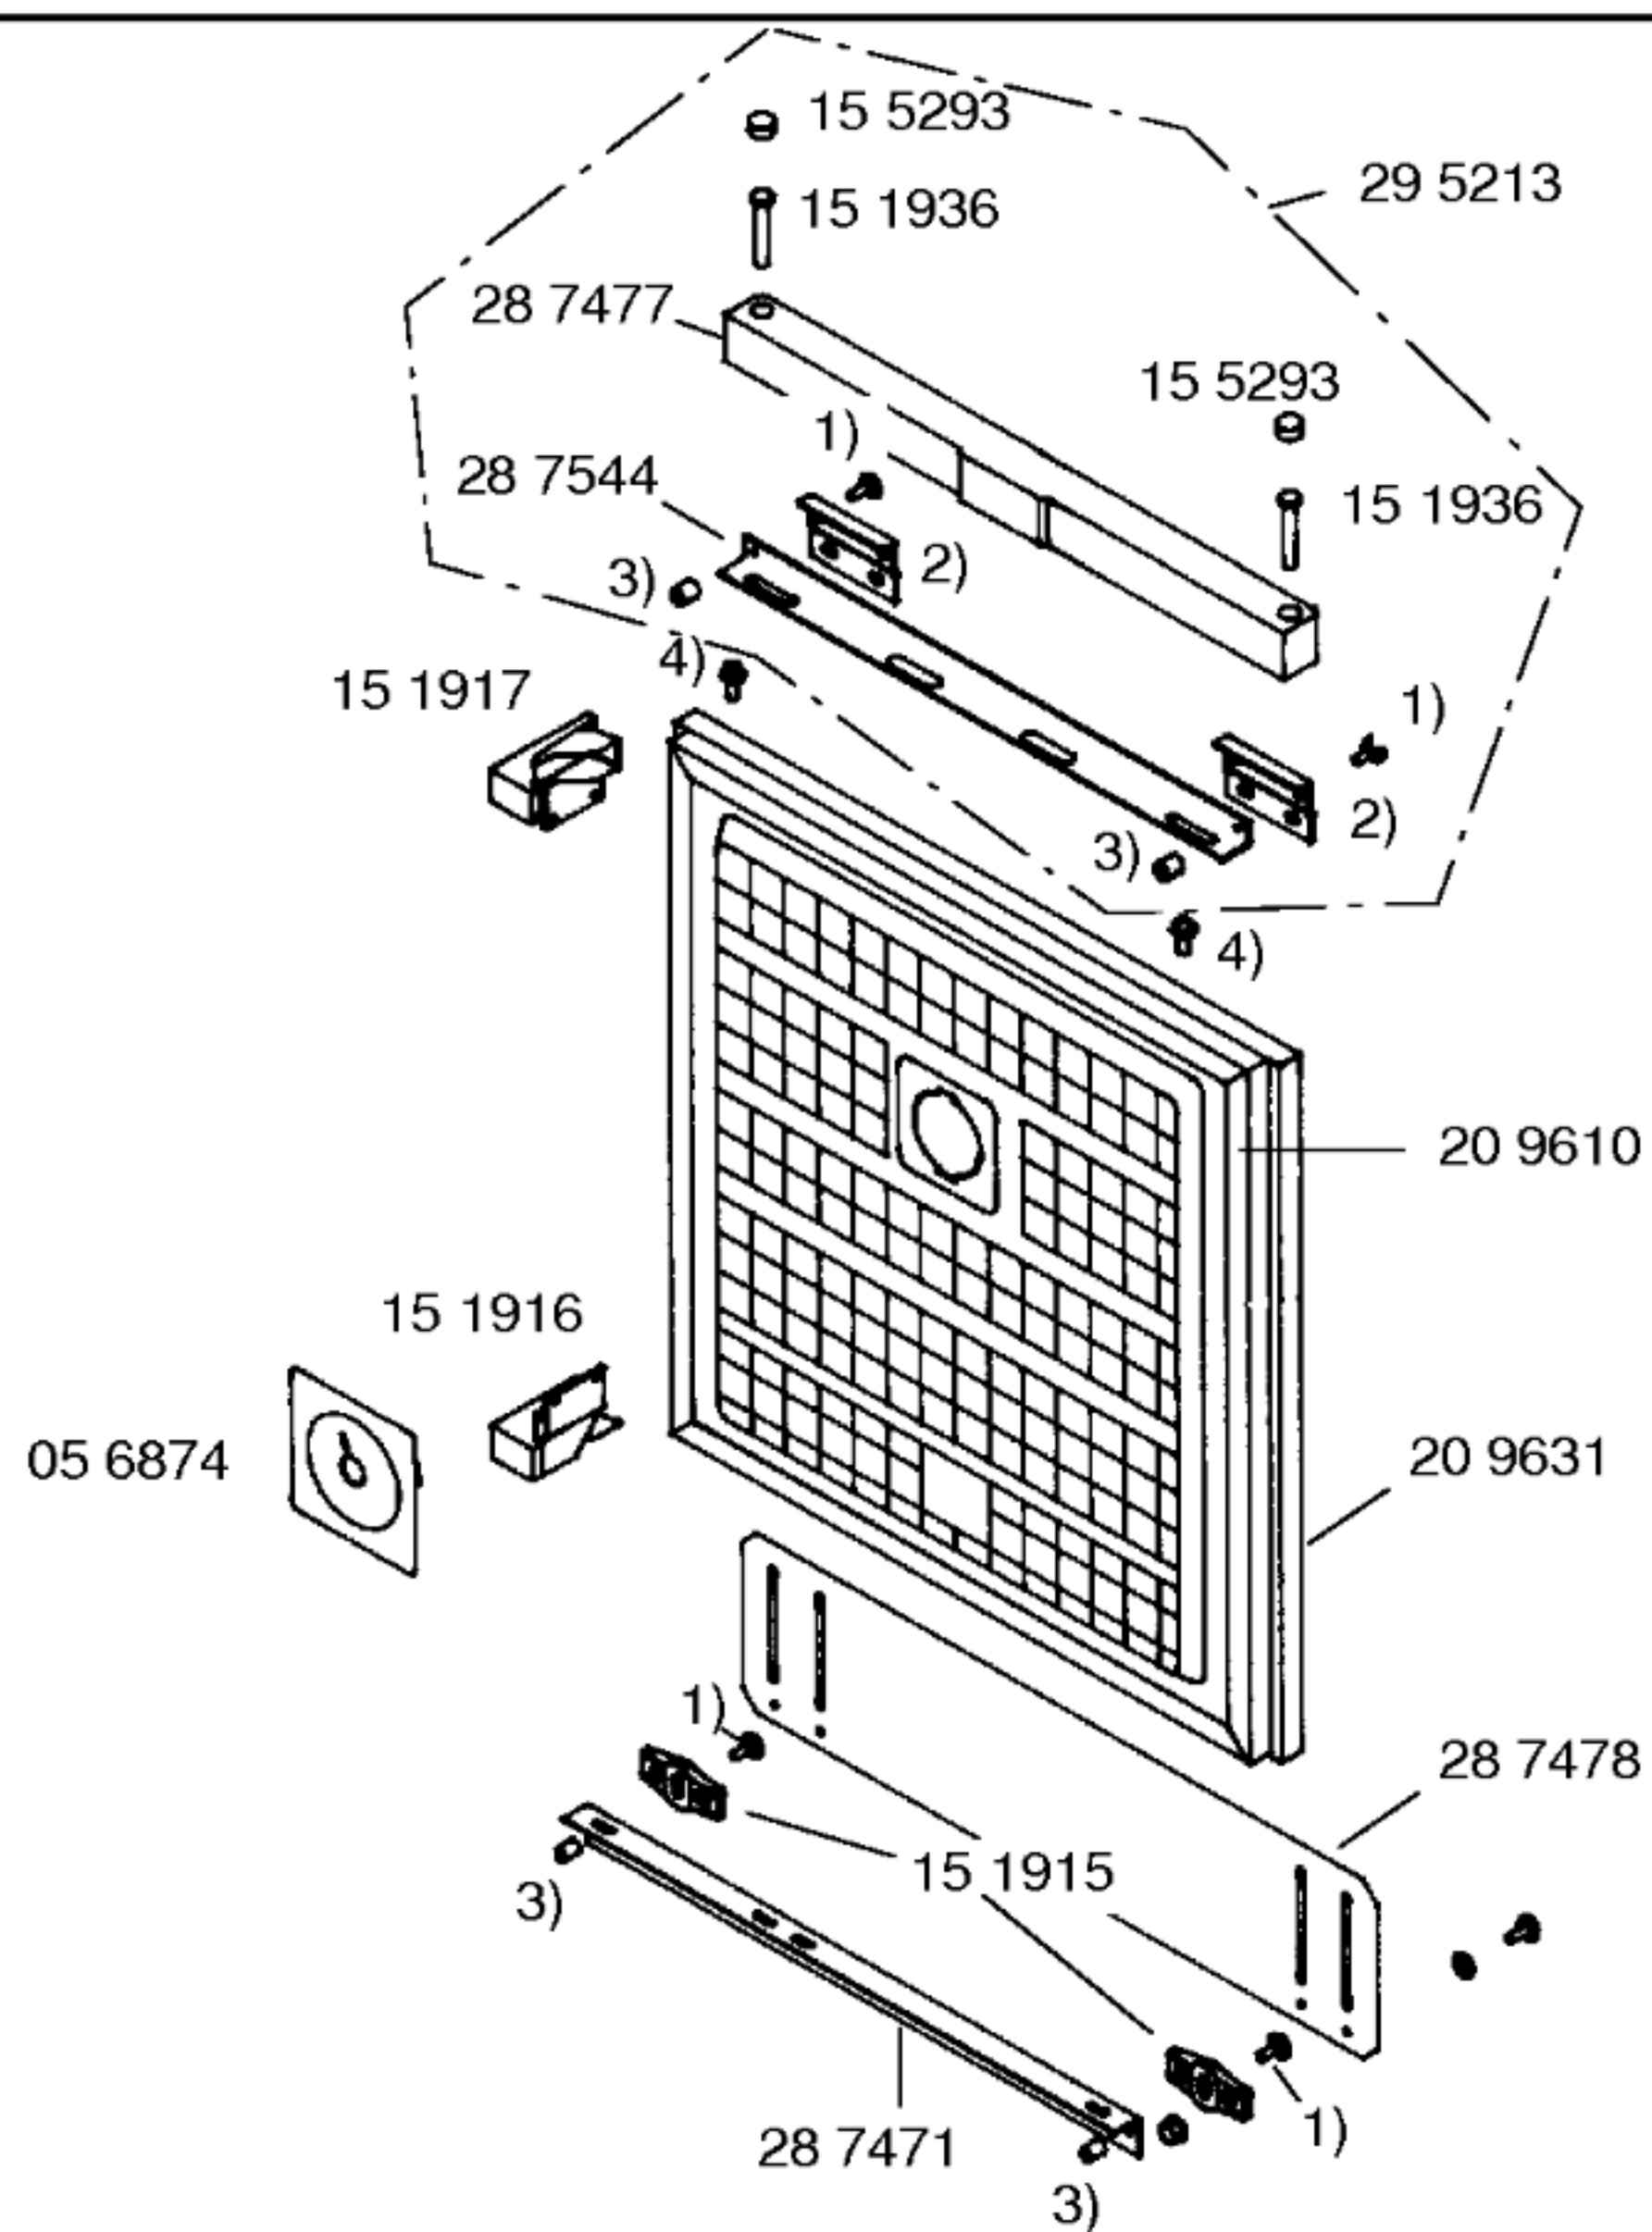

- 1) 15 1934
- 2) 15 1914
- 3) 15 1931
- 4) 15 1823

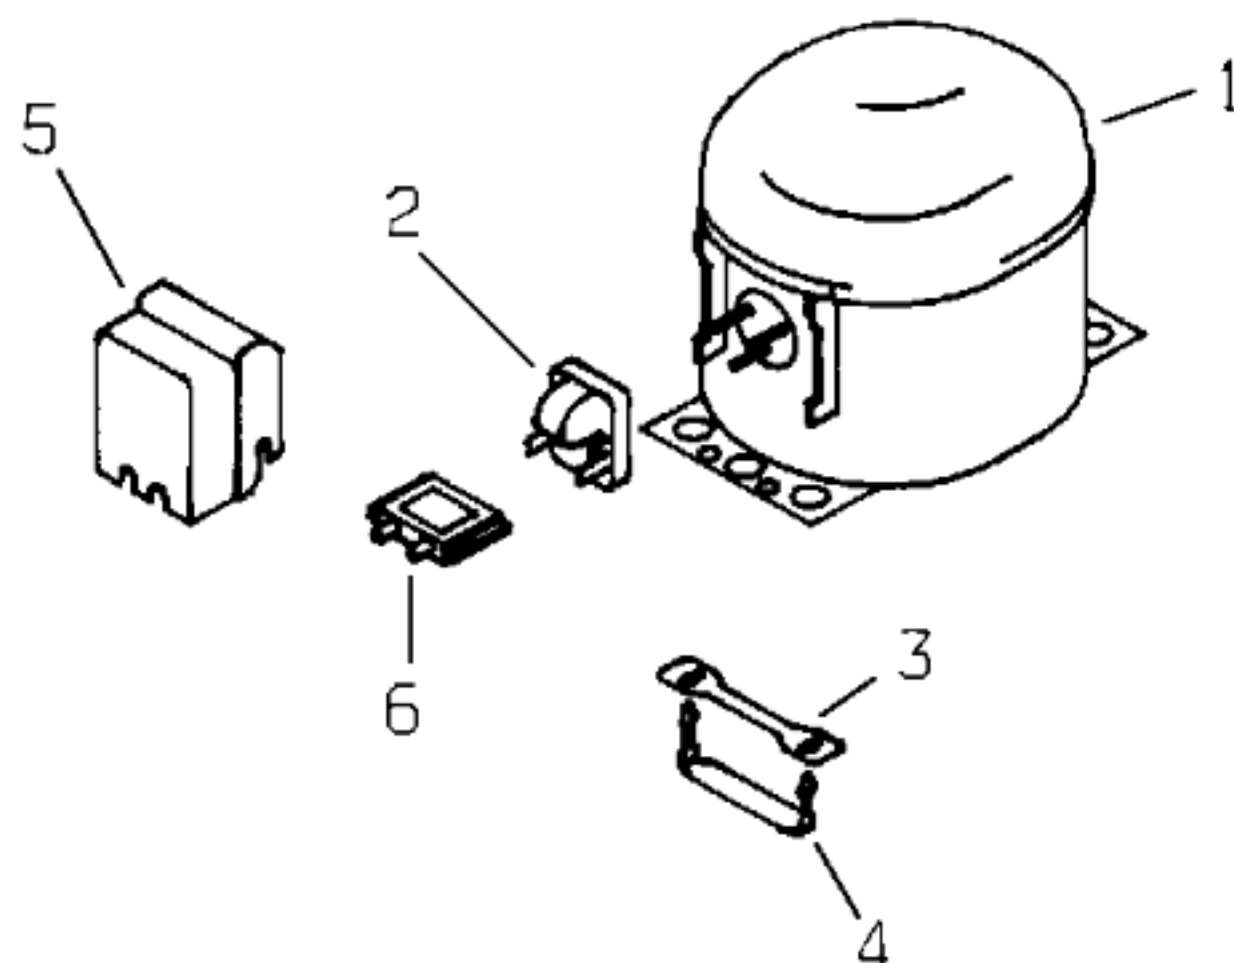

Pos.			
	Danfoss		
	TLES 5 F		
1	14 1242		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 1053		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 5 F	
Förderleistung/Delivery/Débit	l/h	915	
Anlaufstrom/Starting current/Cour de démarrage	A	8,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	18,9
	Hi/aux	Ω	15,3
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K56-1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	°C	-25
Valeurs de commutation	„aus“		-15
(„abtauen“ od.)	„alarm“		-36
			-23
Füllmenge/Fill.quantity/Charge	R134a	g	100
Anschlußwert/Conn.load/Puiss. connectée	W	70	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		