




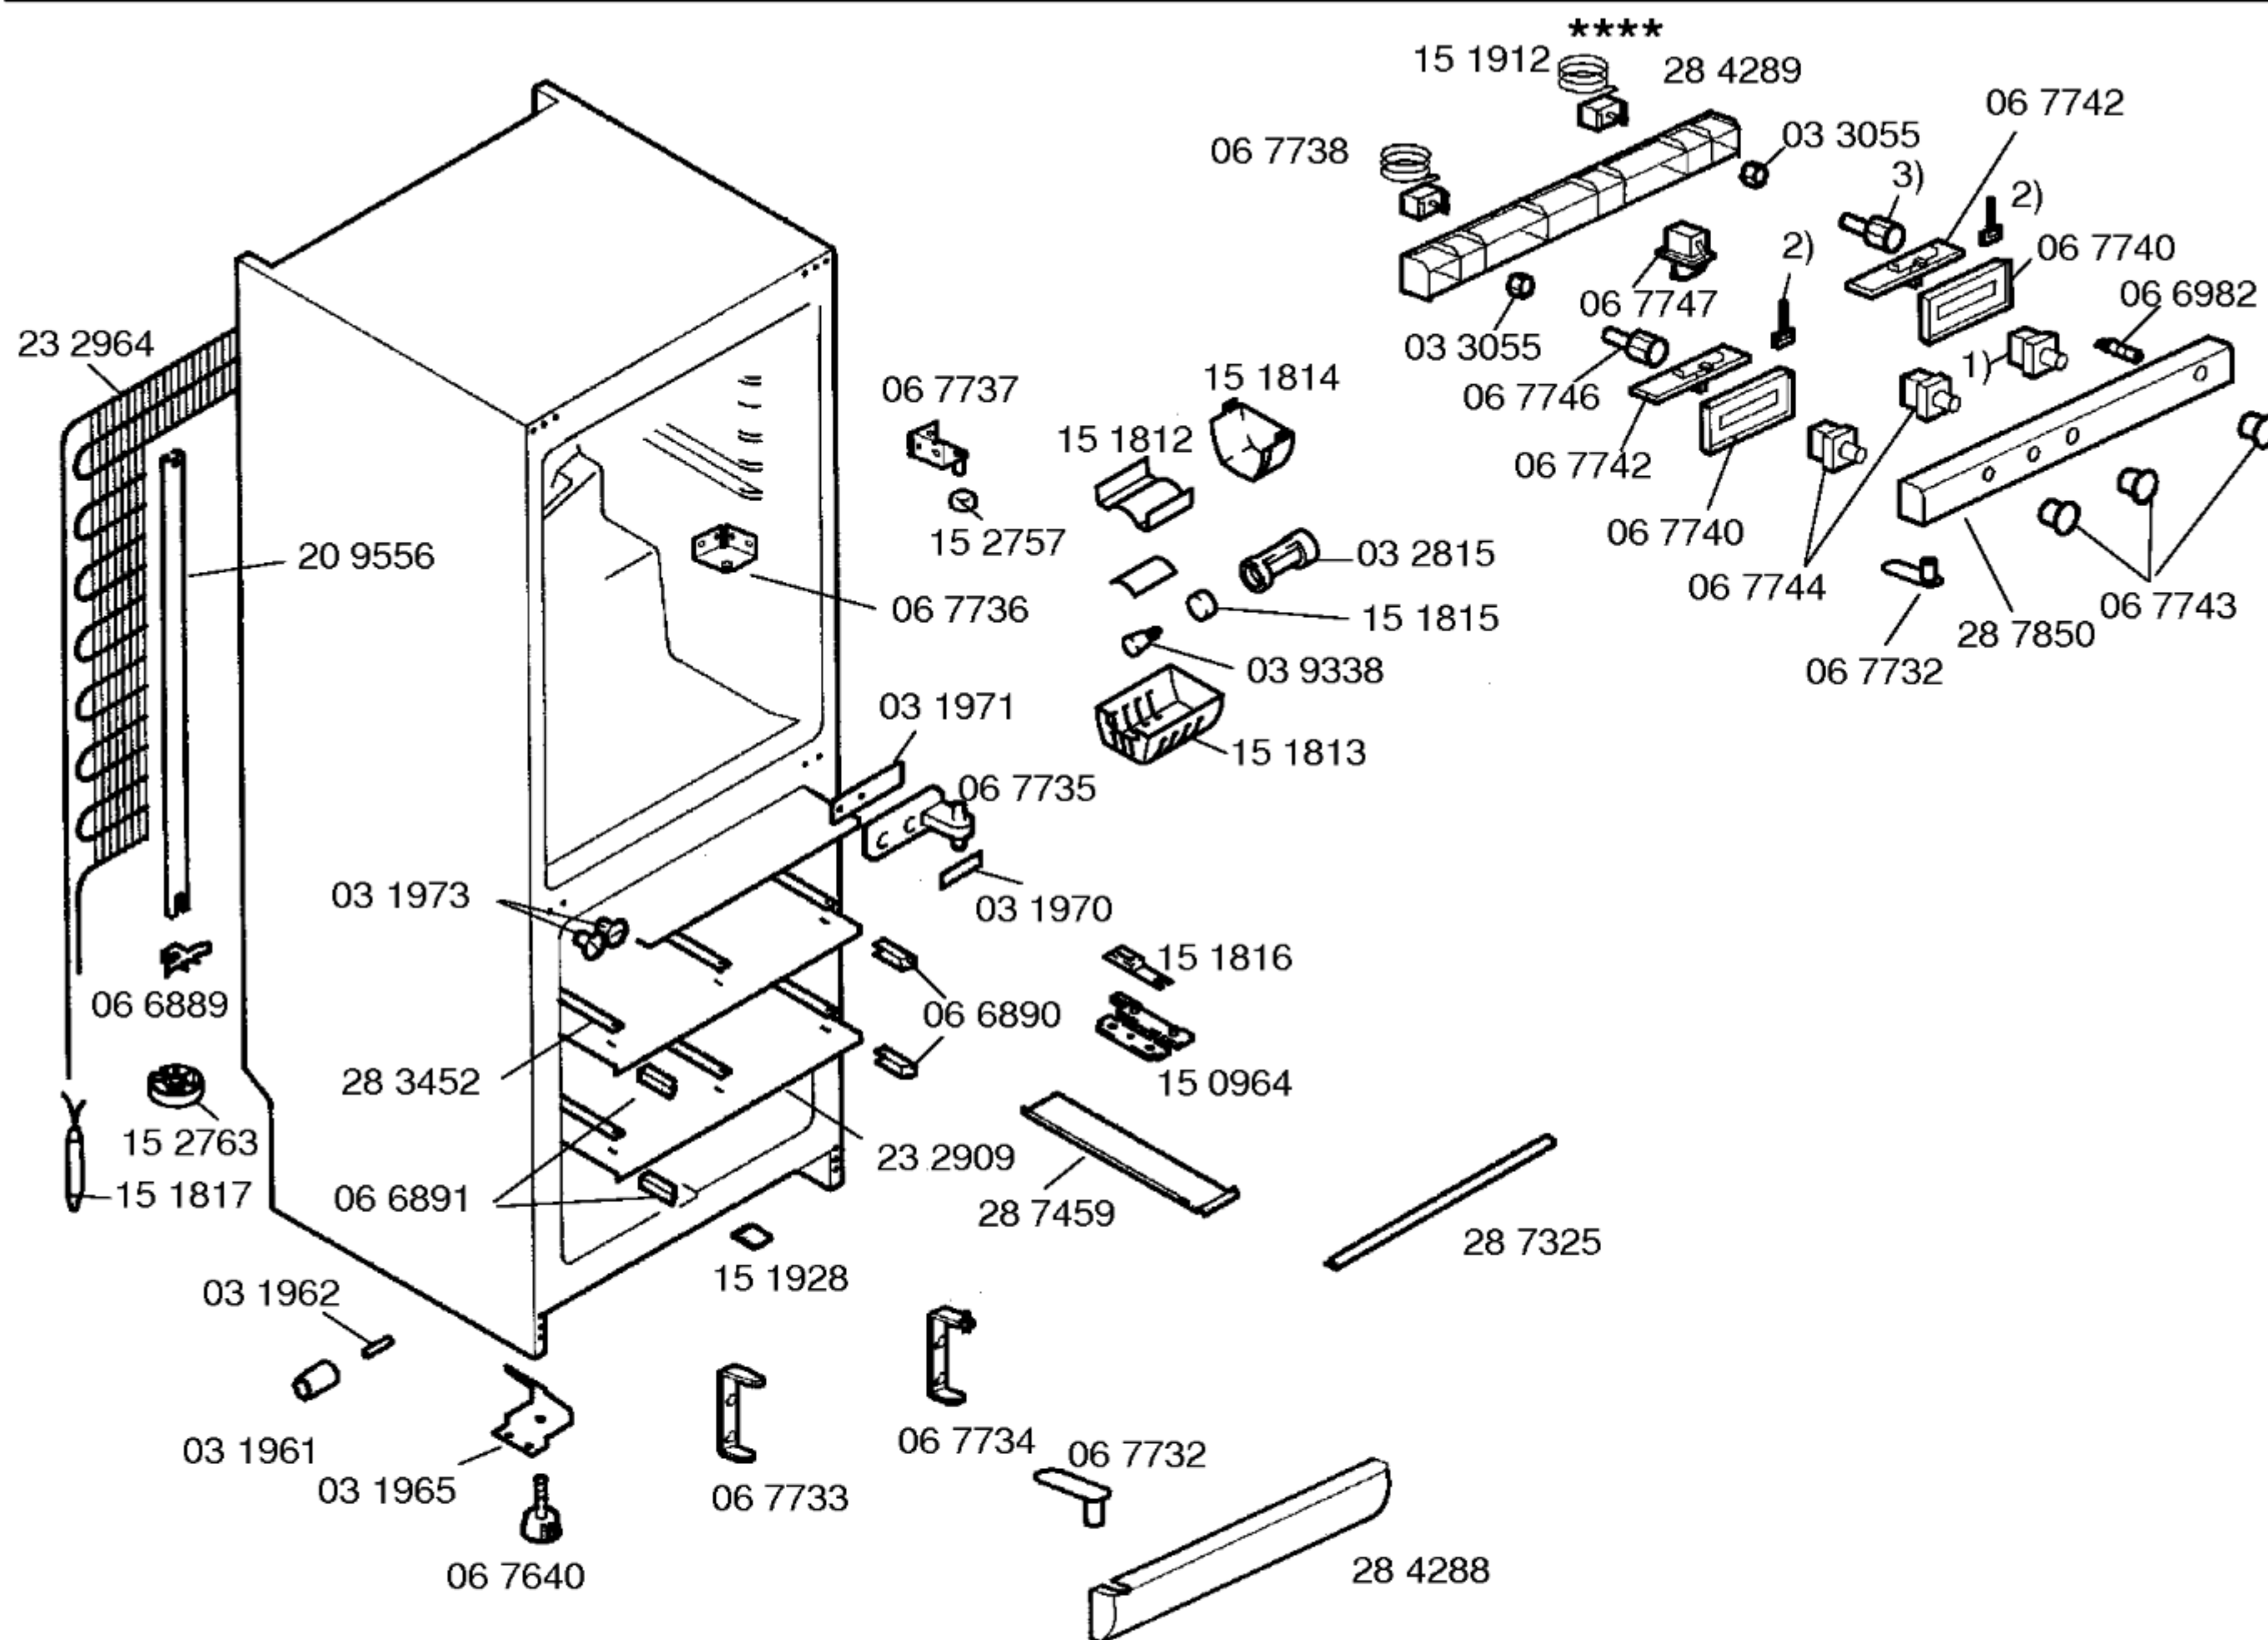

Libro de instrucciones
51 7464
(E,P,GB,F,NL,GR)
Instrucciones de montaje
51 7252
(D,GB,F,I,NL,E,P,GR)

- 1) 06 7745
- 2) 06 7748
- 3) 06 7746

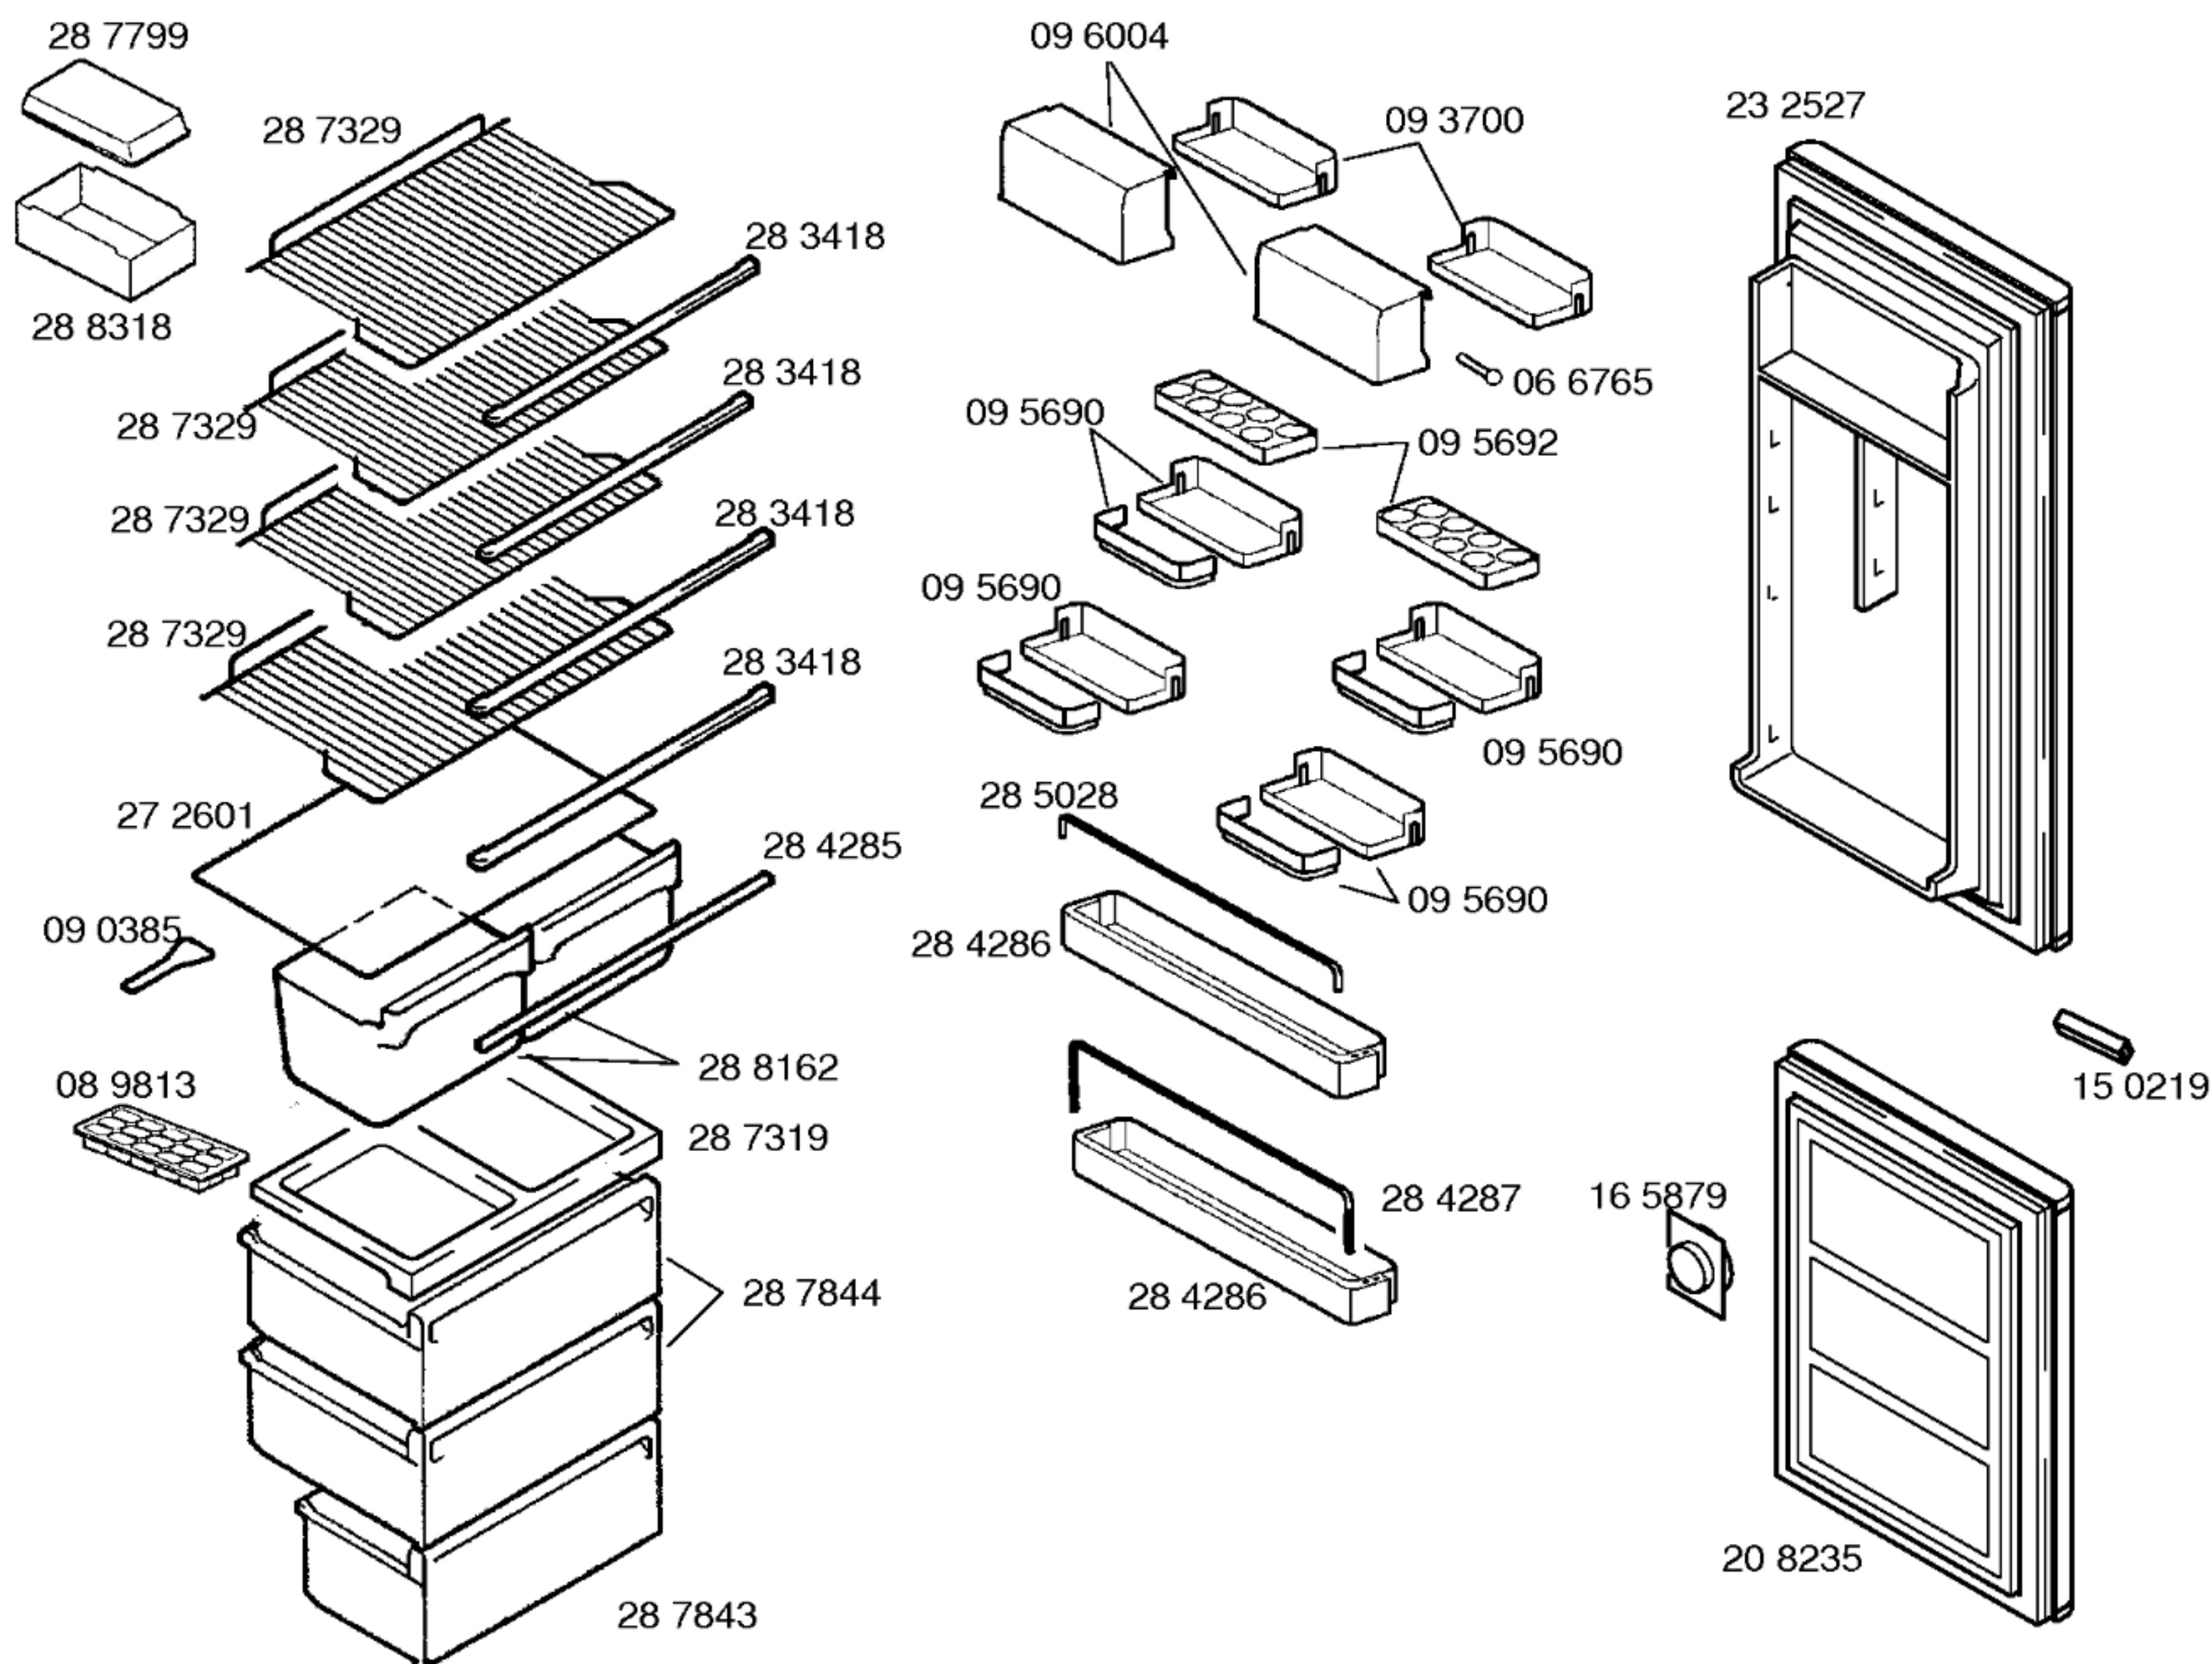

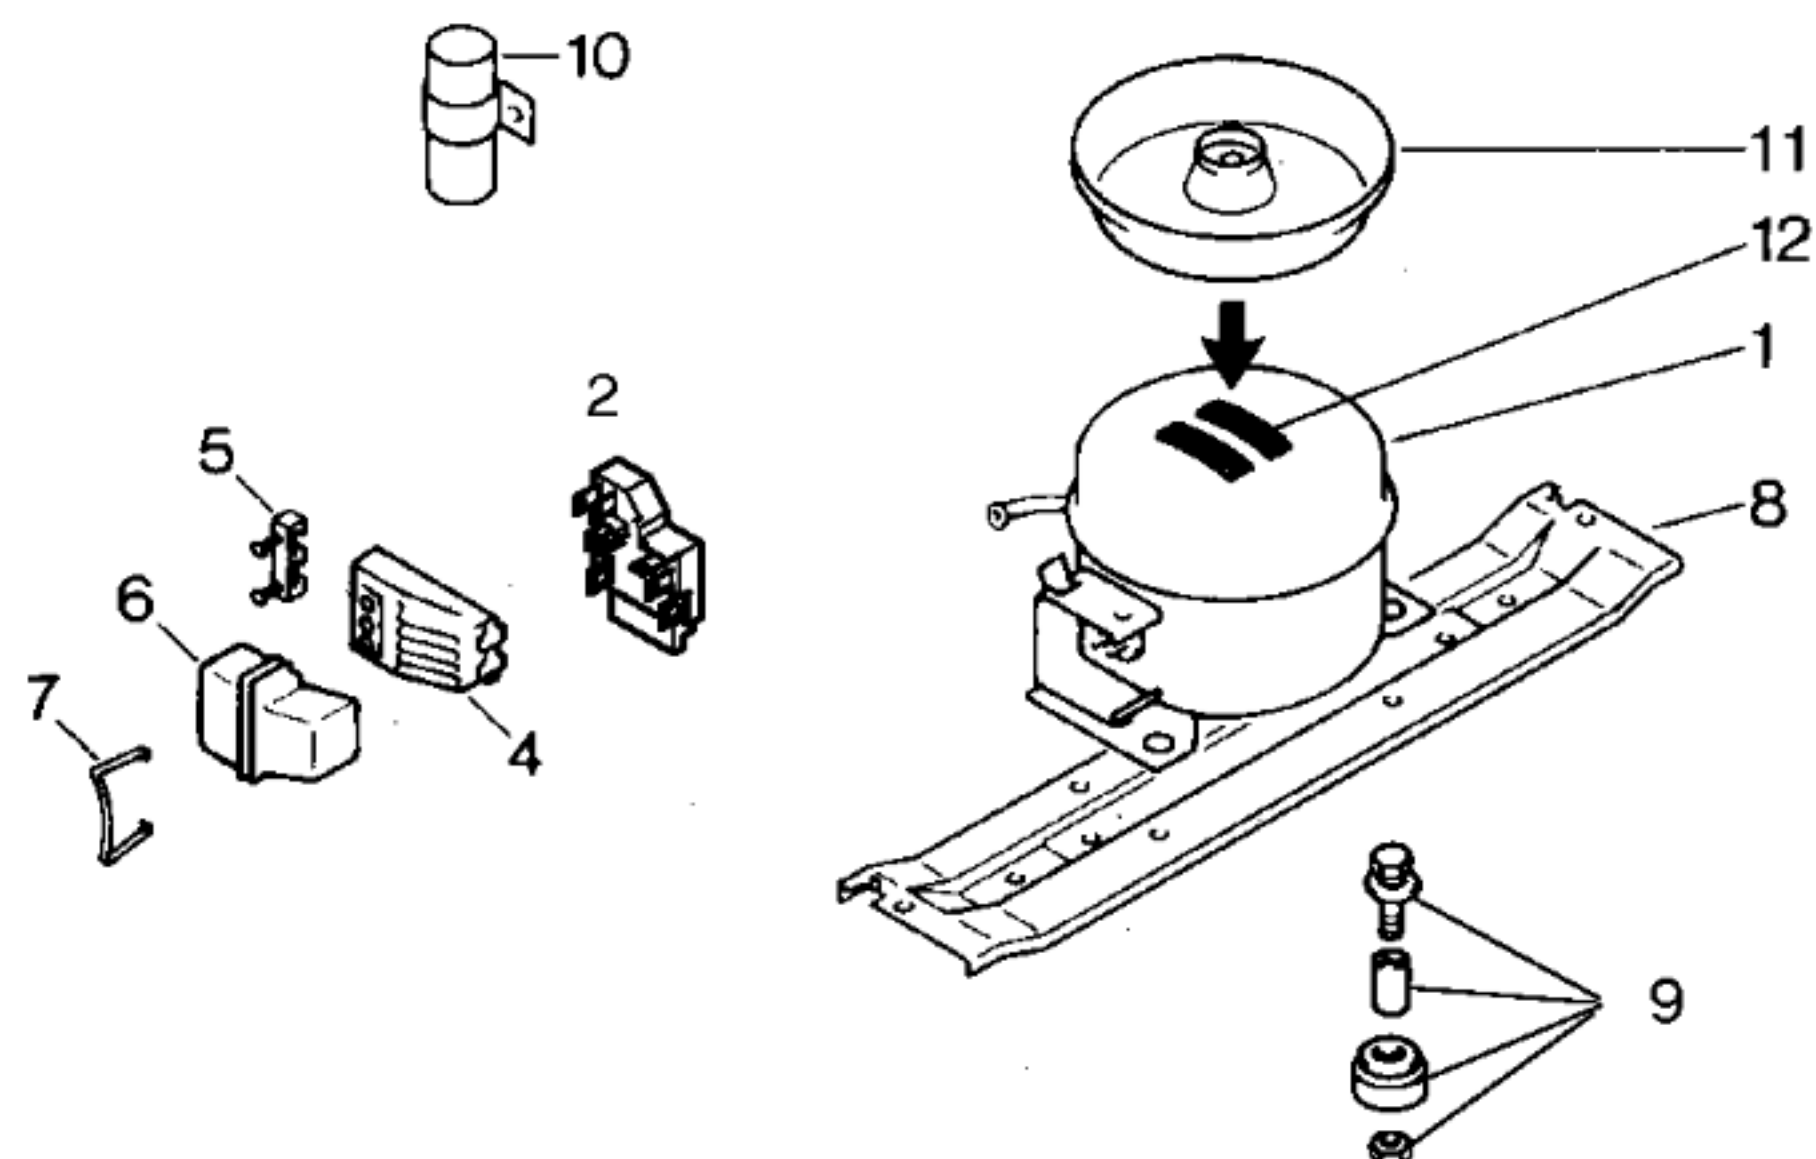

Pos.	MATSUSHITA SB43C90WA	MATSUSHITA SB48C10WA
1	14 1291	14 1290
2	15 1824	15 1824
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	05 0166
10		
11	09 5320	
12		
13		

TECHNISCHE DATEN/ TECHNICAL DATA/ DONNEES TECHNIQUES/ DATOS TÉCNICOS

Verdichter/ Compressor/ Compresseur/ Compresor	Matsushita	Matsushita
Typ/ Type/ Tipo	SB43C90WA	SB48C10WA
Förderleistung/ Delivery/ Debit/ Aspiración	l/h	
Anlaufstrom/Starting current/Cour. démarrage/Int. arranque	A	
Widerstand/ Resistance/ Resistencia. Ha/main/prin.	Ohm.	
Hi/aux.	Ohm.	

Temp. Reyler/ Thermostat/ Termostato	DANFOSS	RANCO
Typ/ Type/ Tipo	077B62	K54L1924
Reglerstellung/ Position/ Conexión	MÍN.-MÁX.	MÍN.-MÁX.
Schaltwerte/ Switching values/	..ein"/conex. °C	..aus"/descon.
Valeurs de commutation/ Desconex.	..alarm"	
(.. abtaven" od.)		

Füllmenge/ Fill. quantity/ Charge/ Carga 134a	g	50	125
---	---	----	-----

Anschlusswert/ Comm. load/ Puiss. Connect./Potenc.	W	94	108
--	---	----	-----

Heizung/ Heater/Chaufrage/ Resistenc. descongel.			
Widerstand/ Resistance/ Resistencia	Ohm.		
Leistung/ Power/ Puissance/ Potencia	W		

Ventilator/ Blower/ Ventilateur/ Ventilador			
Widerstand/ Resistance/ Resistencia del ventilador	Ohm.		

Magnetventil/ Magnetic valve/ Electrovanne/ Electrovalvula			
Widerstand/ Resistance/ Resistencia	Ohm.		
Spannung/ Voltage/ Tension/ Tensión	V		

Temp. Reyler/ Thermostat/ Termostato ambiente para ventilador refrigerador.			
---	--	--	--