


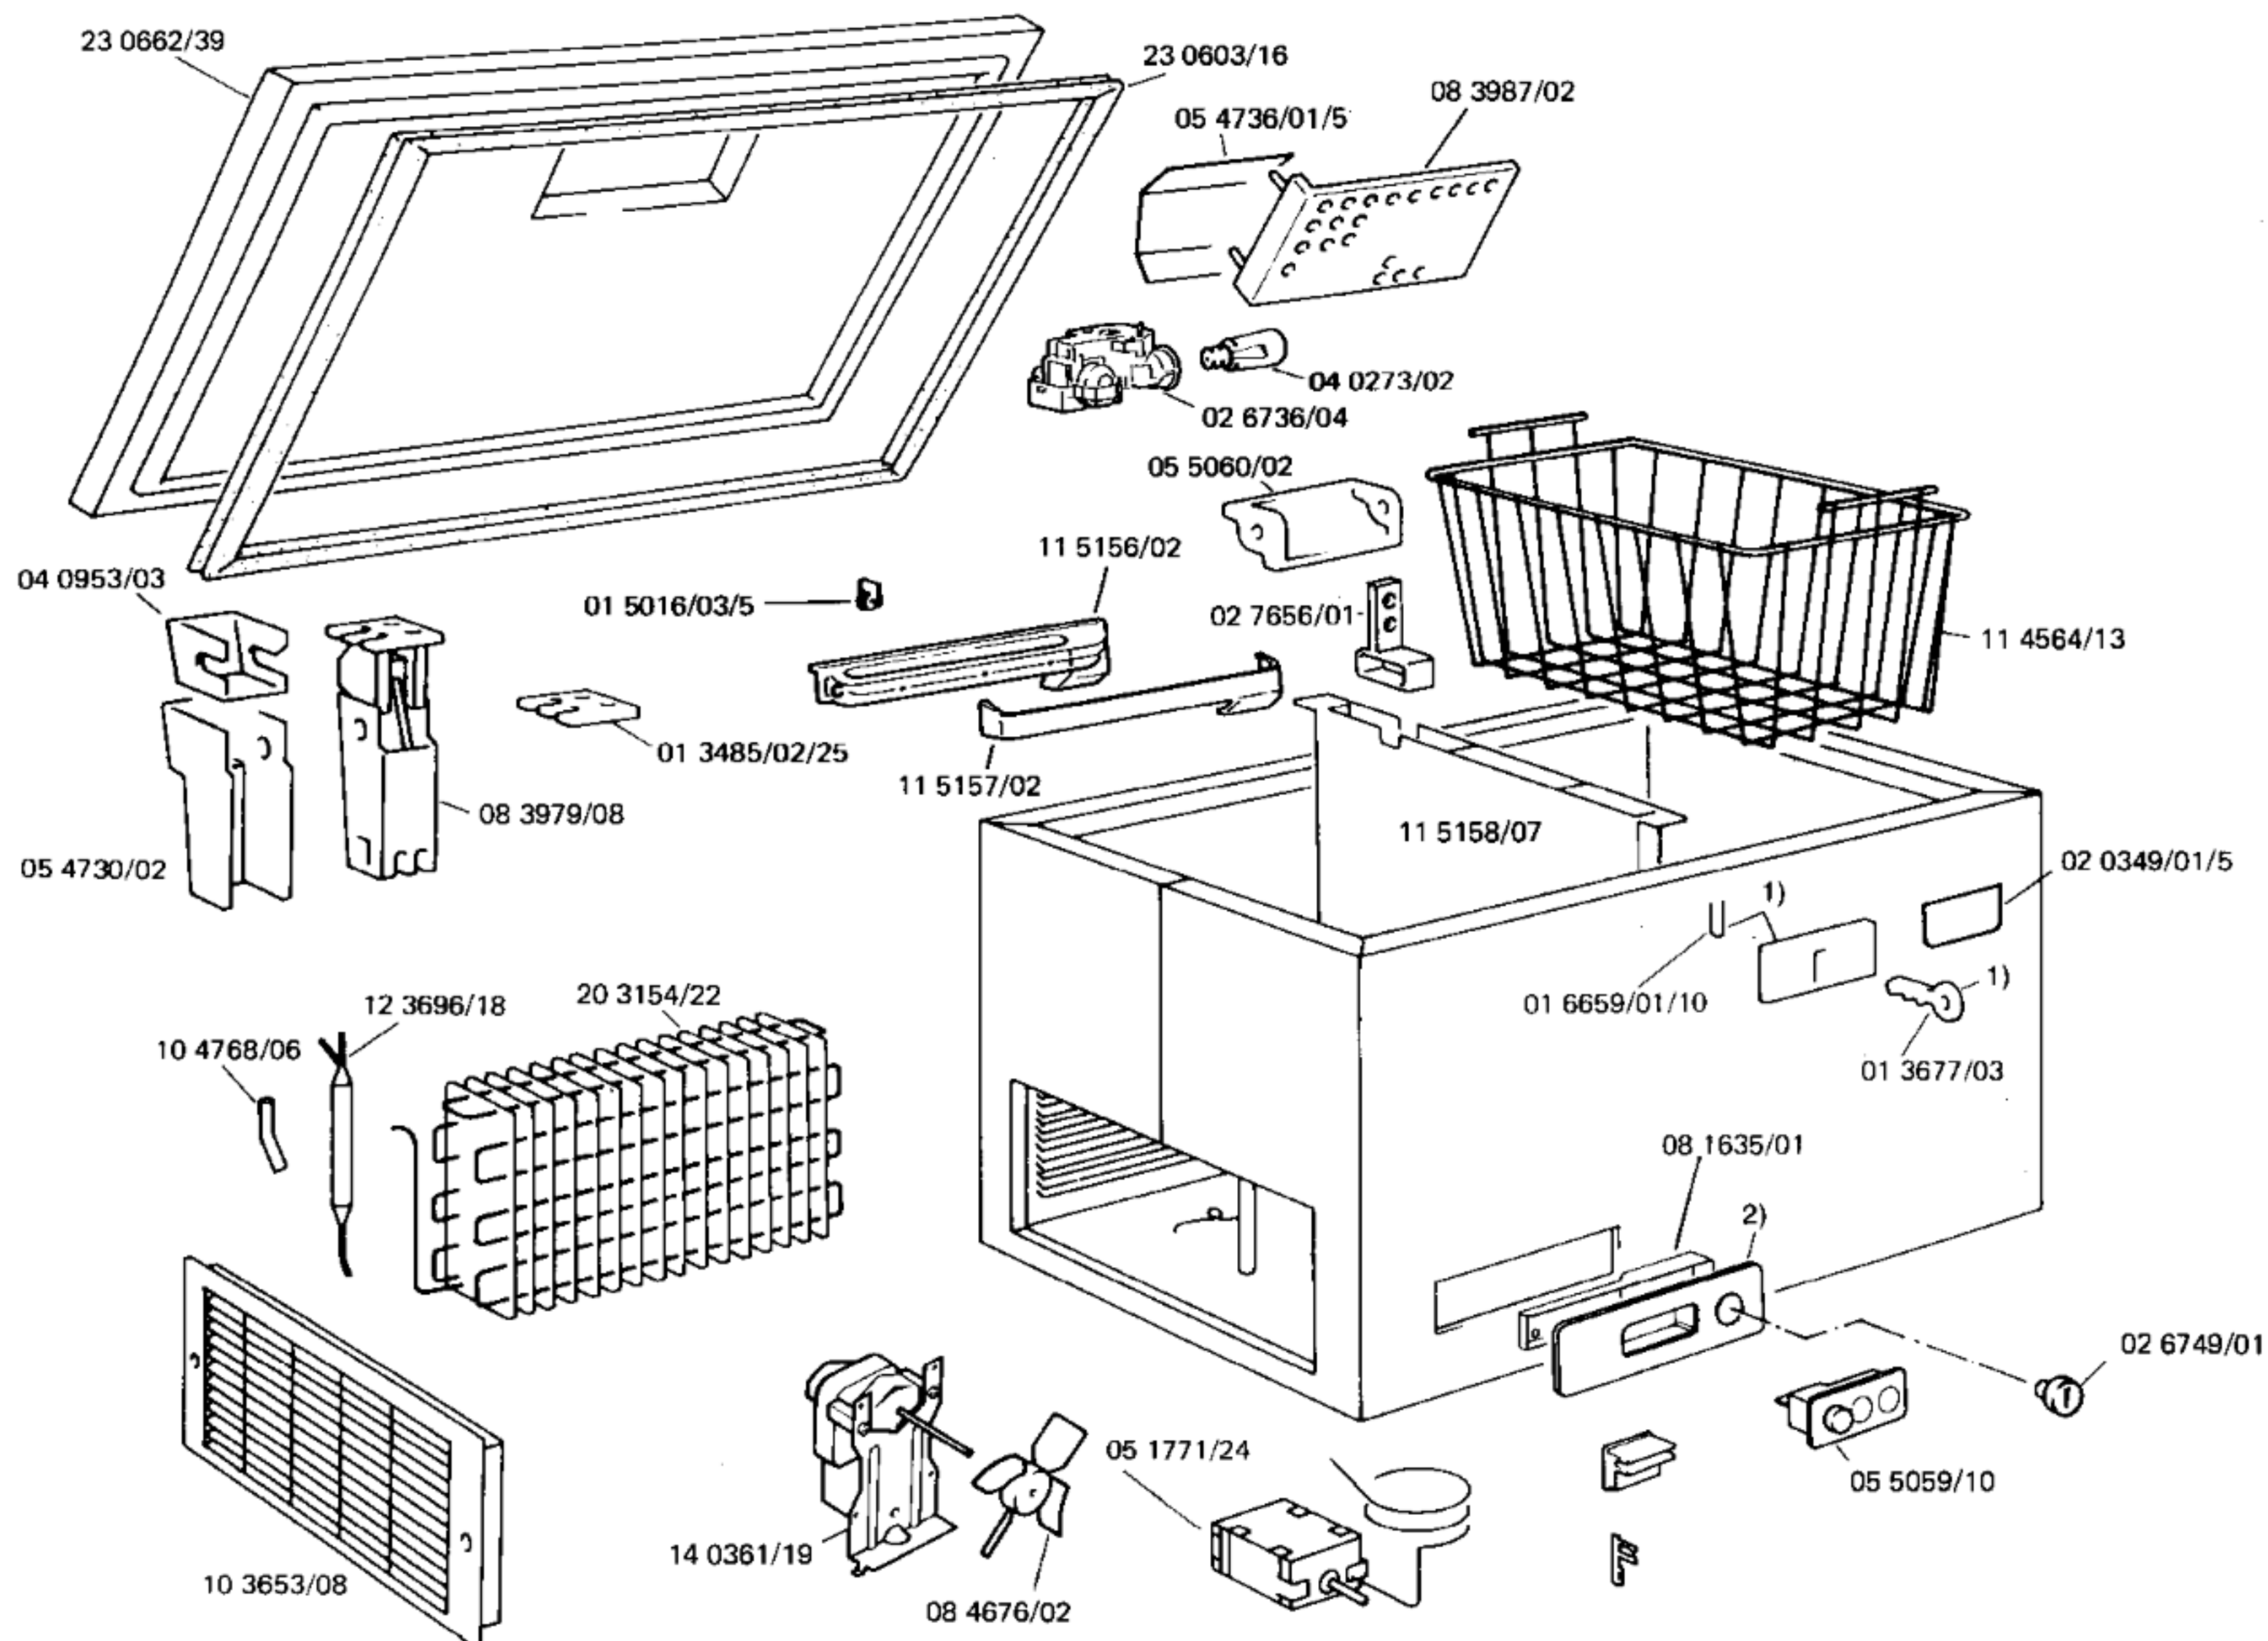


Gebrauchsanweisungen

51 1910/00
D1, CH1
(D,GB,F,I,NL)
51 1911/00
F1
(F)

1) 05 0642/08
kompl.

2) 08 4367/03
D1, CH1
08 4368/03
F1

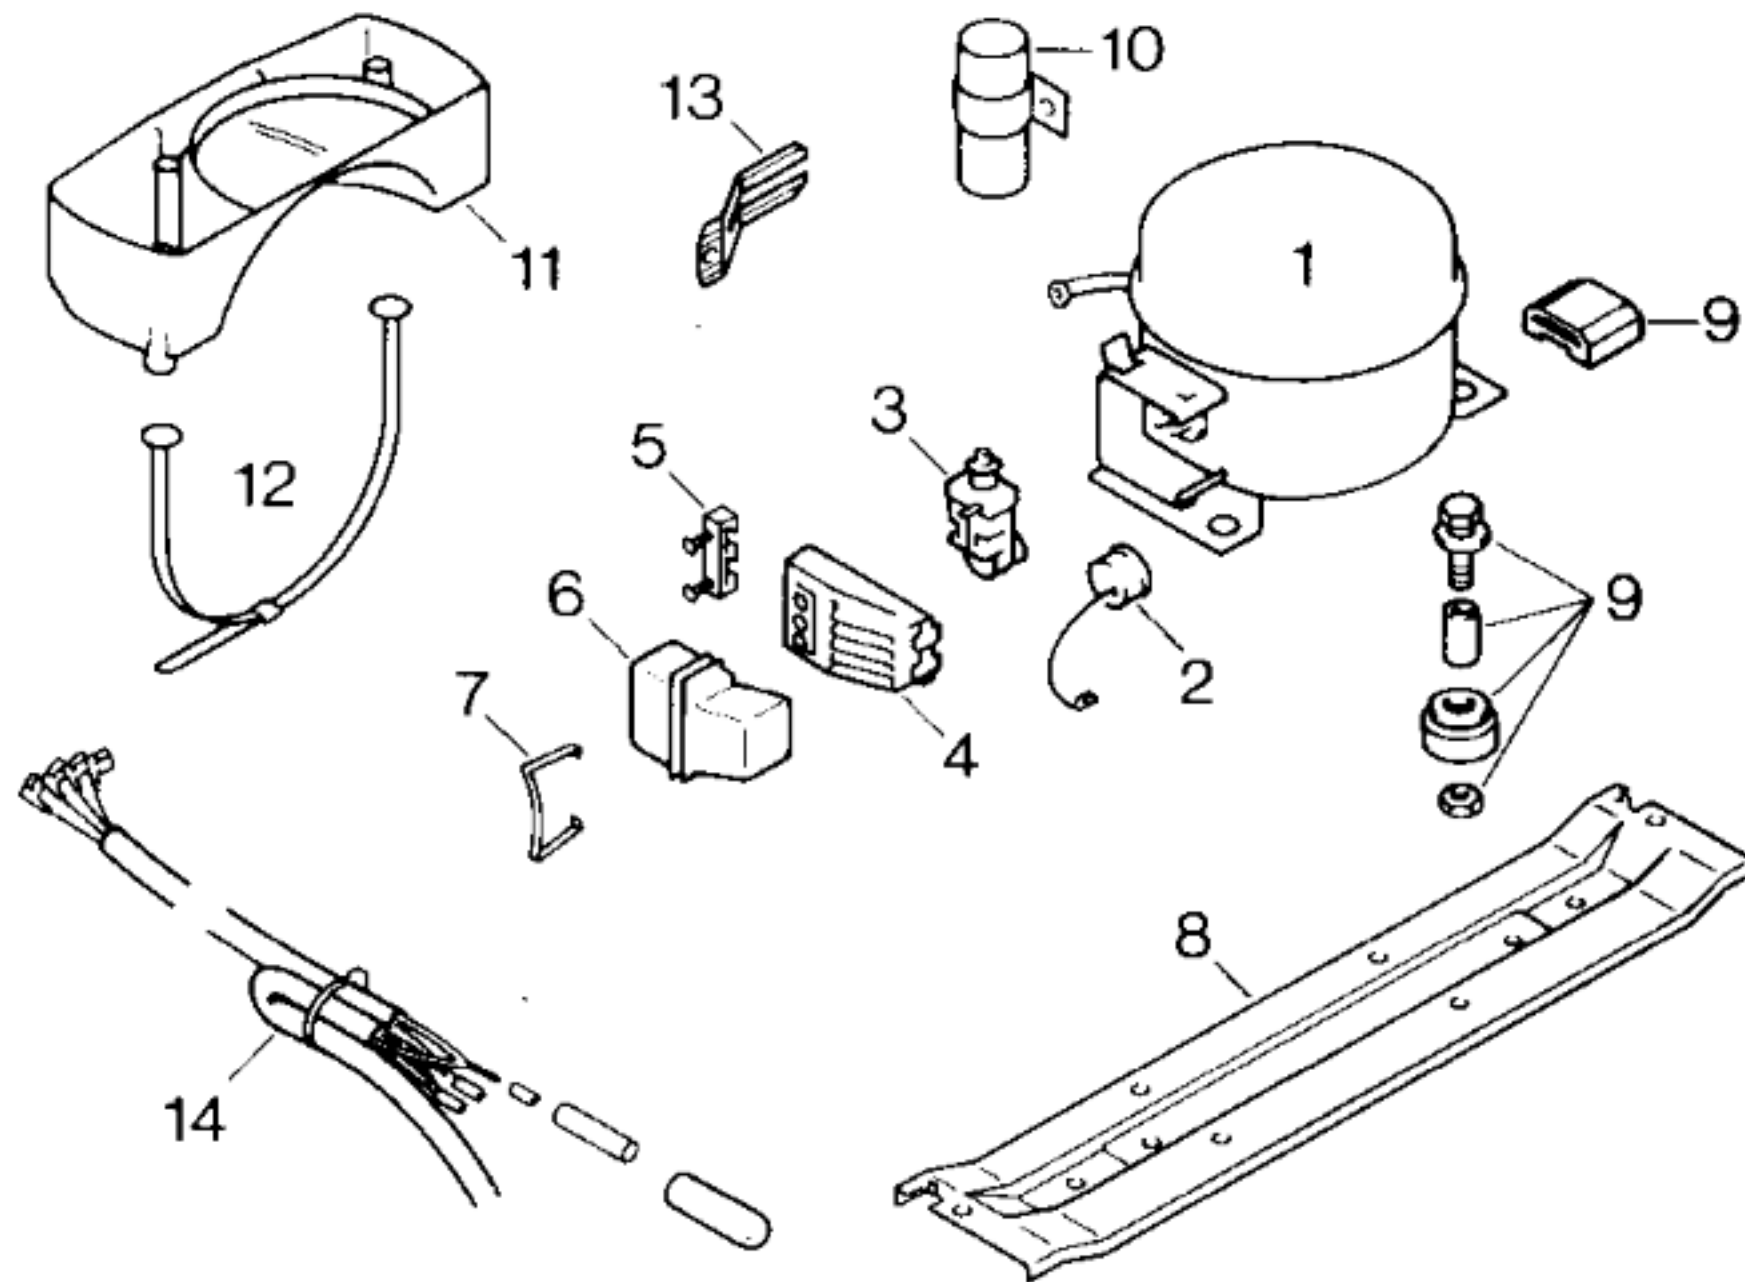

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita	Matsushita		
Typ/Type		FN 91 Q 17 G	FN 110 Q 22 G		
Förderleistung/Delivery/Débit		V 1633	V 1955		
Anlaufstrom/Starting current/Cour. de démarrage		A 11,7	12,3		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω 8,6	7,2		
		Hi/aux Ω 30,5	11,7		
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K 54			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$ - 24 - 18			
Valeurs de commutation		„aus“ - 31 - 24			
(„abtauen“ od.)		„alarm“ - 19 - 14			
Füllmenge/Fill.quantity/Charge		R12 g 200			
Anschlußwert/Conn.load/Puiss. connectée		W 190			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W 155			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	D1, CH1	F1		
	Matsushita	Matsushita		
1	14 0359/47	14 0360/47		
2				
3	02 6742/21	02 6746/21		
4				
5				
6	05 4733/03			
7	02 6731/01			
8				
9	05 0166/05			
10				
11				
12				
13				
14				