



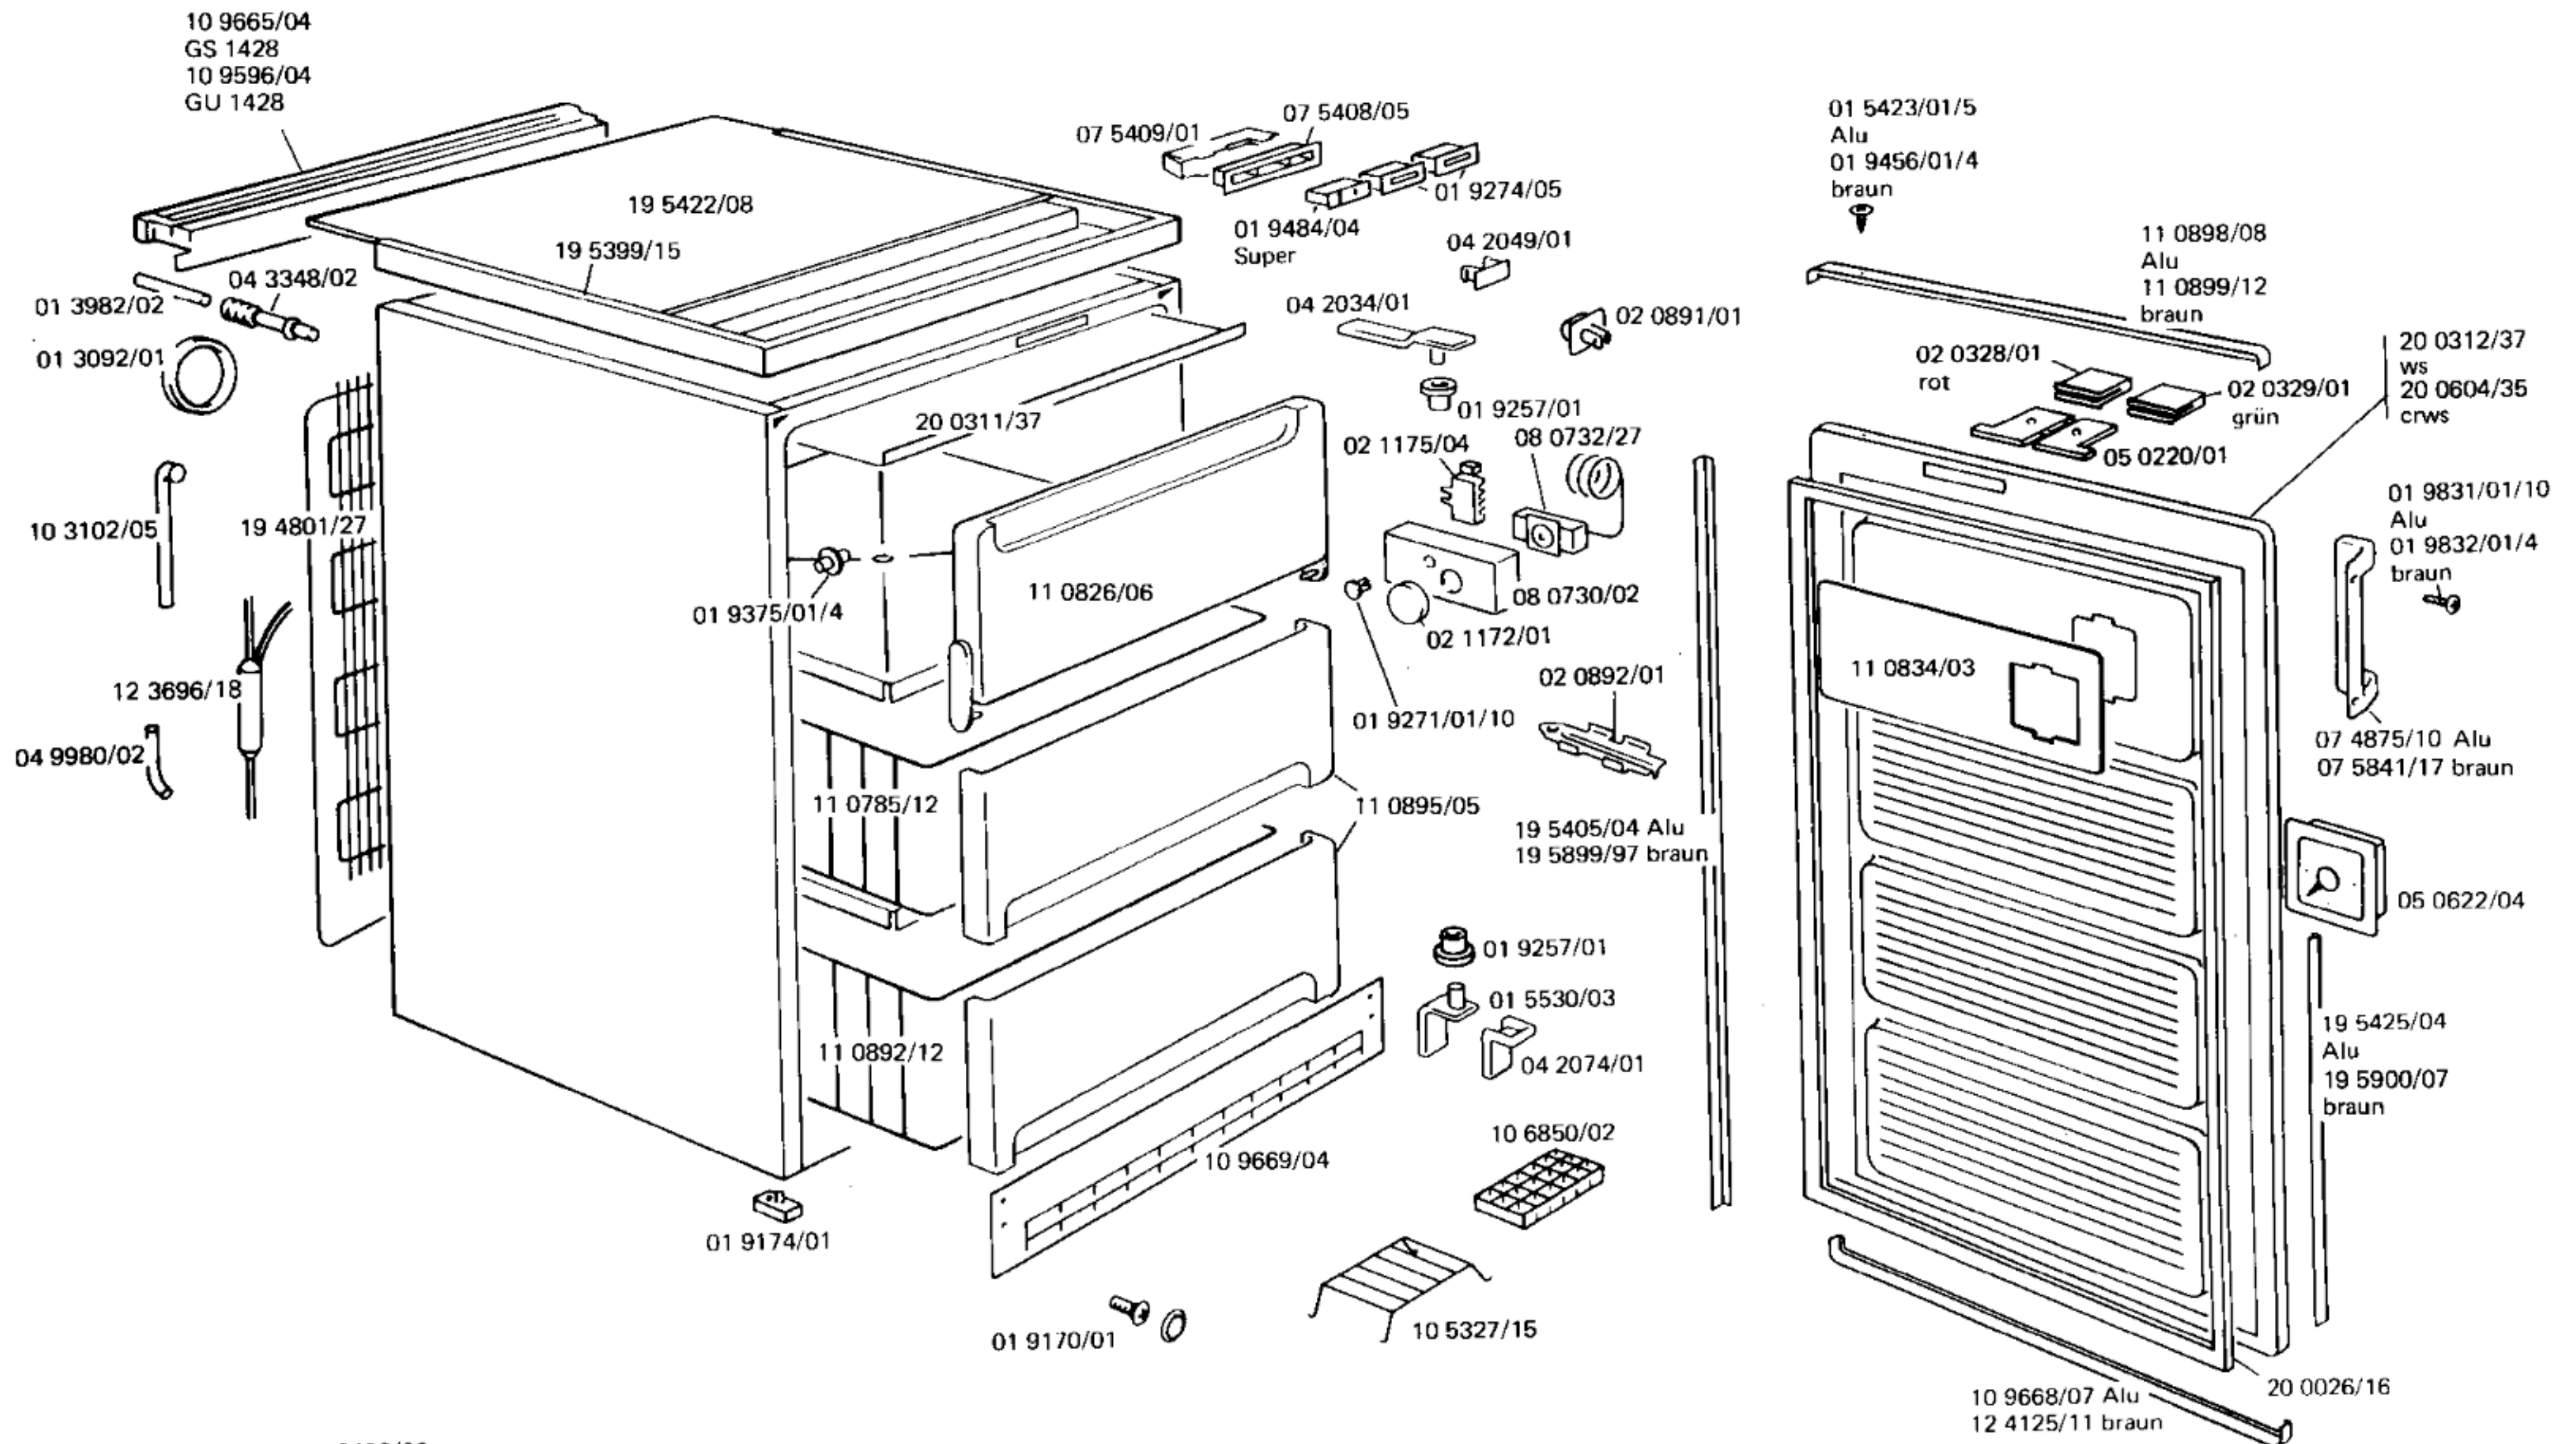

51 0492/00
Bed.-Anleitung

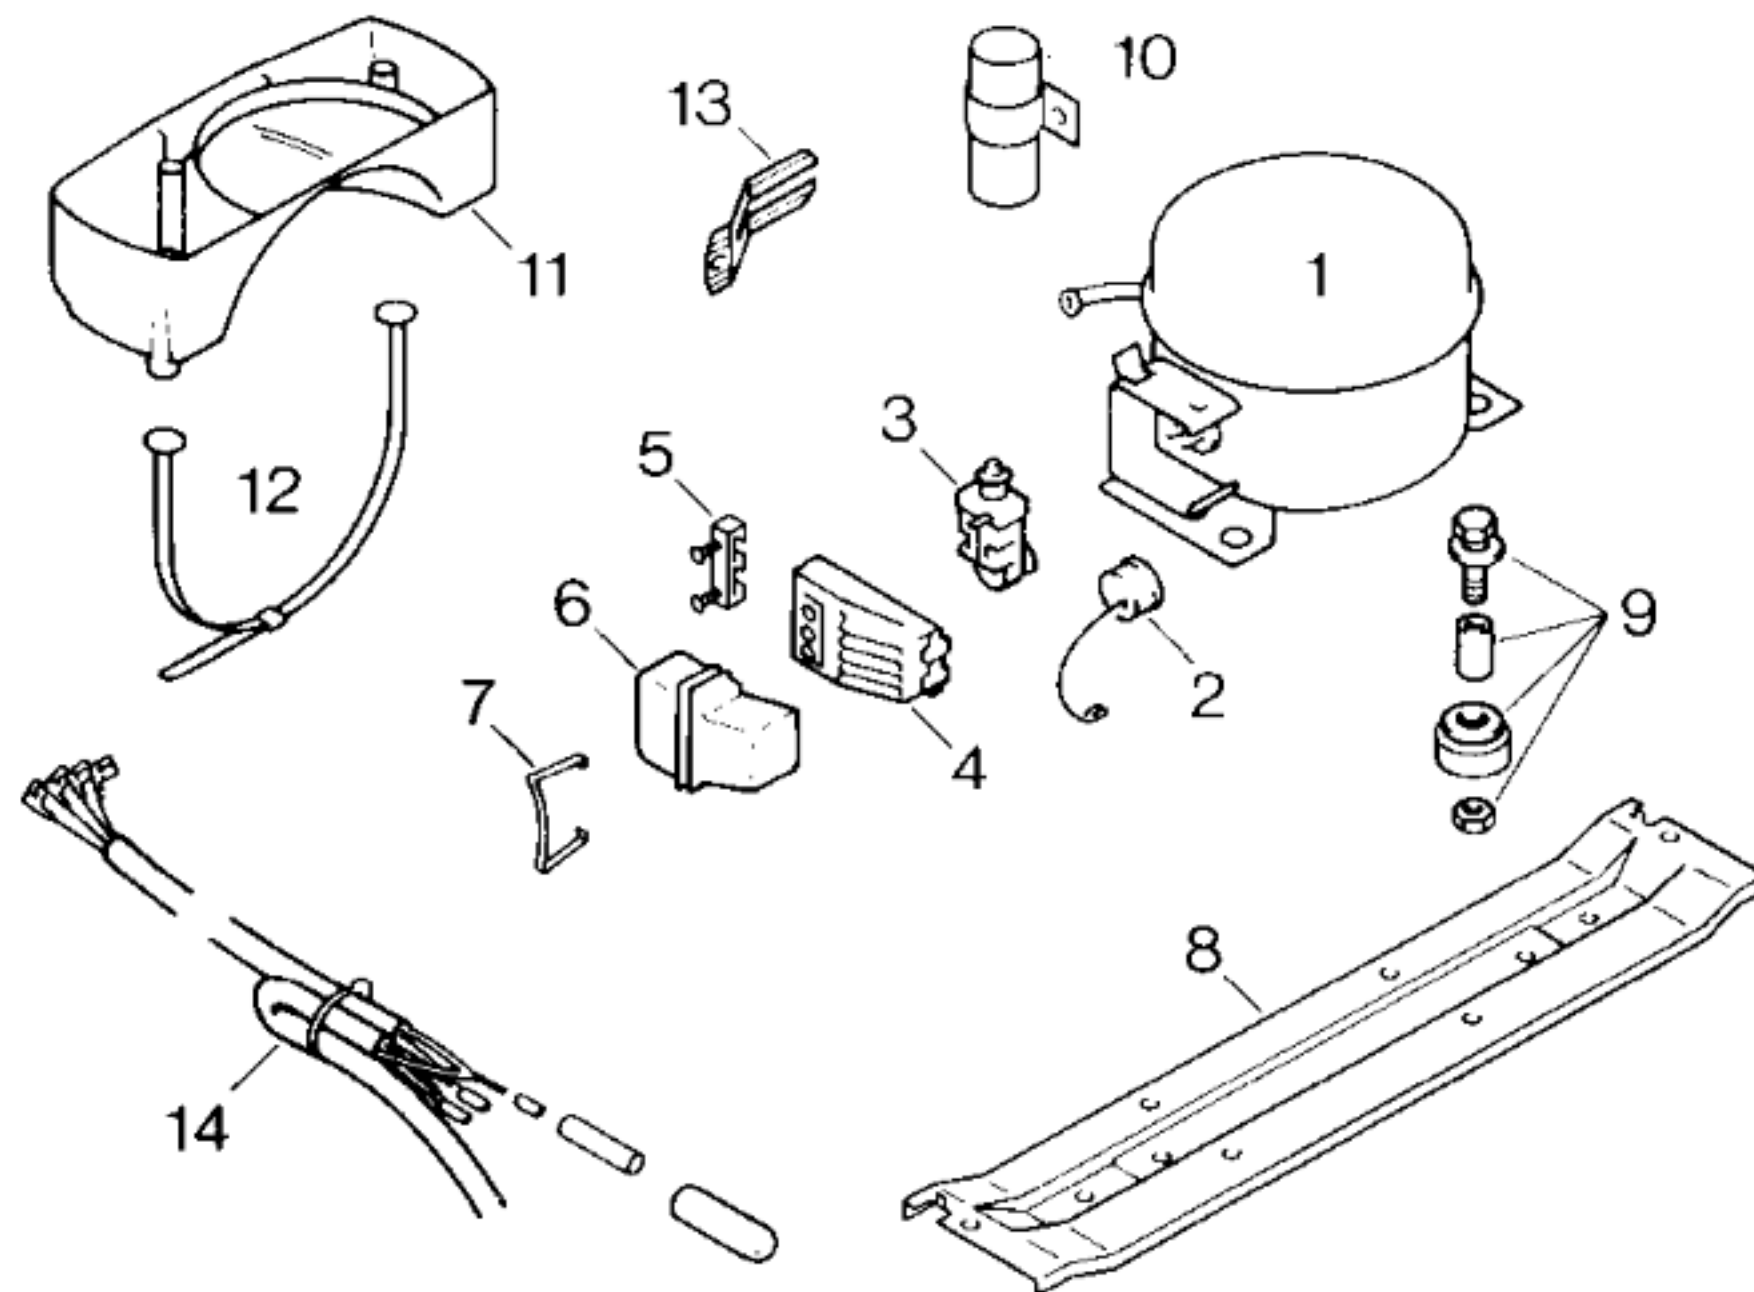

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch		Aspera		
Typ/Type		V 1040		BY 1112 A		
Förderleistung/Delivery/Débit		l/h		1060		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,5	8,5		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	15,0	17,9	
		Hi/aux	Ω	29,0	43,7	
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57 SF				
Reglerstellung/Position			kalt	warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	- 29	- 21		
		„aus“	- 35	- 26		
		(„abtauen“ od.)	„alarm“	- 20	- 15	
Füllmenge/Fill.quantity/Charge		R12	g	150		
Anschlußwert/Conn.load/Puiss. connectée		W		120		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		Ω				
Leistung/Power/Puissance		W				
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

Pos.	Bosch	Aspera		
1		14 0166/45		
2	07 2131/18	02 2337/16		
3	07 3899/09	02 2342/16		
4	04 9757/02	05 1748/06		
5				
6	04 9758/02	05 1746/01		
7		02 2339/01		
8		*11 1567/03		
9	01 4895/02	*05 0166/05		
10				
11				
12				
13		*04 1568/01/2		
14		*05 1226/08		

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch