



51 1086/00
 D1, CH1, F1
 Gebrauchsanweisung
 (D,GB,F,NL,DK,S,SF,N,E,P)

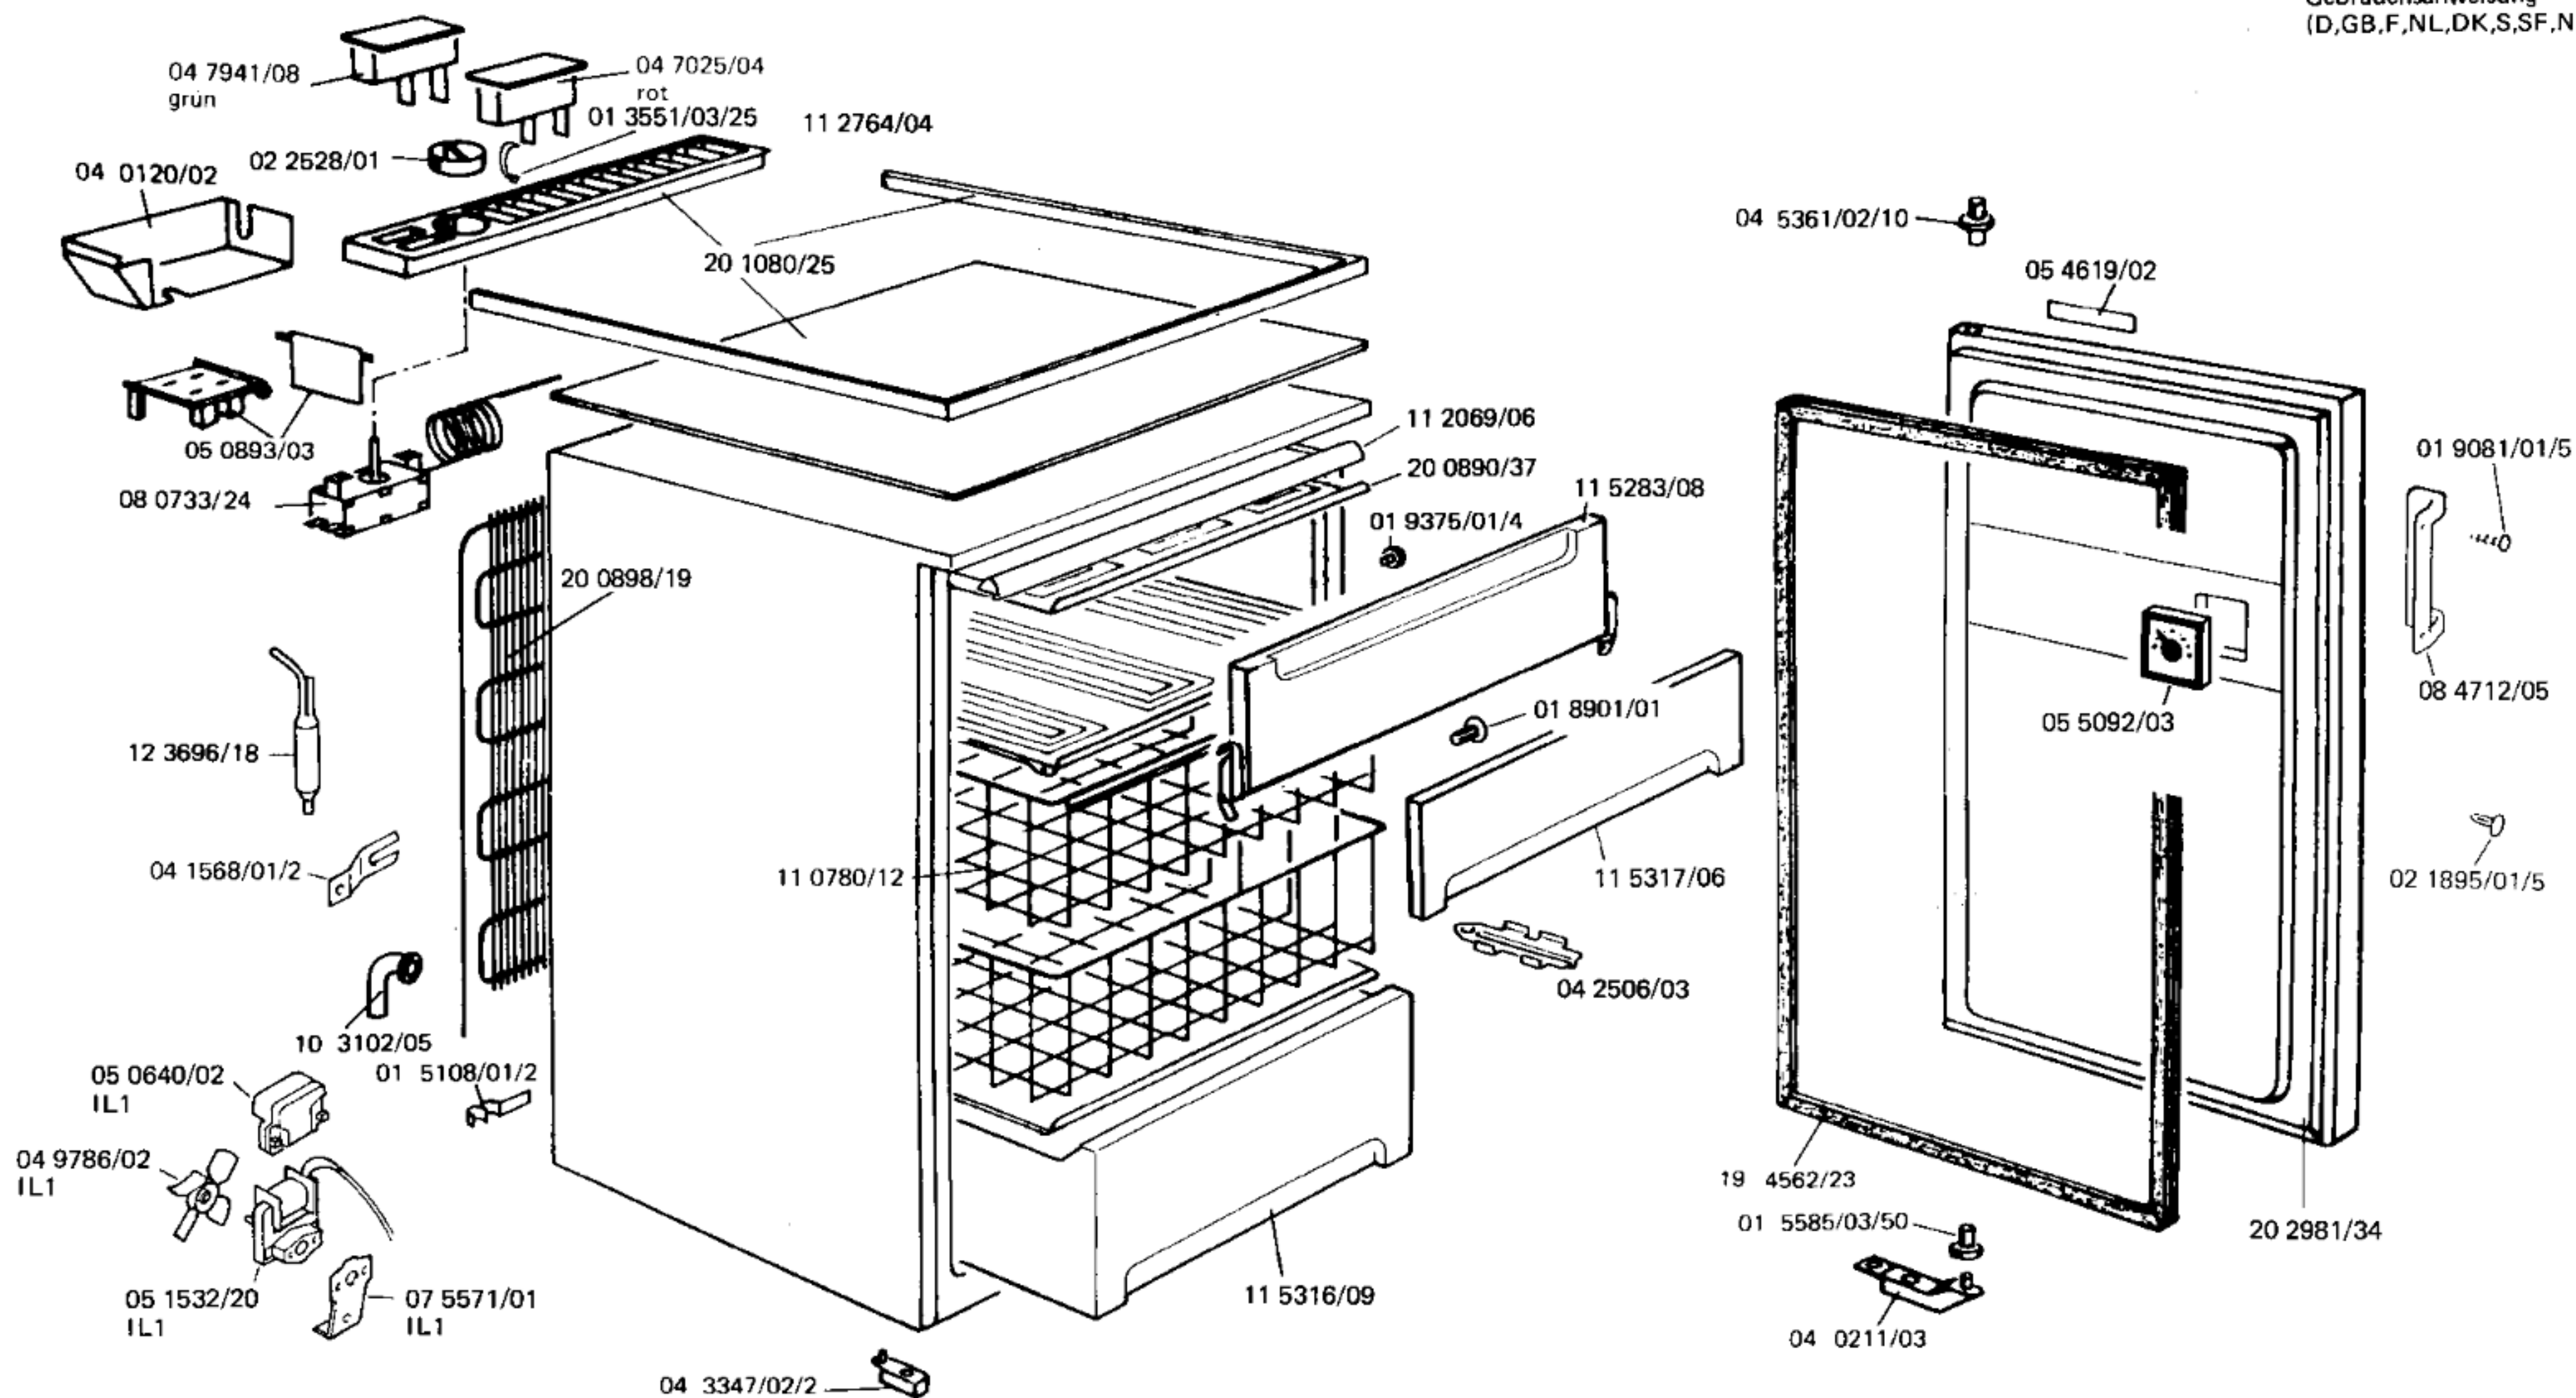

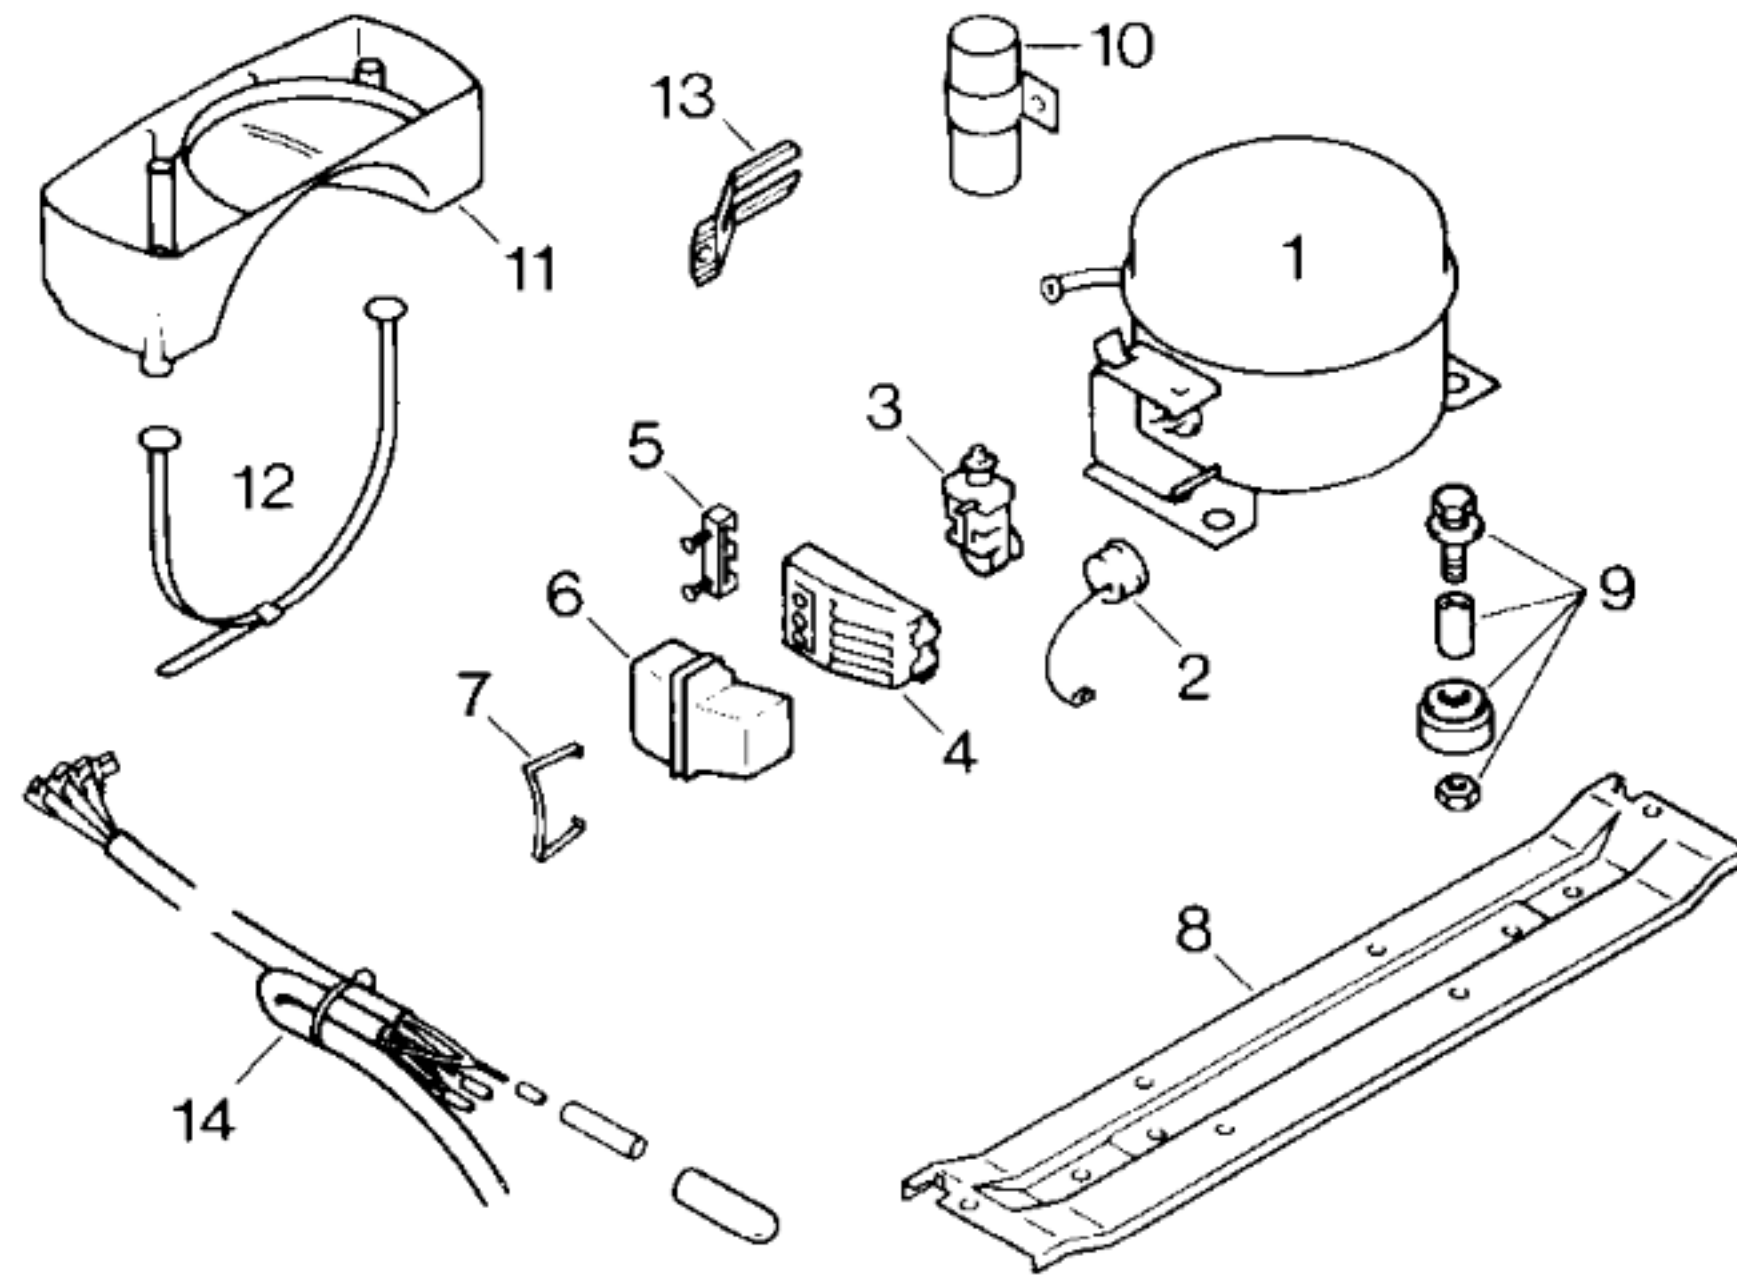

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Necchi blue Box		
Typ/Type		BY 1112 A	M 5 J		
Förderleistung/Delivery/Débit		1060 l/h	V 920		
Anlaufstrom/Starting current/Cour. de démarrage		8,5 A	9,2		
Widerstand/Resistance/Résistance		17,9 Ω	16,6		
Hi/aux		43,7 Ω	38,7		
Temp.-Regler/Thermostat		M 8 J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		-29 -20 °C			
Valeurs de commutation		-35 -25			
(„abtauen“ od.)		-18 -13			
Füllmenge/Fill.quantity/Charge	R12	g	150		
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	430		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	D1,CH1,F1	IL1		
	Aspera	Necchi		
1	14 0166/45	14 0154/45		
2	02 2337/16	06 1252/09		
3	02 2342/16	06 1253/09		
4	05 1748/06	05 1276/06		
5				
6	05 1746/01	02 1746/02		
7	02 2339/01	02 1747/01		
8	11 1840/07			
9	05 0166/05			
10				
11				
12				
13				
14				