


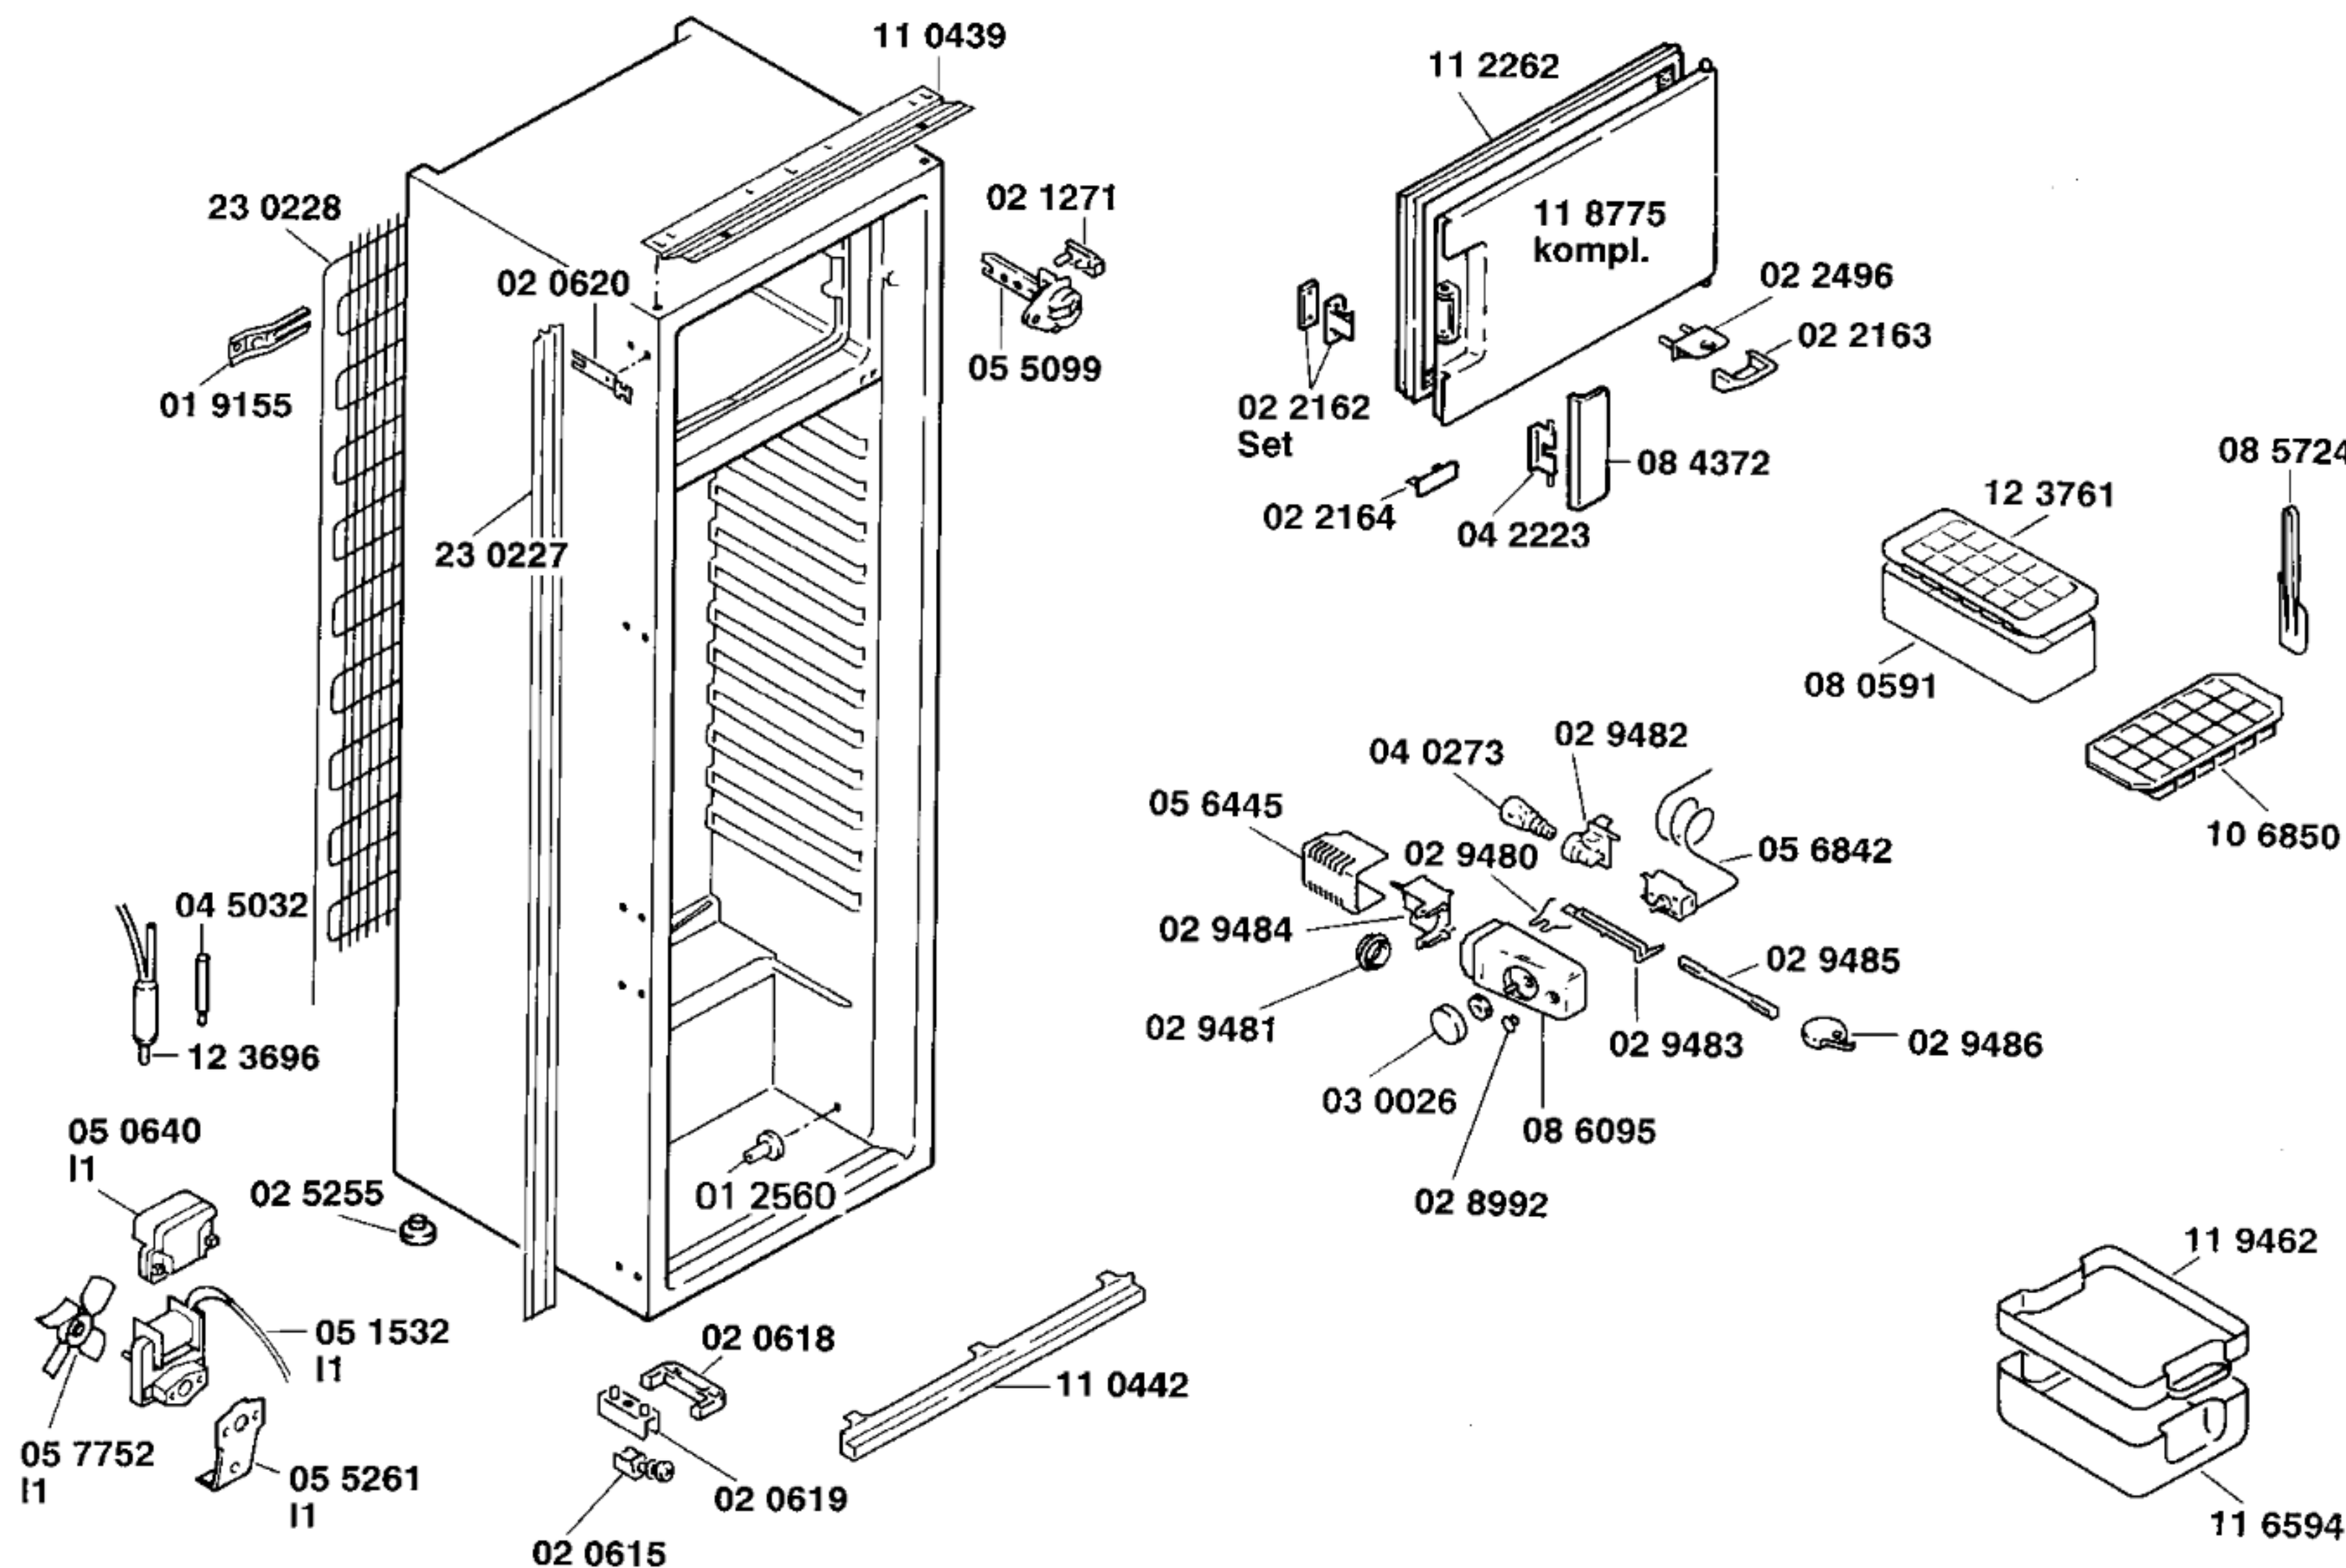



51 2705
Gebrauchsanweisung
(D,GB,F,I,NL,E)

51 2329
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

08 5059
Befestigungssatz

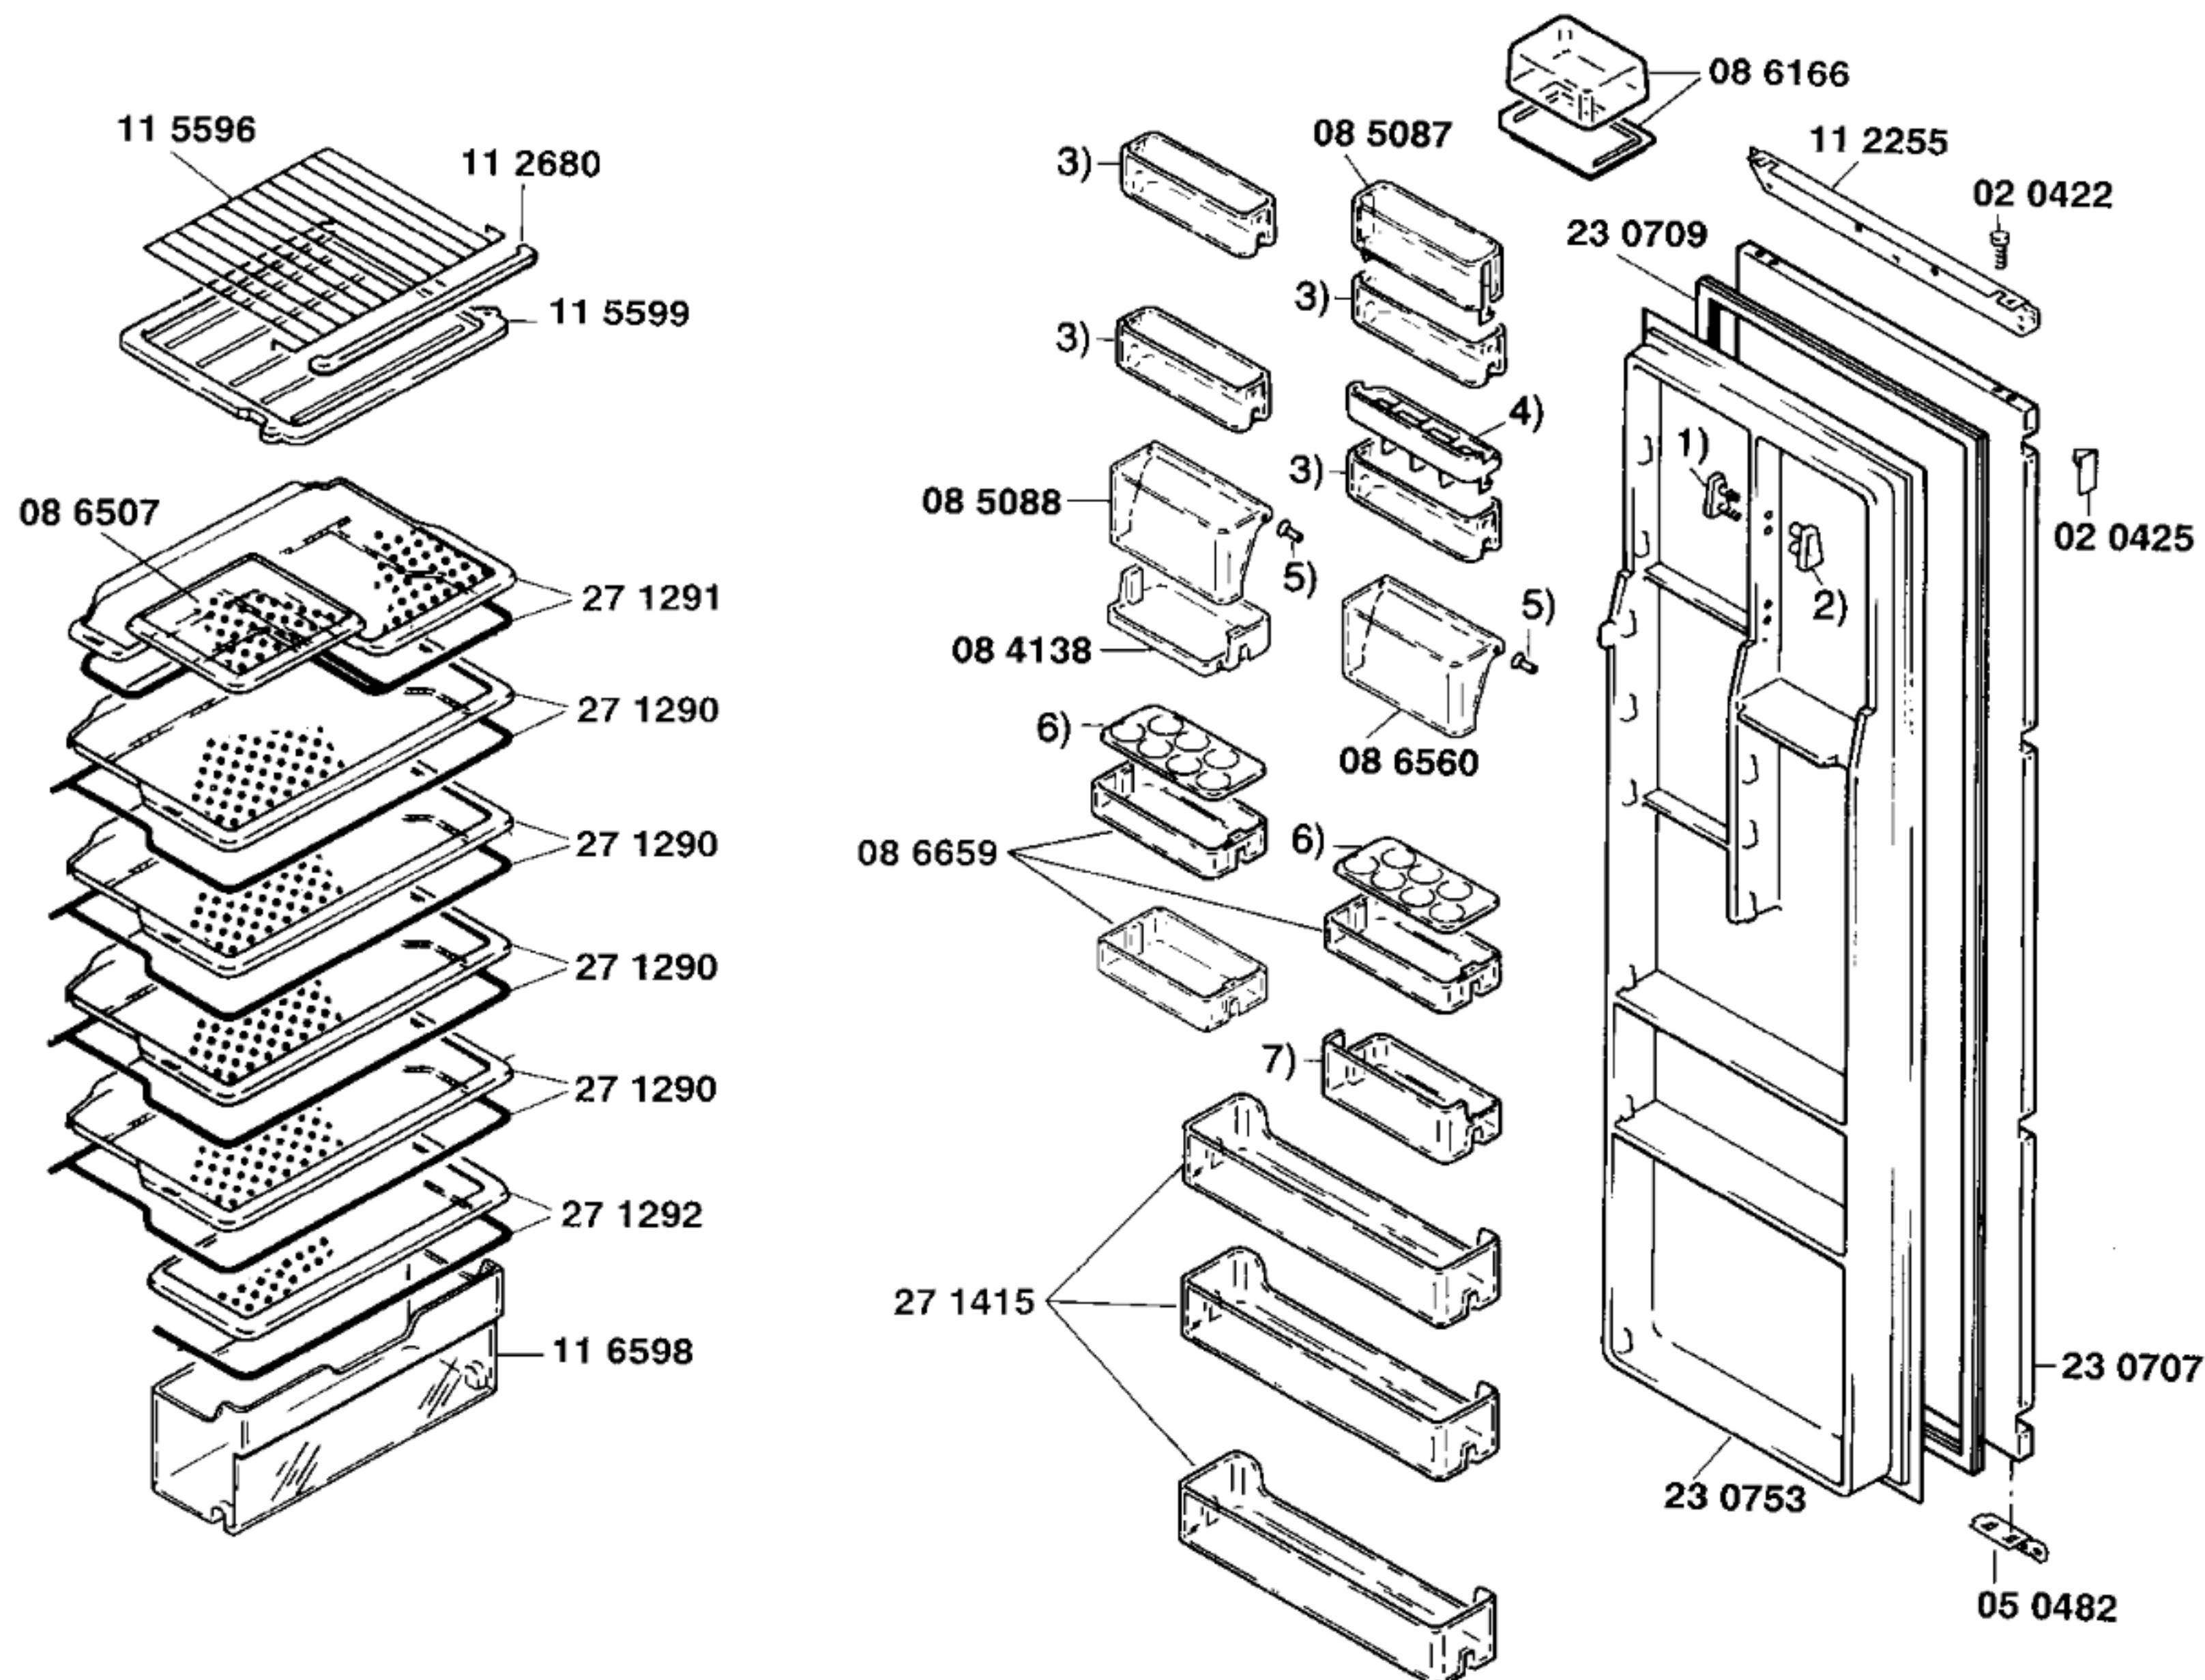

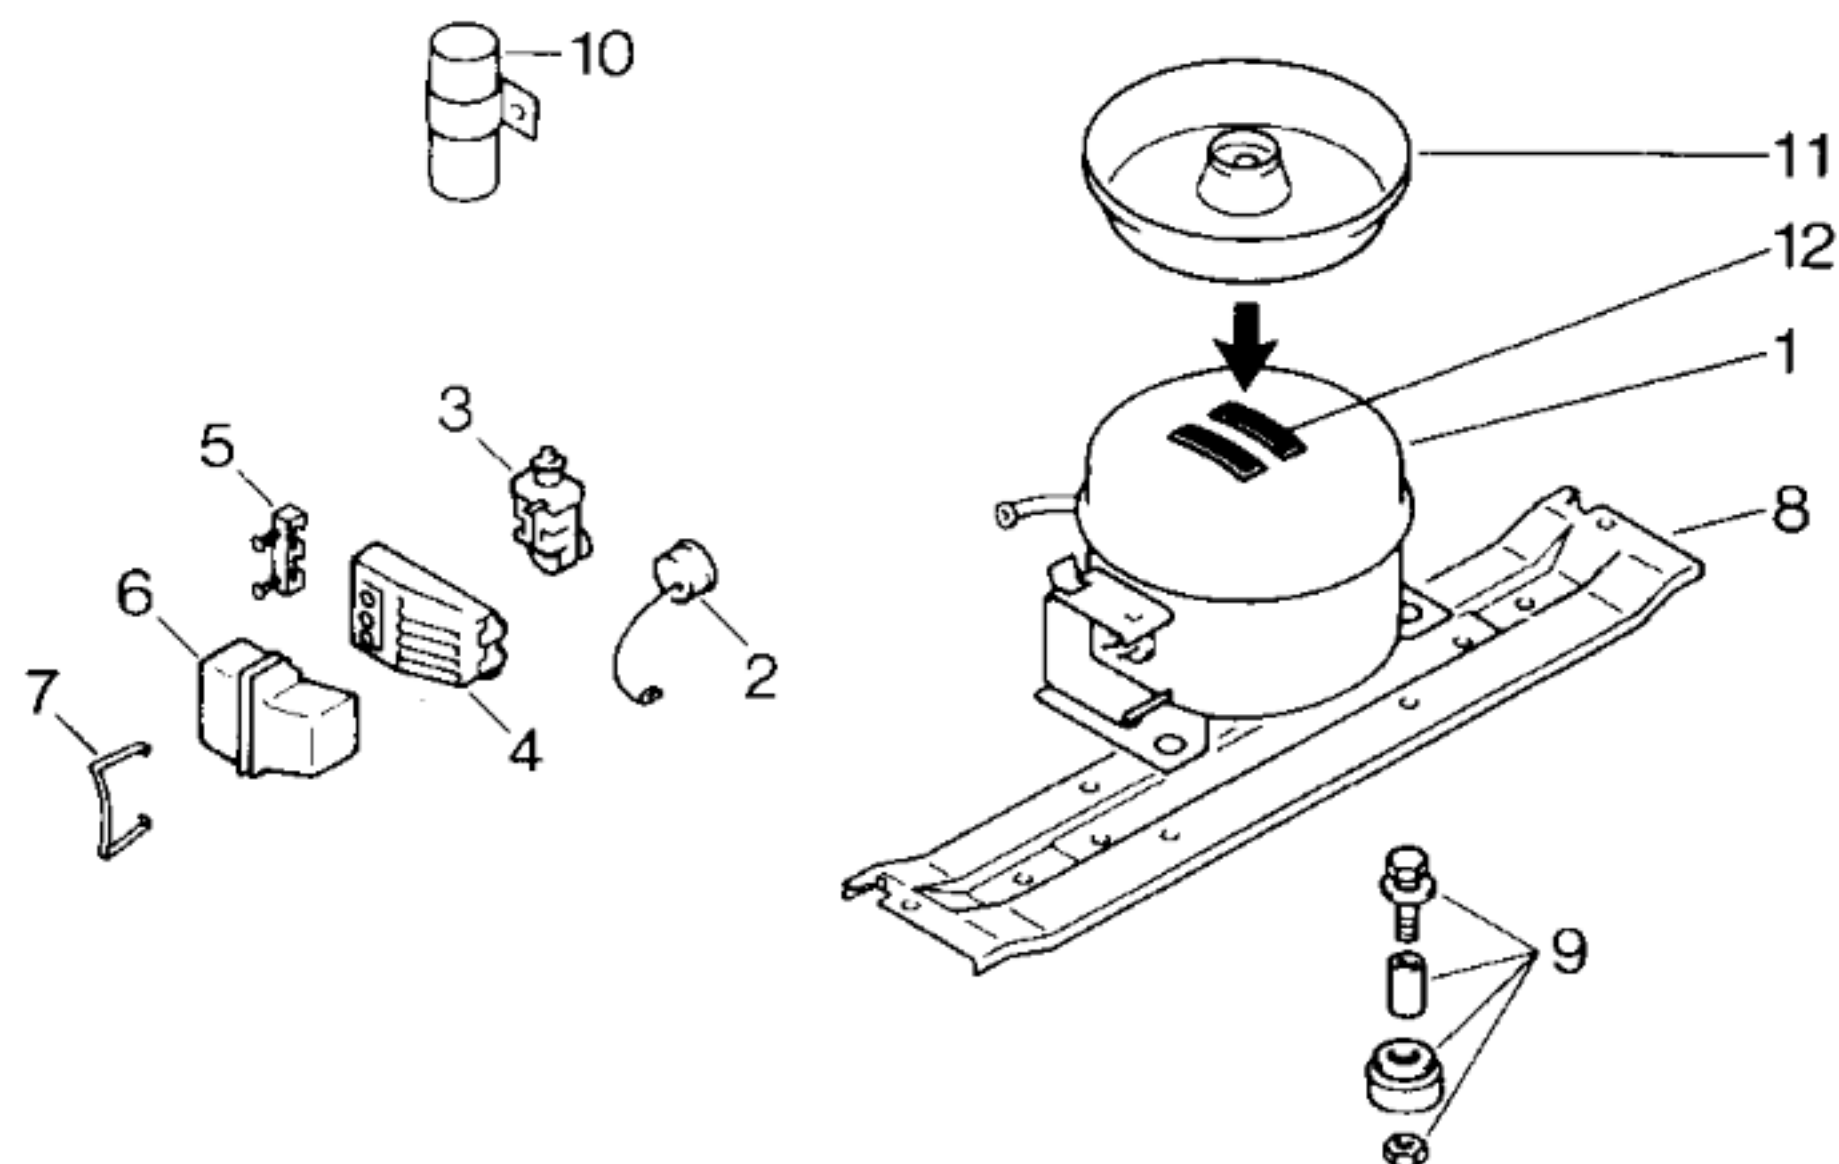
TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera		
Typ/Type		BY 1116 A		
Förderleistung/Delivery/Débit	l/h	1450		
Anlaufstrom/Starting current/Cour. de démarrage	A	9,9		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 11,7		
	Hi/aux	Ω 37,7		

Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ °C	+ 4,5	+ 4,5	
Valeurs de commutation	„aus“	- 31,0	- 13,5	
	(„abtauen“ od.) „alarm“			

Füllmenge/Fill.quantity/Charge	R12	g	180	
--------------------------------	-----	---	-----	--

Anschlußwert/Conn.load/Puiss. connectée	W	150		
---	---	-----	--	--

Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω	430 ± 10%		

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	EU1,CH1,F1,I1		
	Aspera BY 1116 A		
1	14 0405		
2	02 6559		
3	02 2342		
4	05 1748		
5			
6	05 1746		
7	02 2339		
8	11 1838		
9	05 0166		
10			
11	08 5091		
12	05 6008		