



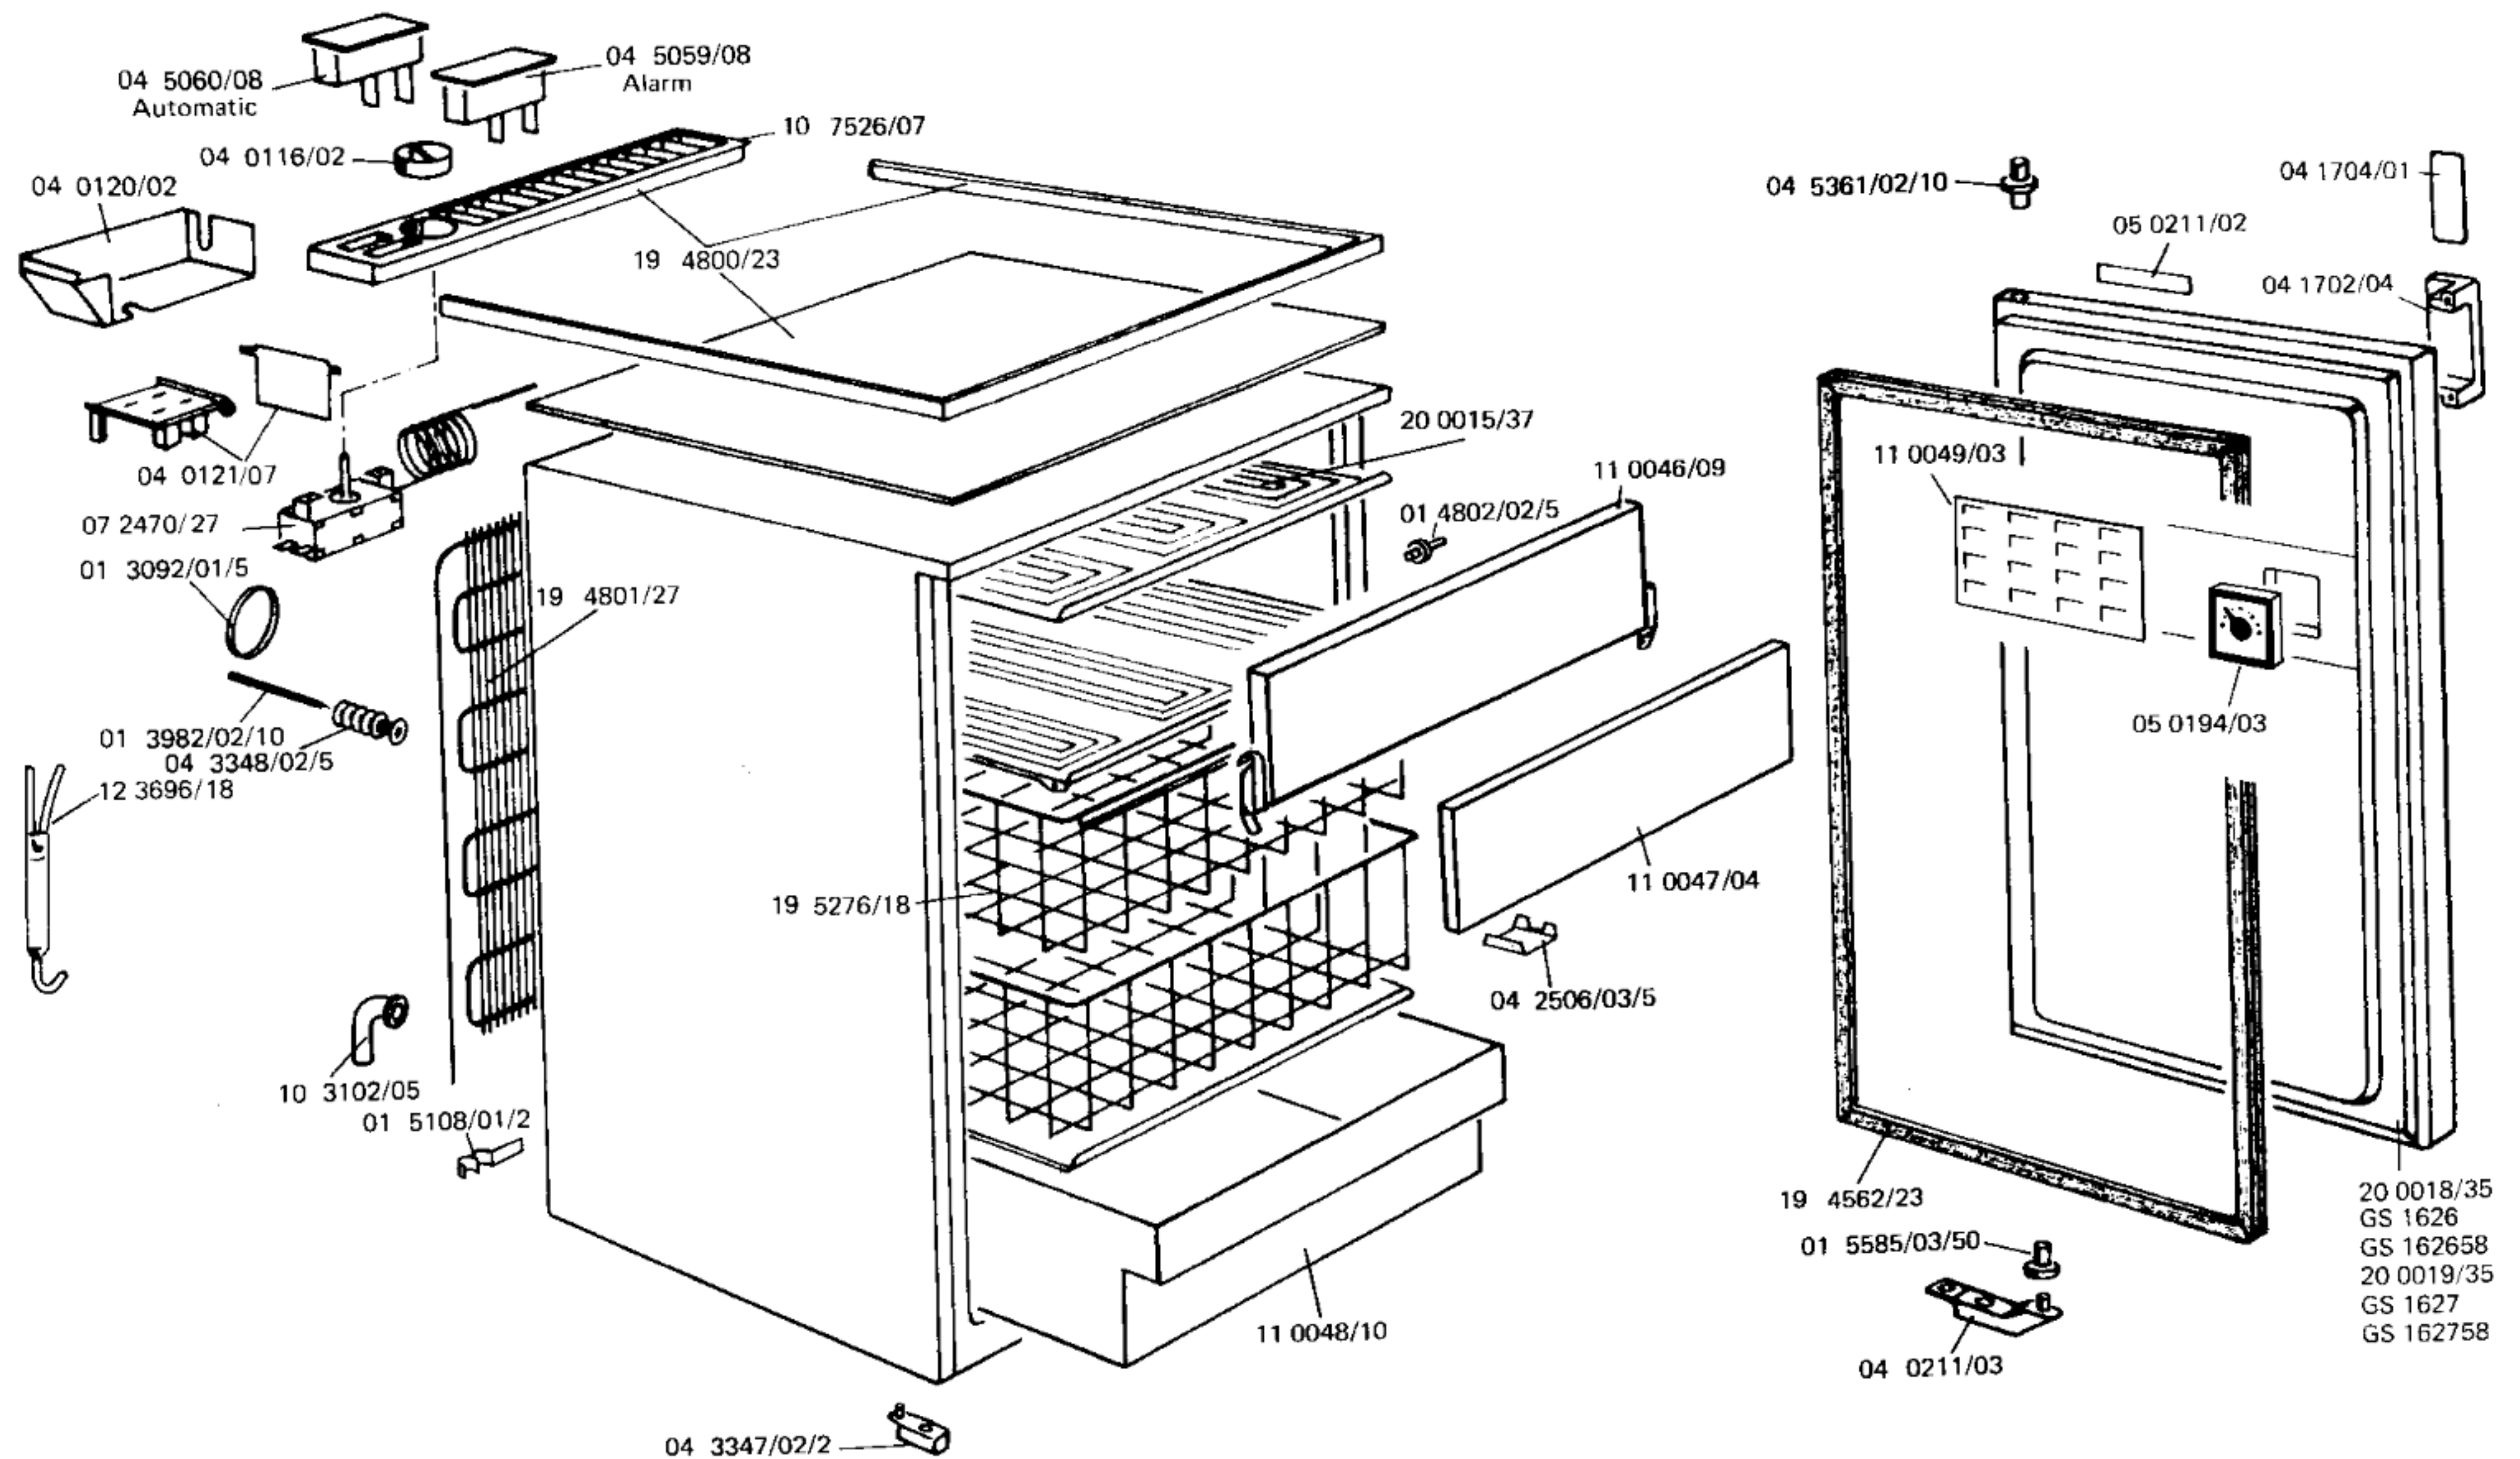

51 0041/00
Gebrauchsanweisung

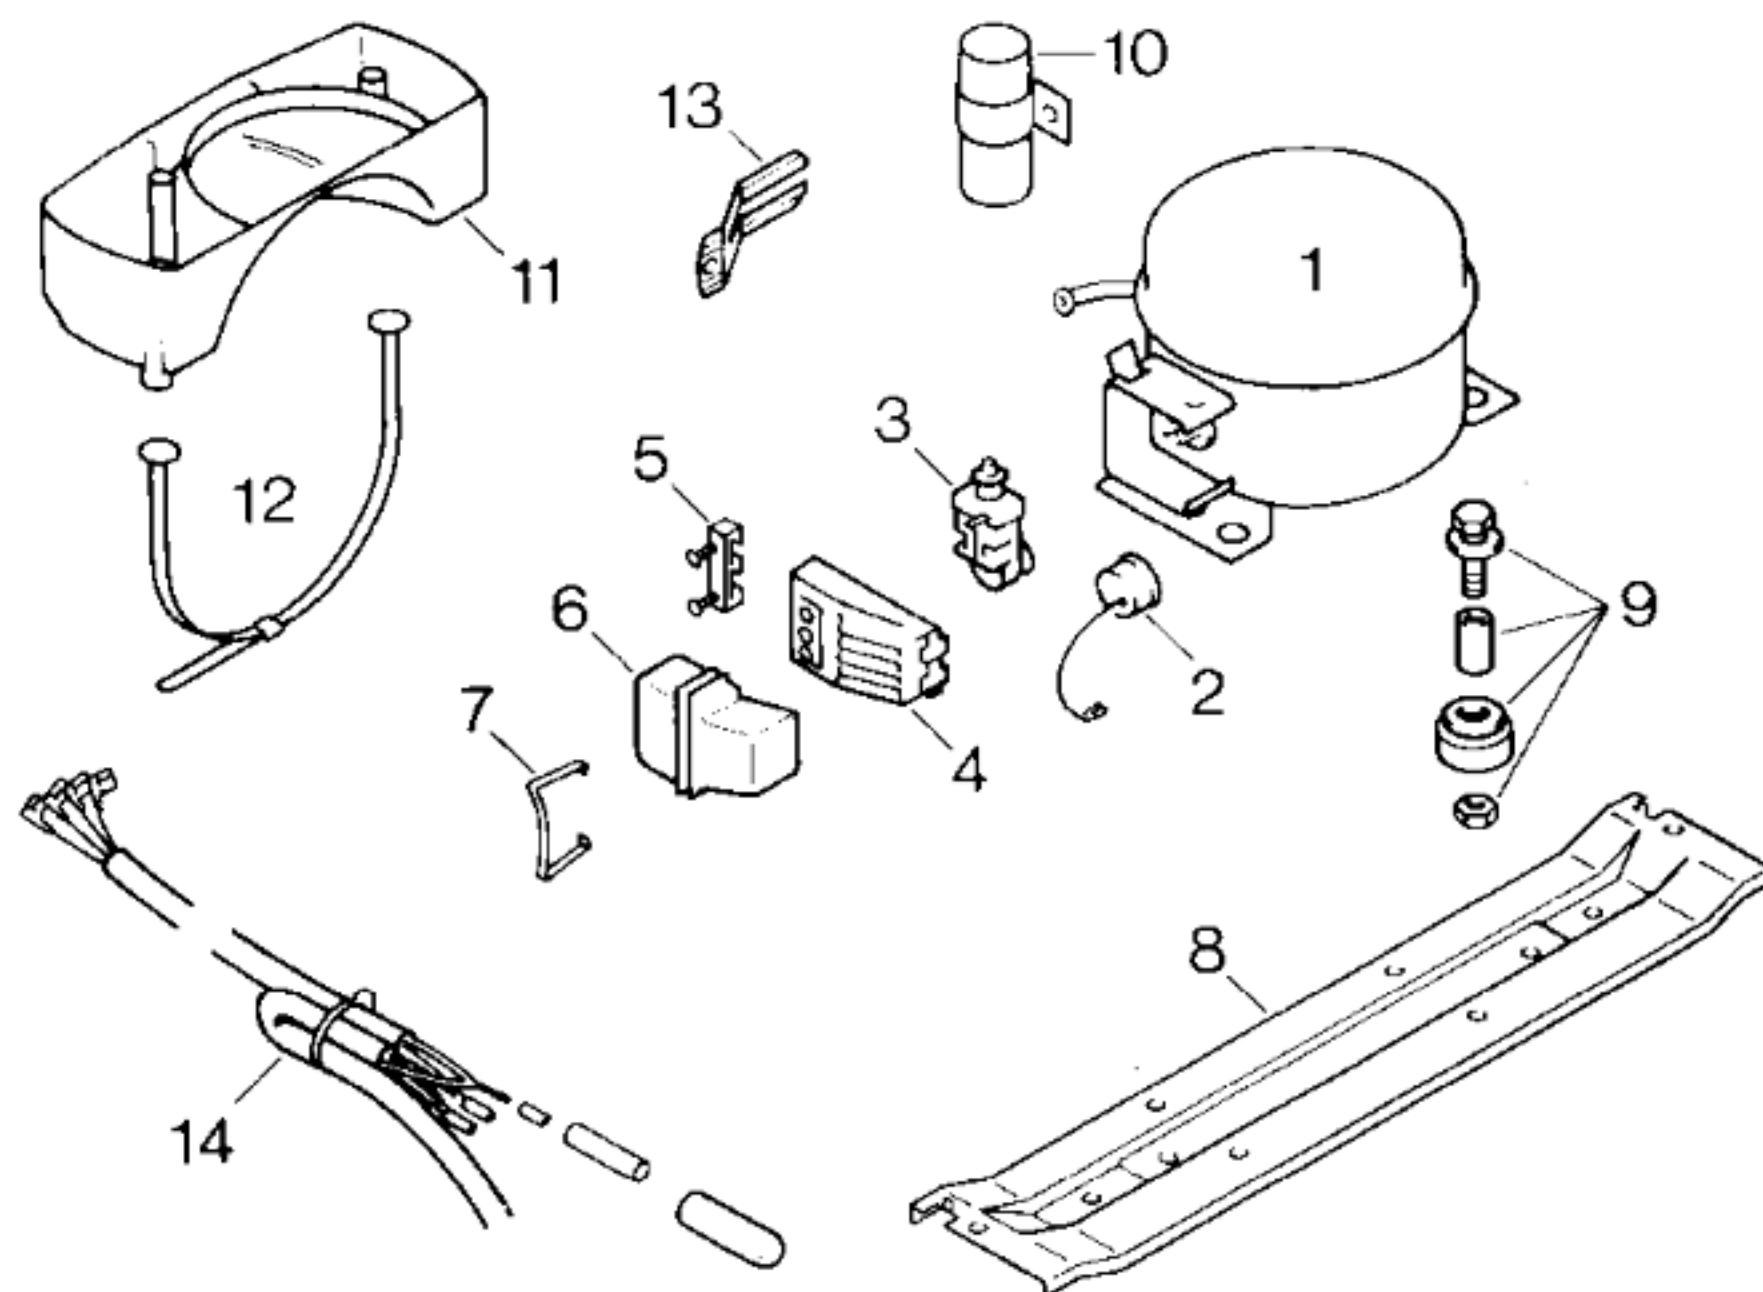

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch		Danfoss	
Typ/Type		V 1040		TL 5 A	
Förderleistung/Delivery/Débit	l/h	9,5		9,0	
Anlaufstrom/Starting current/Cour. de démarrage	A	15,0		15,7	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	29,0		18,8	
	Hi/aux Ω				
Temp.-Regler/Thermostat		Bosch			
Typ/Type		kalt		warm	
Reglerstellung/Position		- 24		- 18	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	- 32		- 25	
Valeurs de commutation	„aus“	- 18		- 13	
	(„abtauen“ od.) „alarm“				
Füllmenge/Fill.quantity/Charge	R12	g	150		
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	Bosch	Danfoss		
1		14 0065/45		
2	07 2131/18			
3	07 3699/09	02 0108/27		
4	04 9865/05			
5				
6	04 9865/05	05 1413/05		
7				
8		*11 1840/04		
9	01 4895/02	*05 0166/05		
10				
11				
12				
13		*04 1568/01/2		
14		*05 1226/08		

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch