
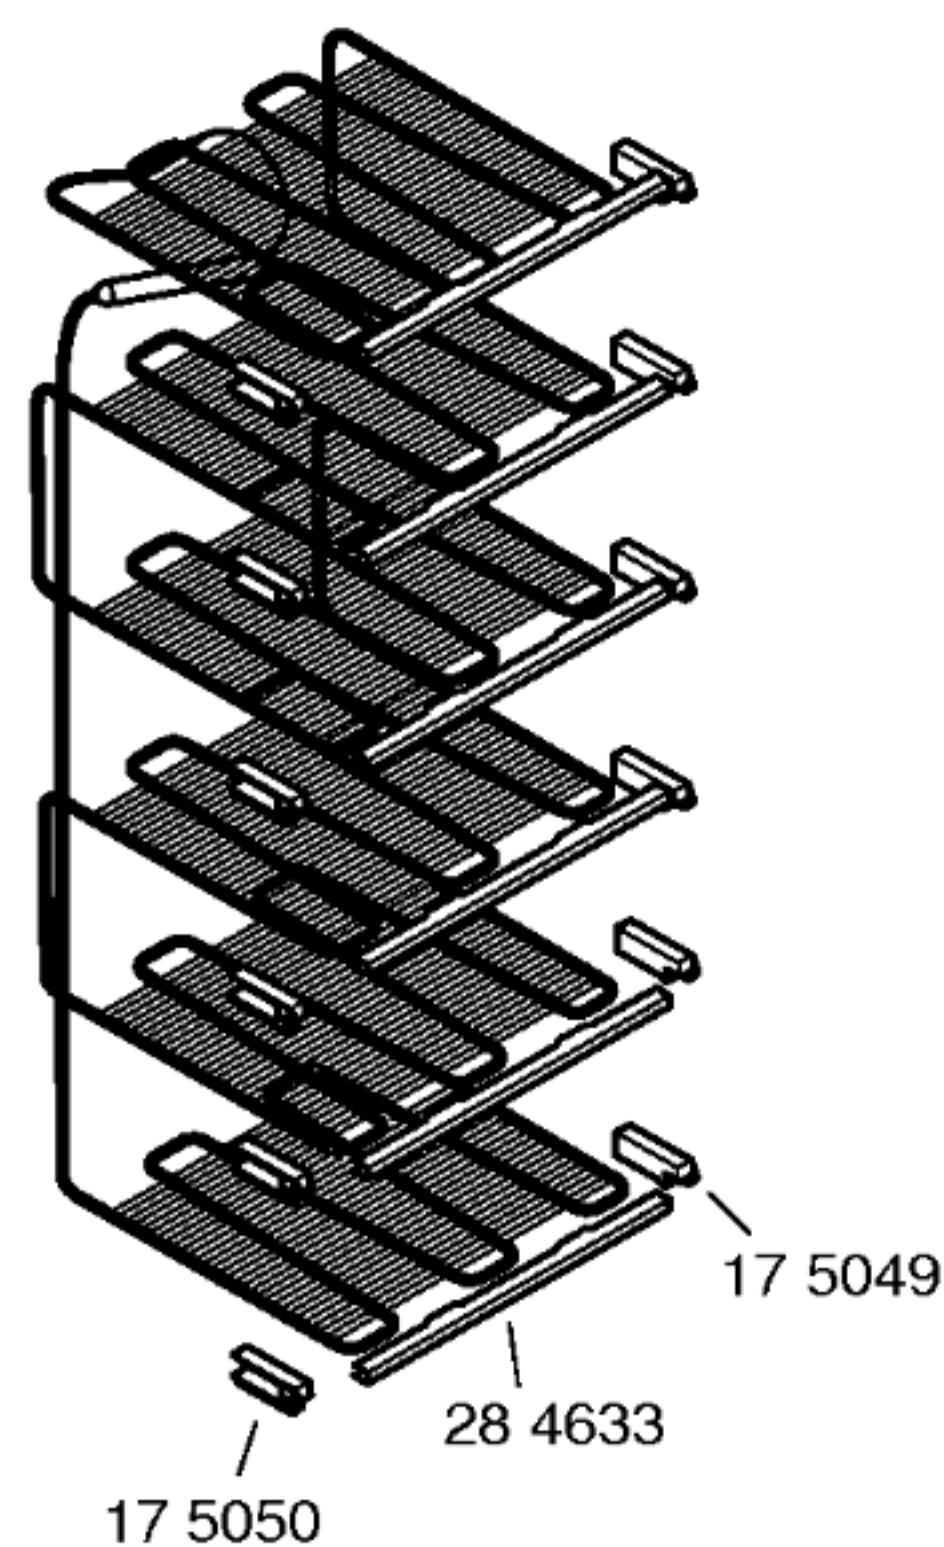
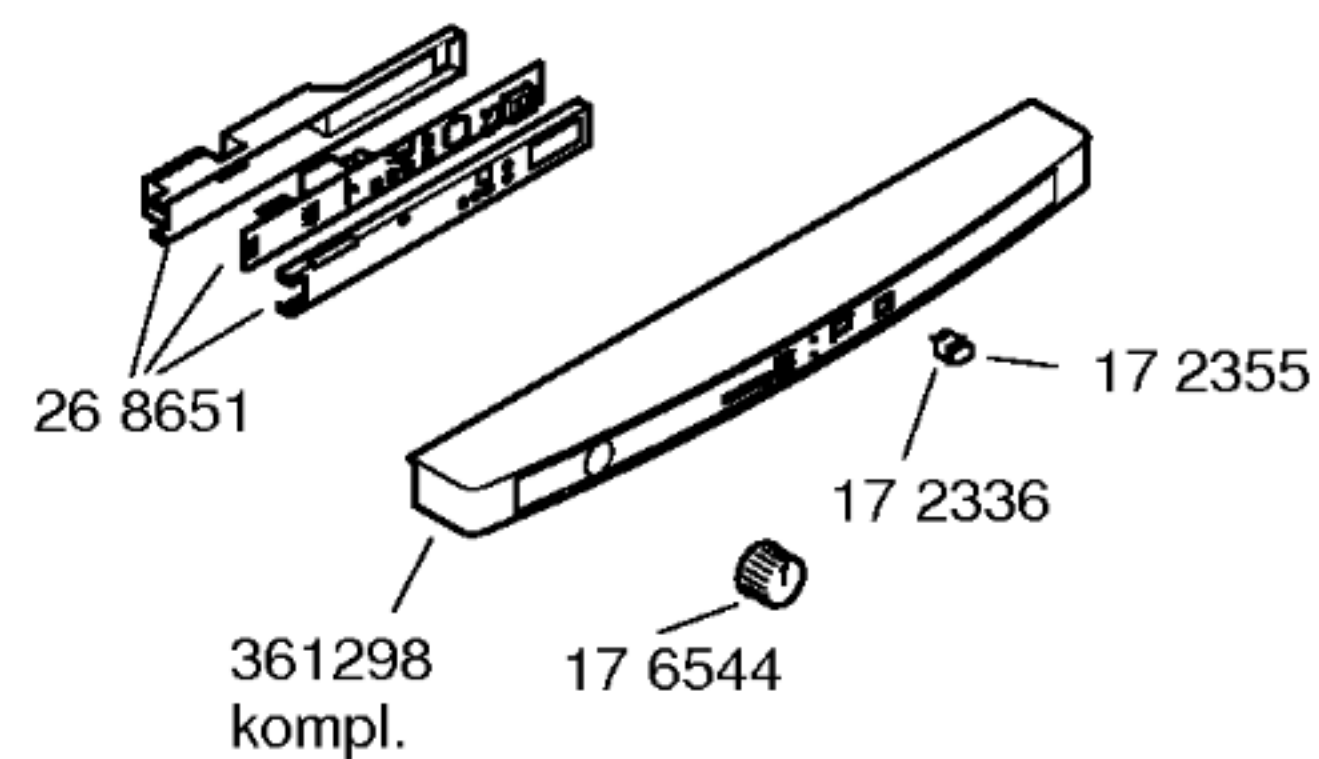


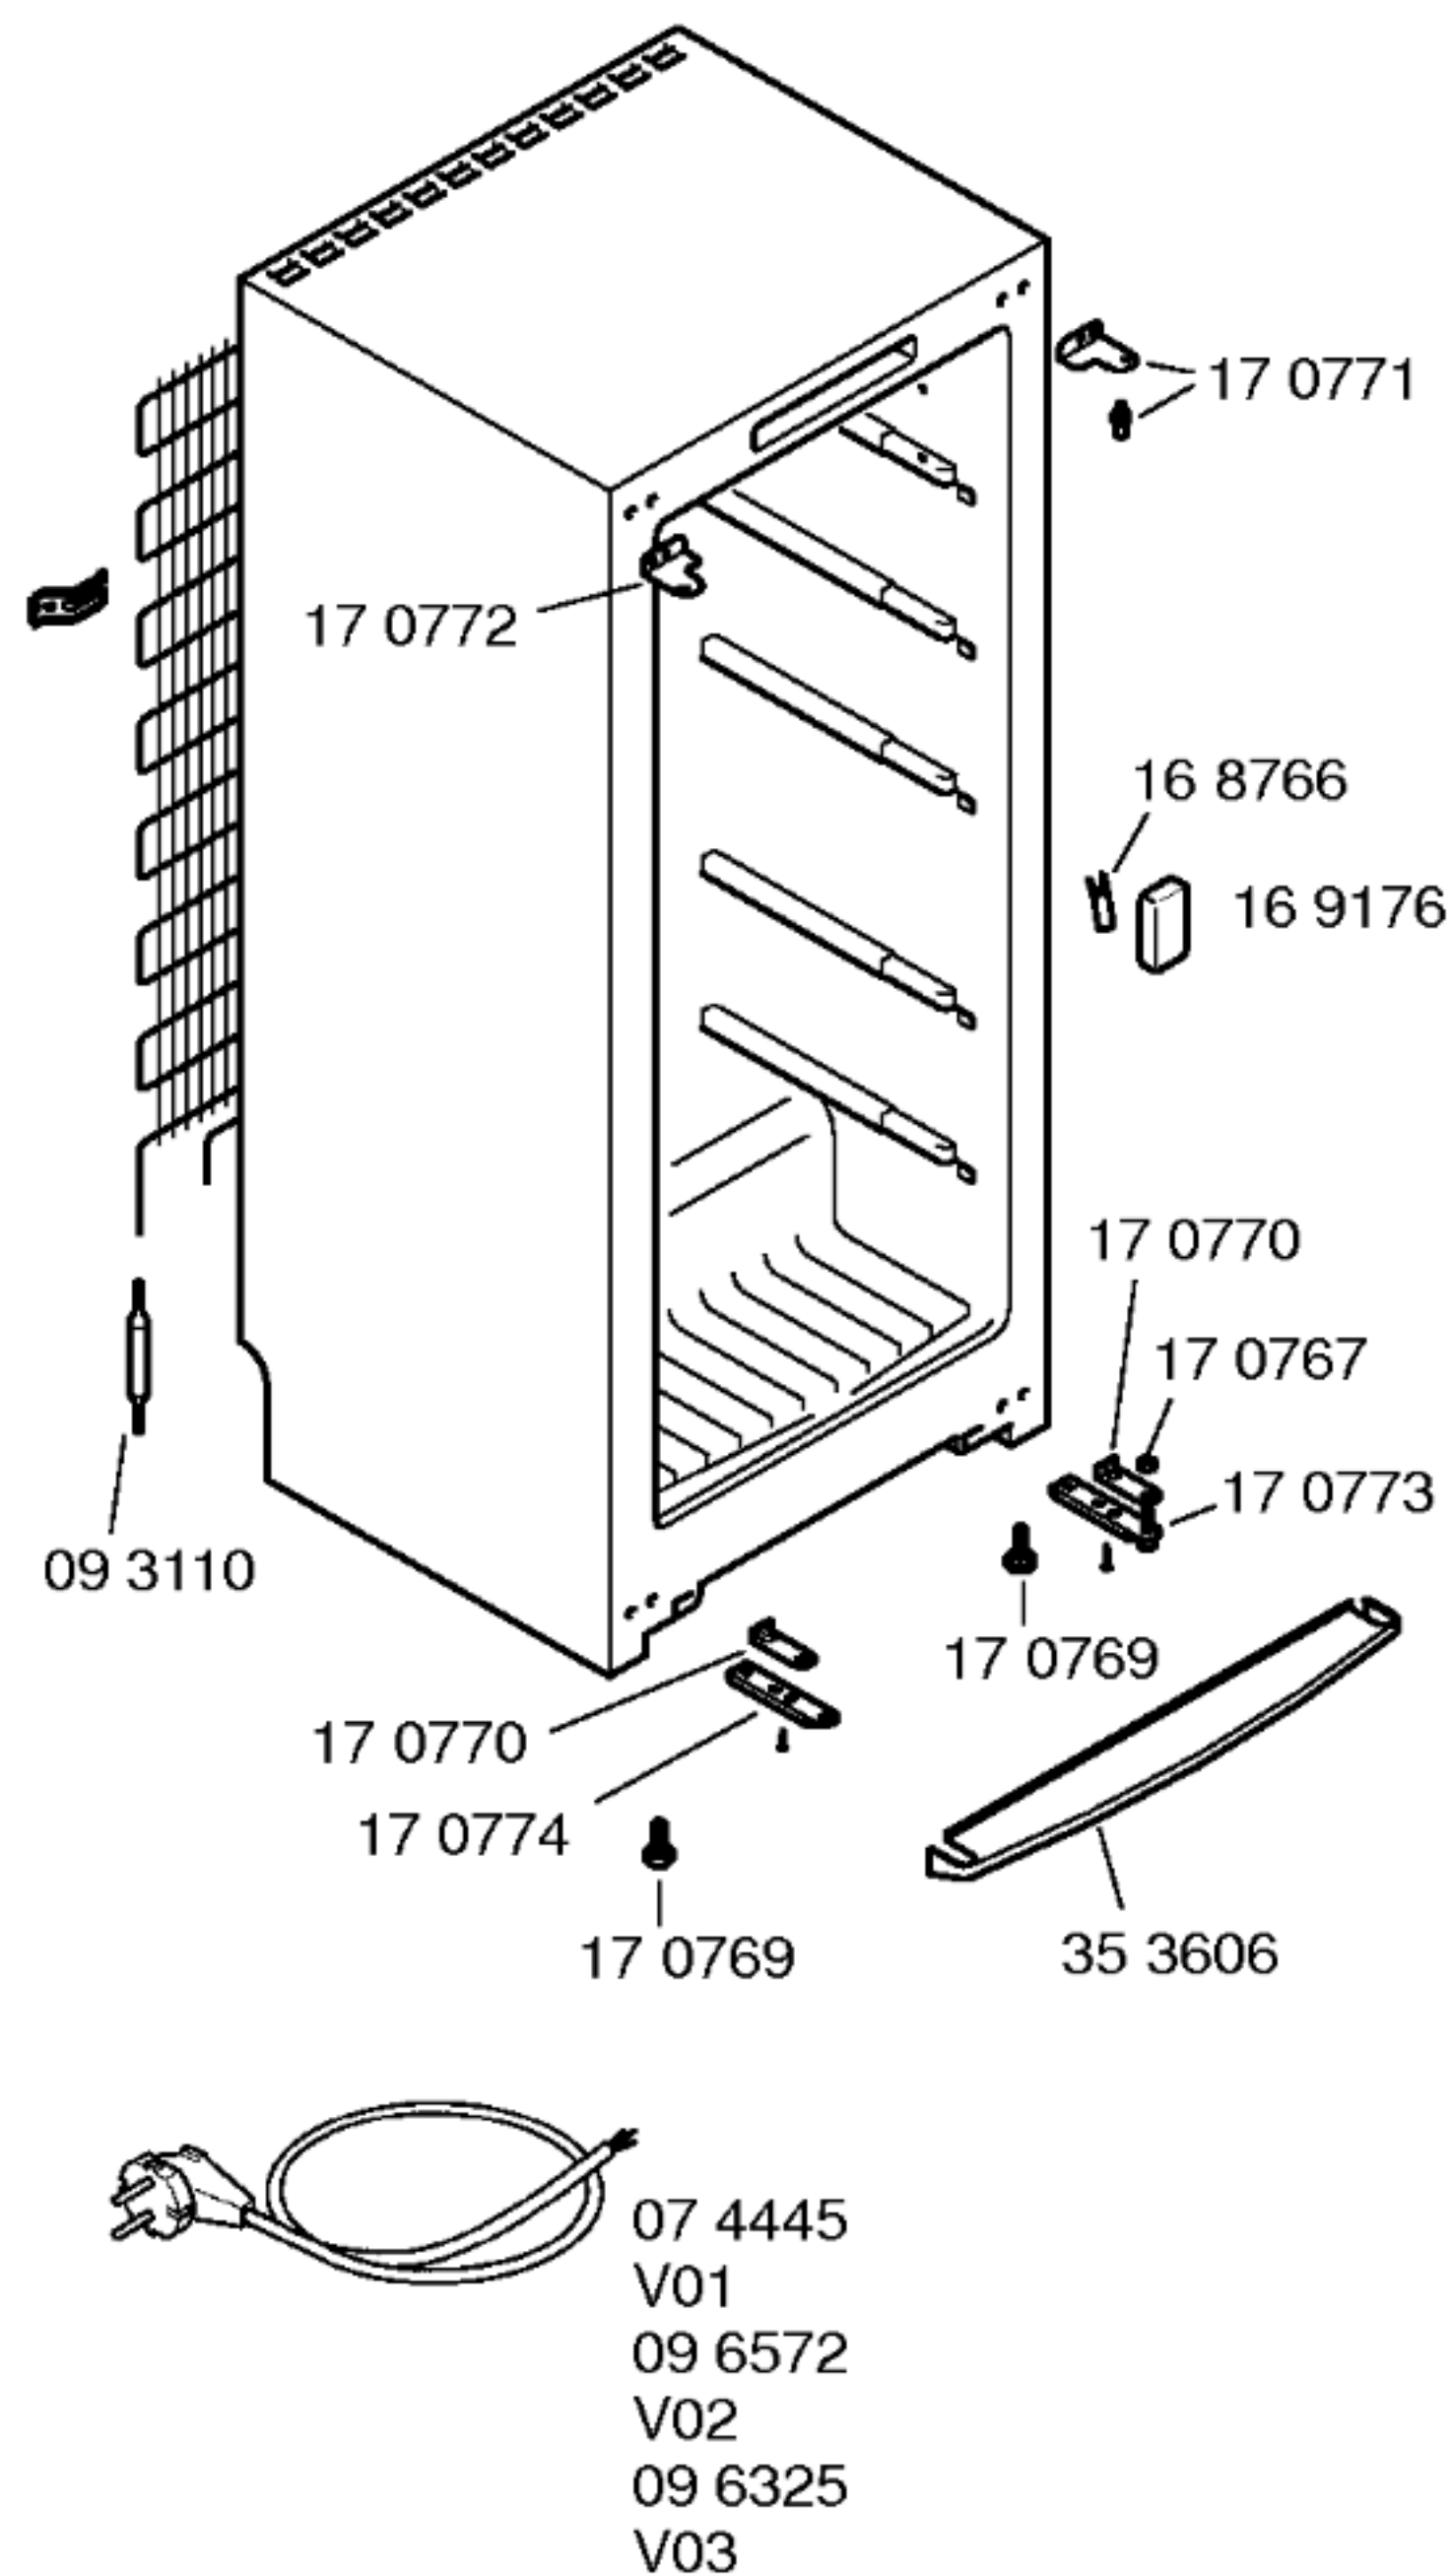



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 8124
(D,GB,F,I,NL,E,P)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5629

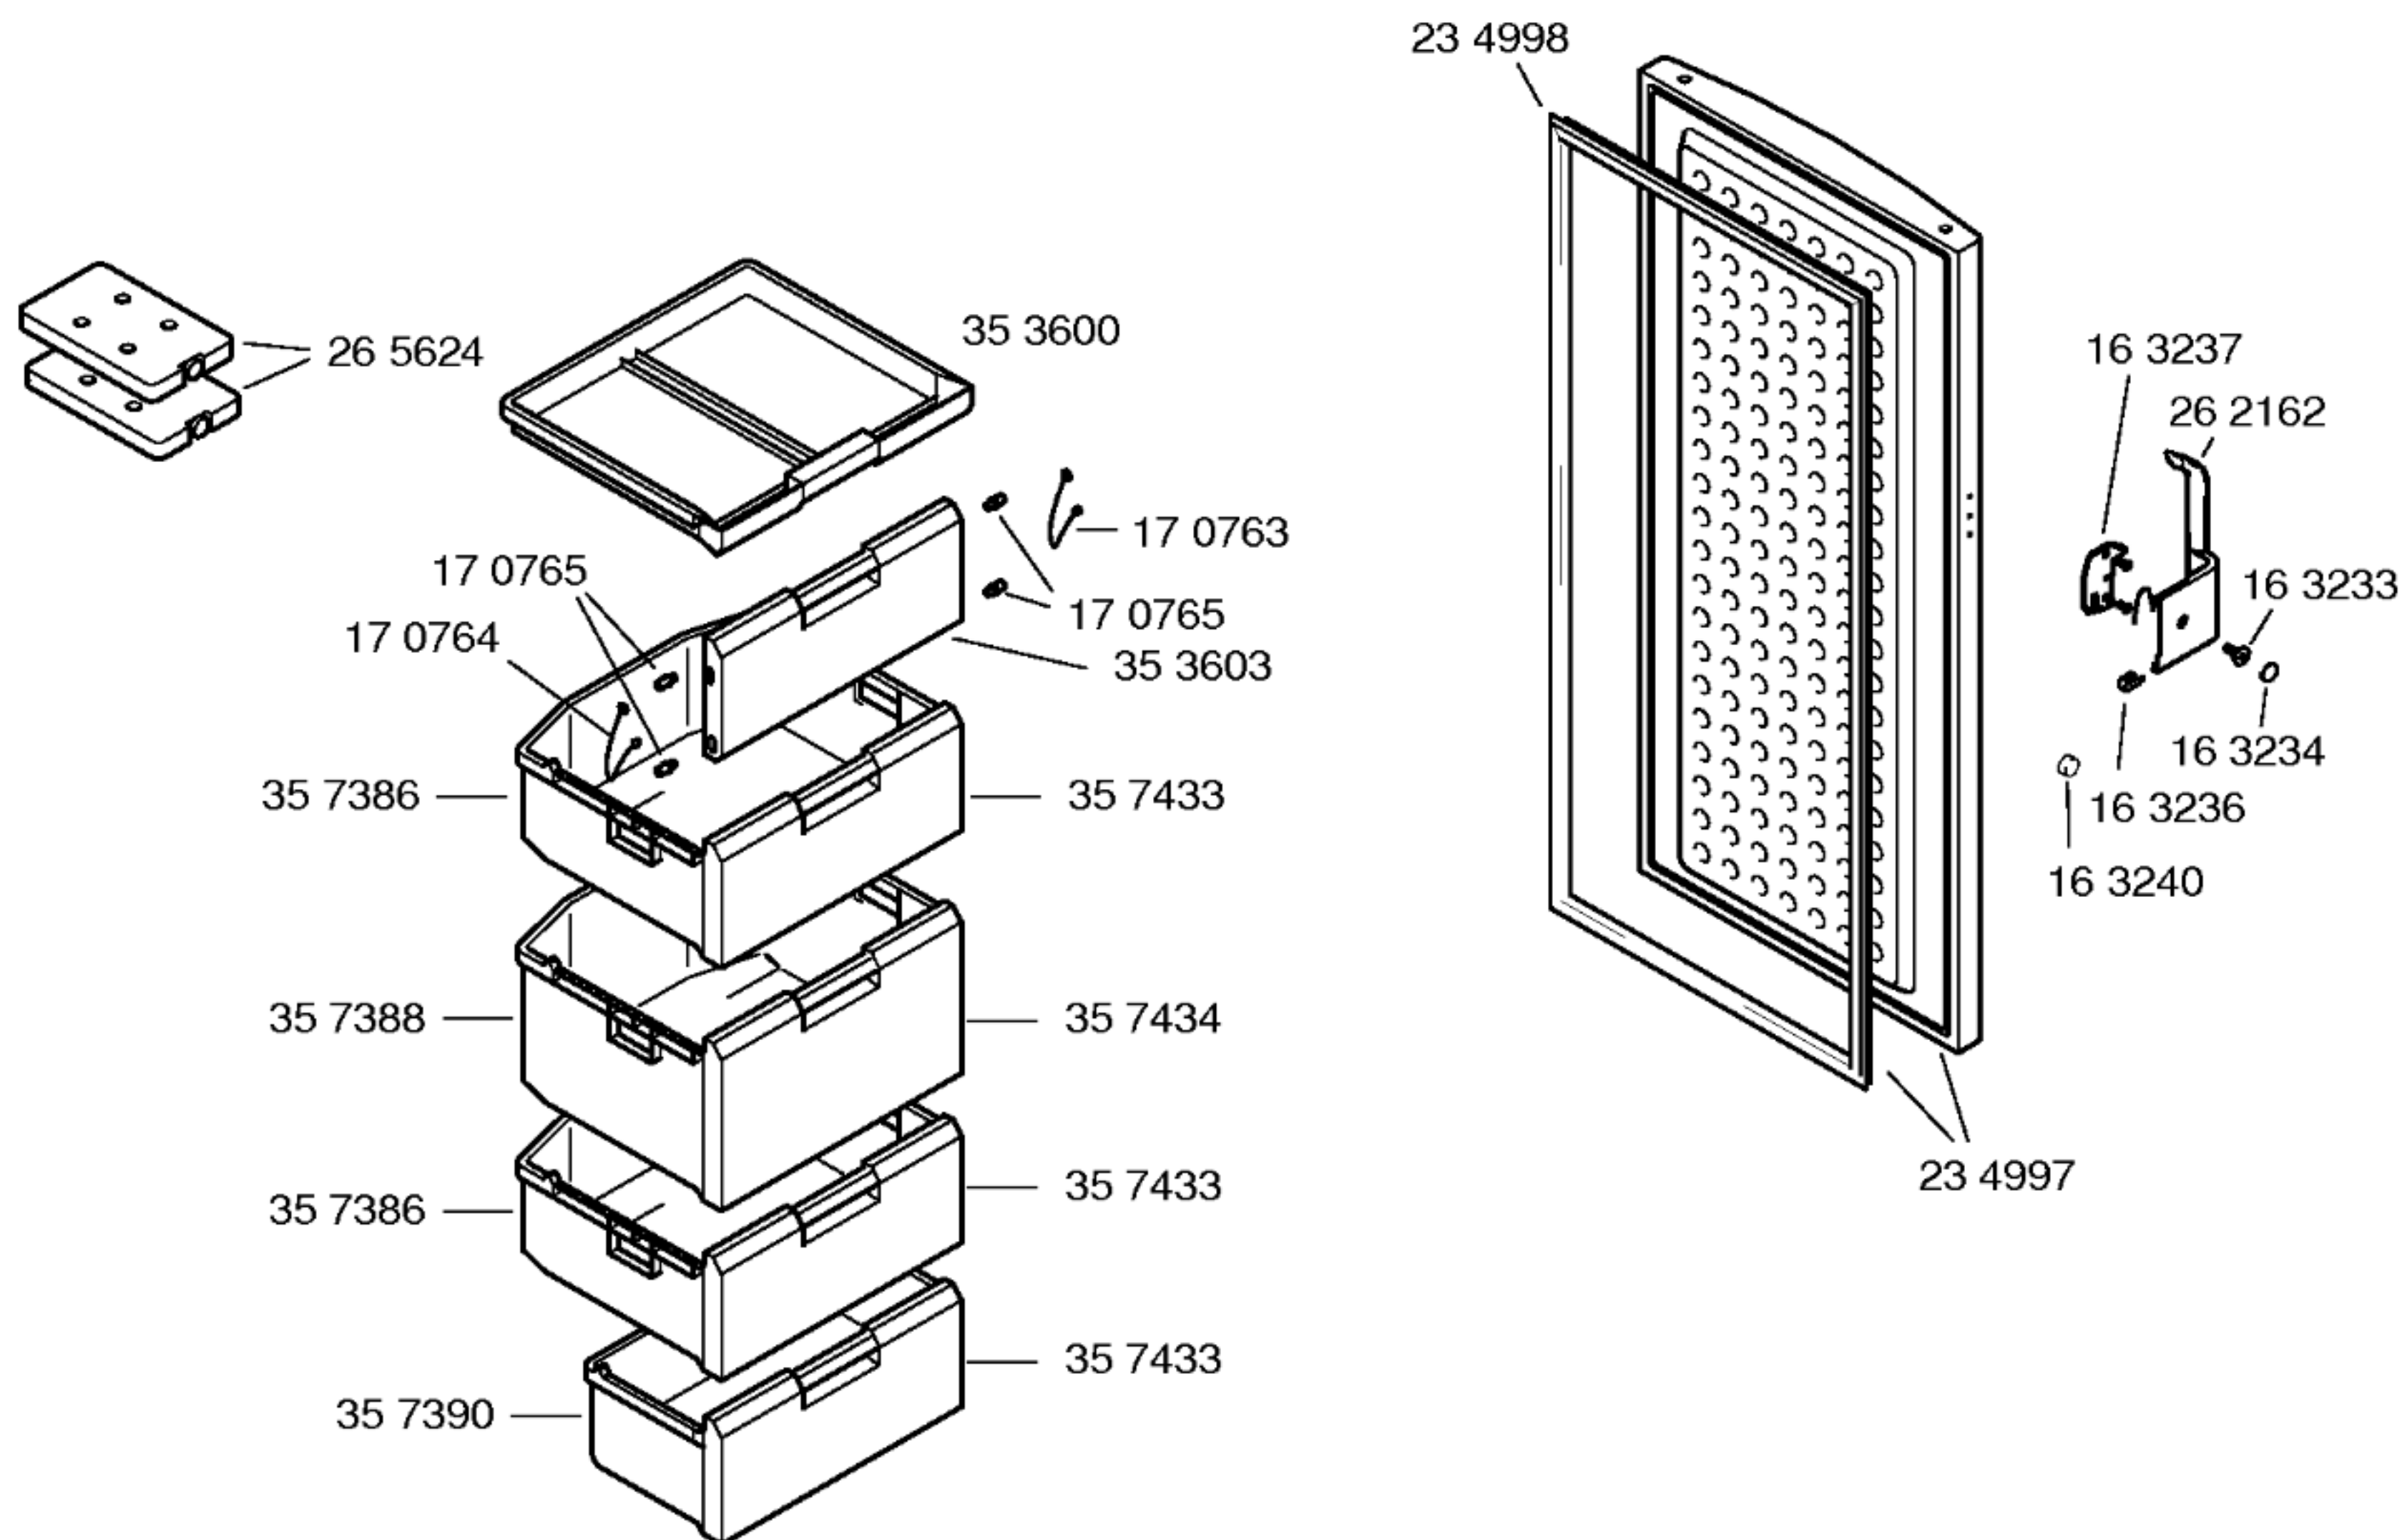

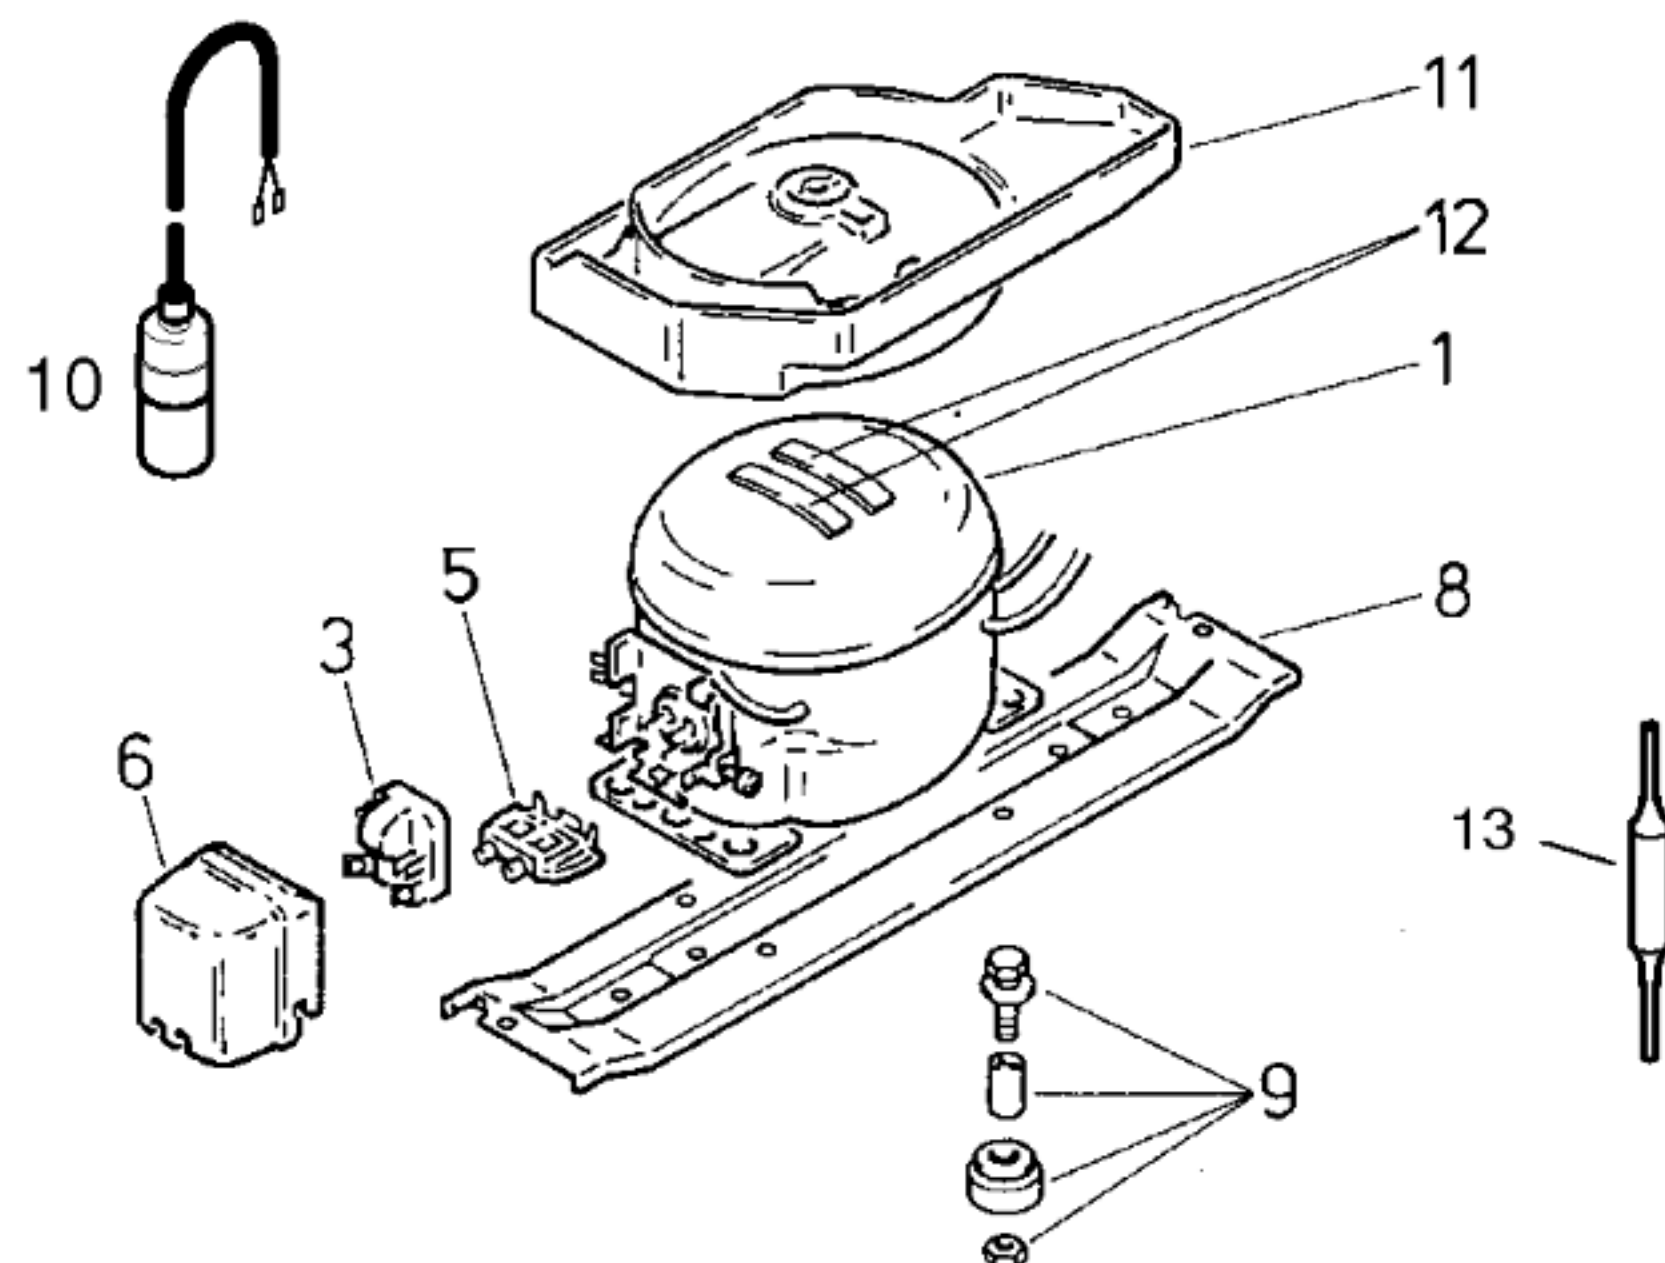

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Matsushita	
Typ/Type		NLE11KK2	DC 110E	
Förderleistung/Delivery/Débit		l/h	2074	1974
Anlaufstrom/Starting current/Cour de démarrage		A	10,9	
Widerstand/Resistance/Résistance Ha/main/prin		Ω	12,7	
Hi/aux		Ω	18,0	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	106	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω	1650	
Spannung/Voltage/Tension		V	220	

	V01,V02,V04	V03	
Pos.	Danfoss	Matsushita	
	NLE11KK2	DC 110E	
1	14 1750	14 2130	
2			
3	15 1055	17 2671	
4			
5	16 2549	16 6781	
6	15 1072	16 6782	
7			
8	21 4604	21 4604	
9	05 0166	05 0166	
10			
11	01 9017	01 9017	
12	01 9016	01 9016	
13			