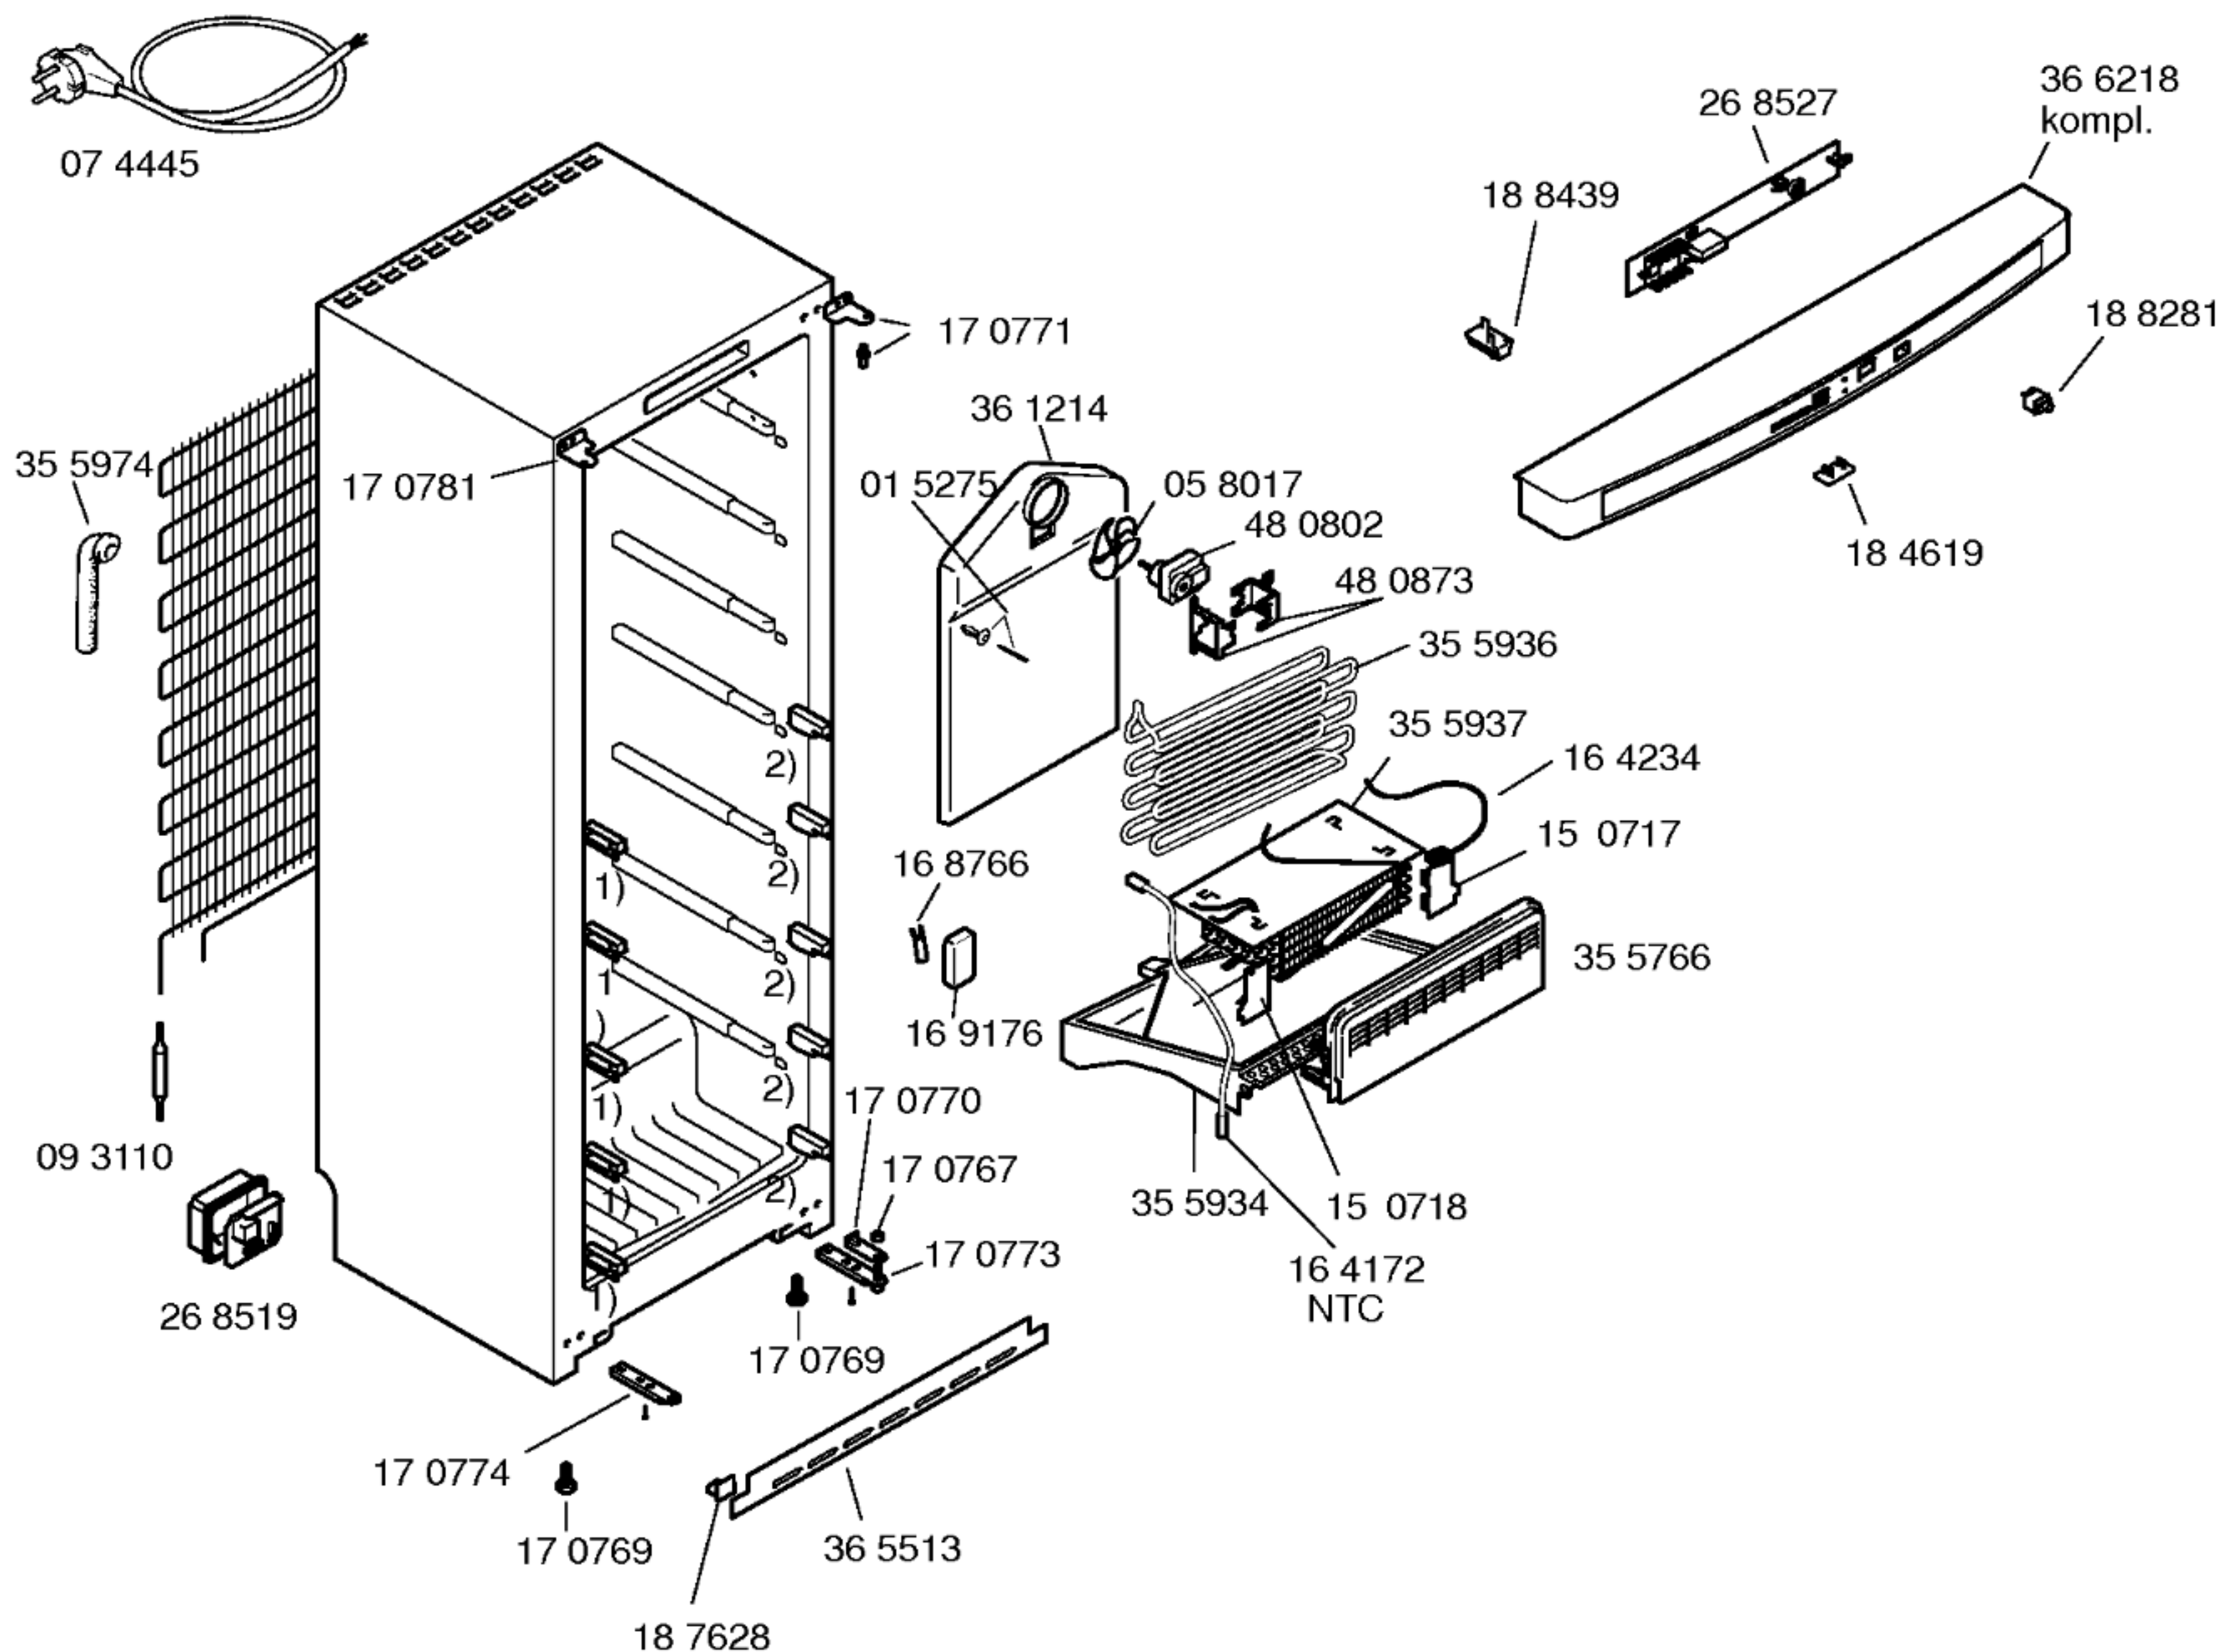


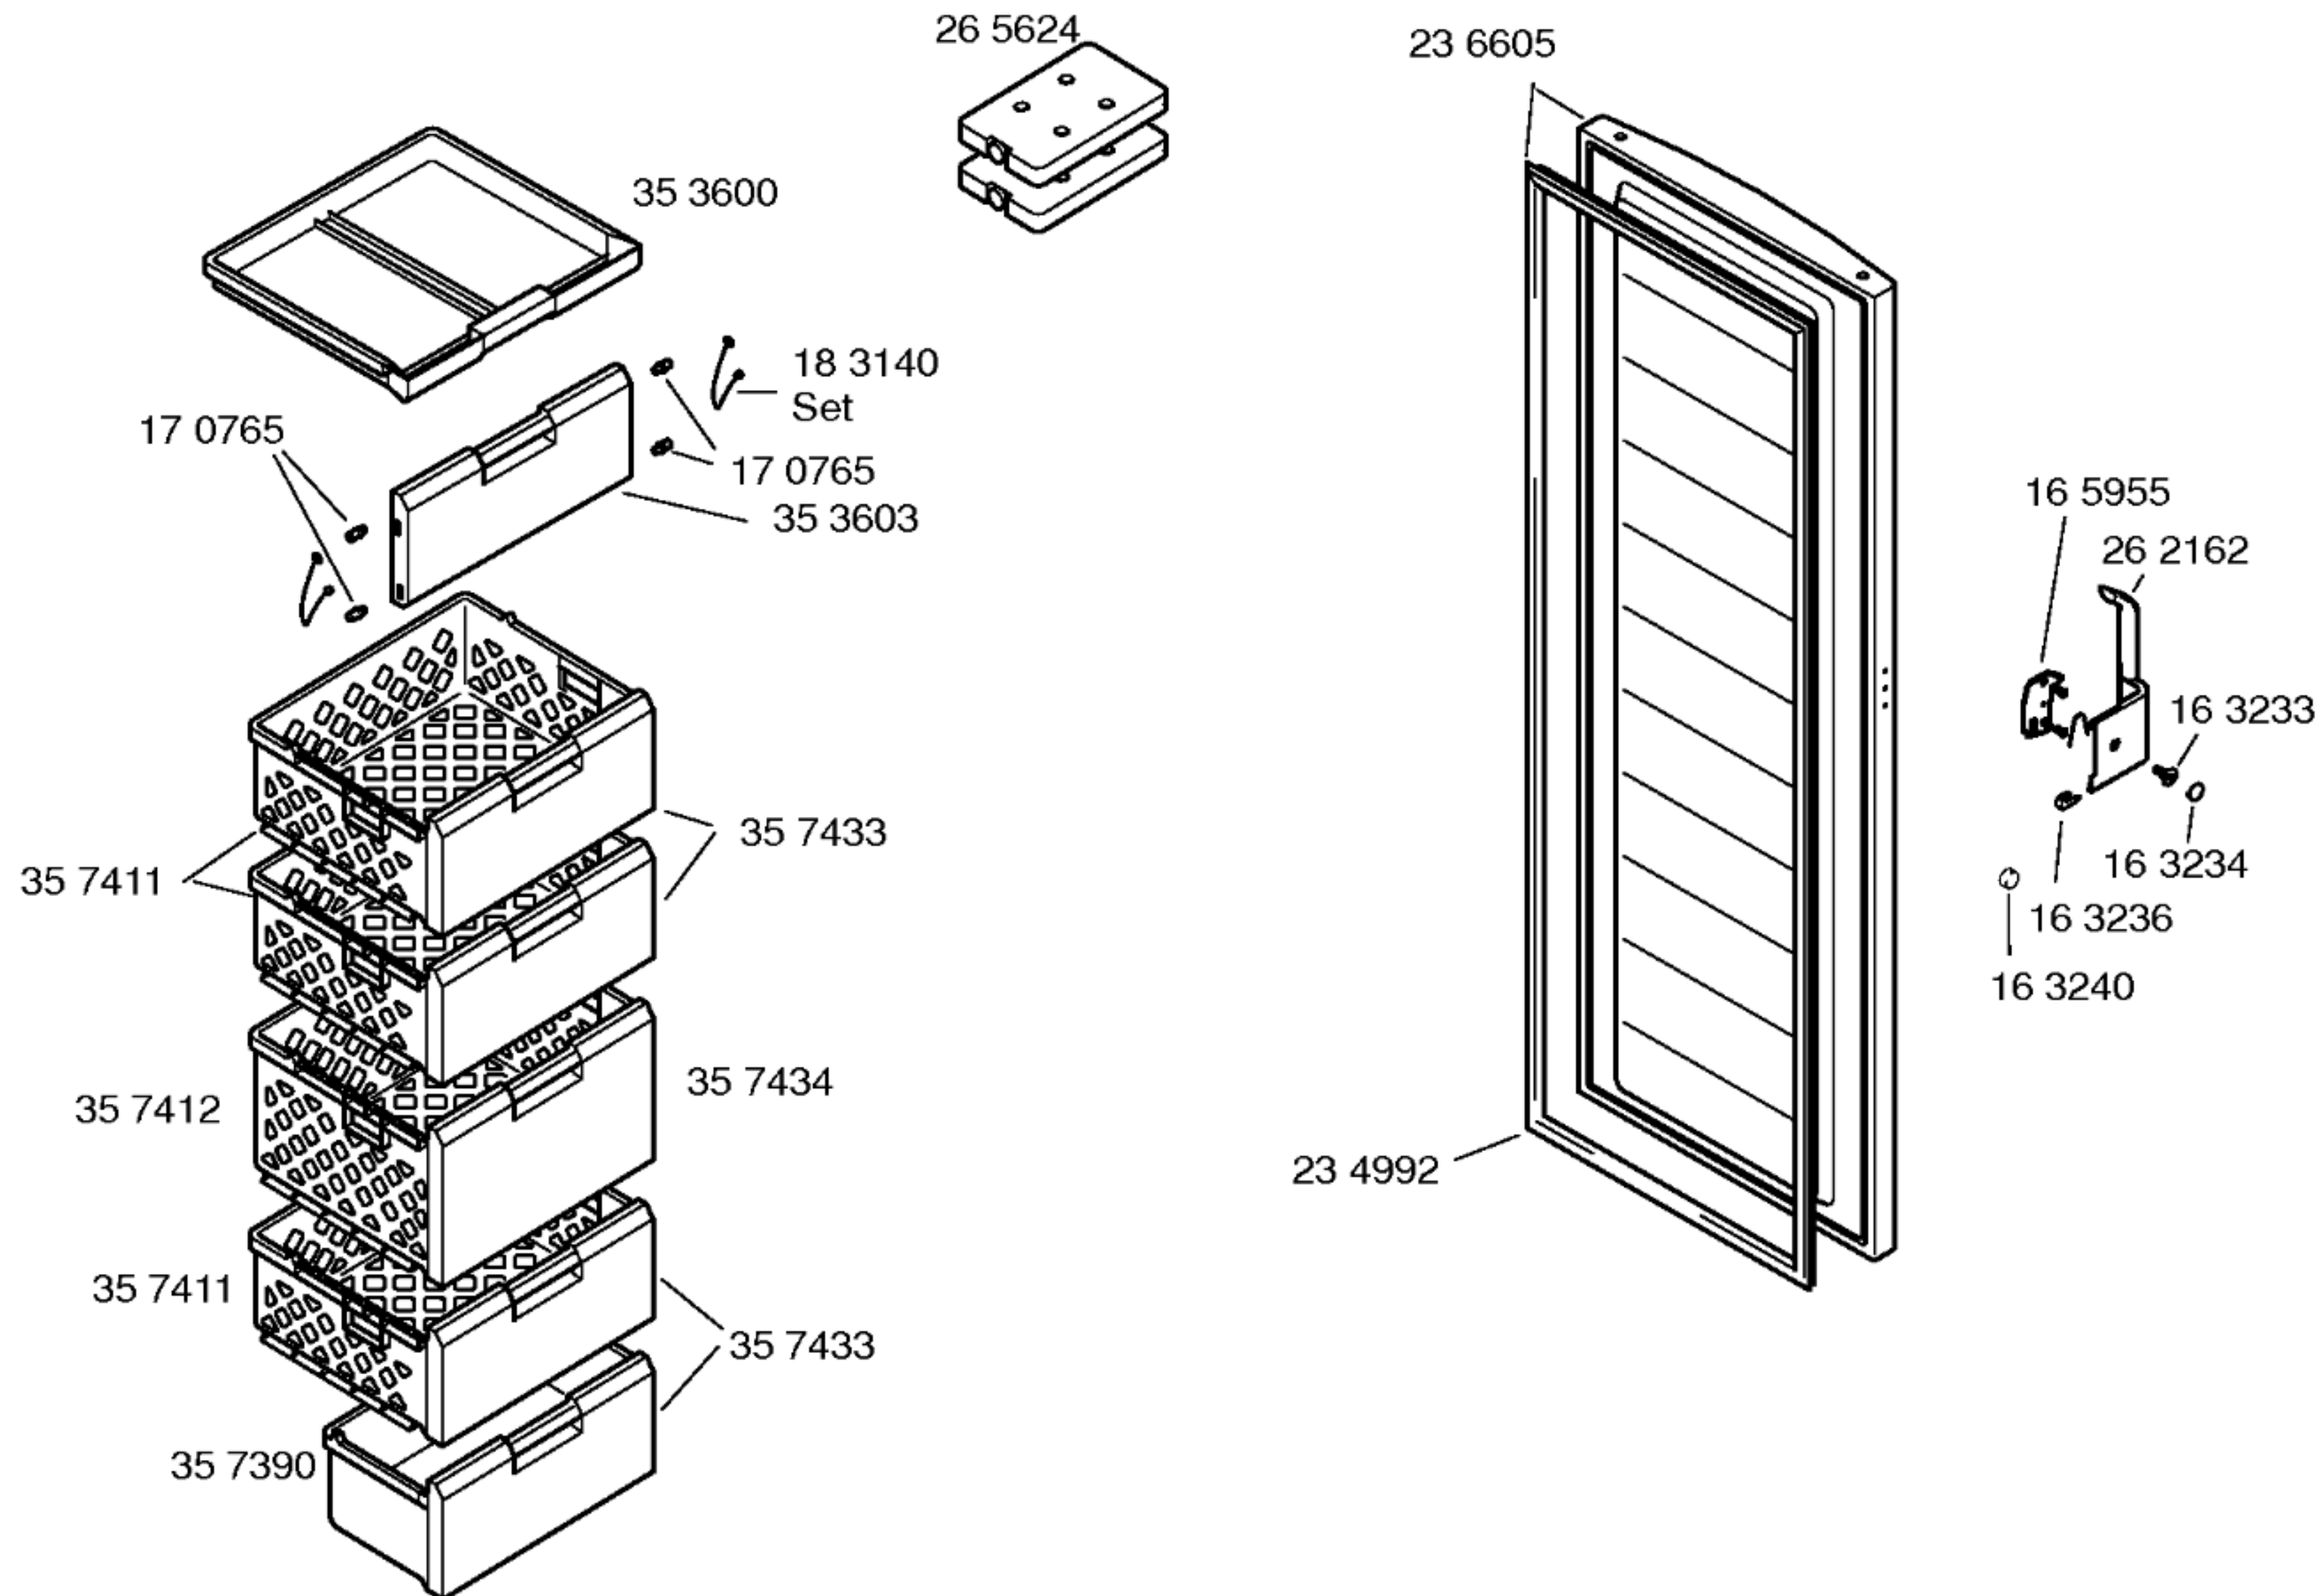
Mat. – Nr. –Konstante
3740

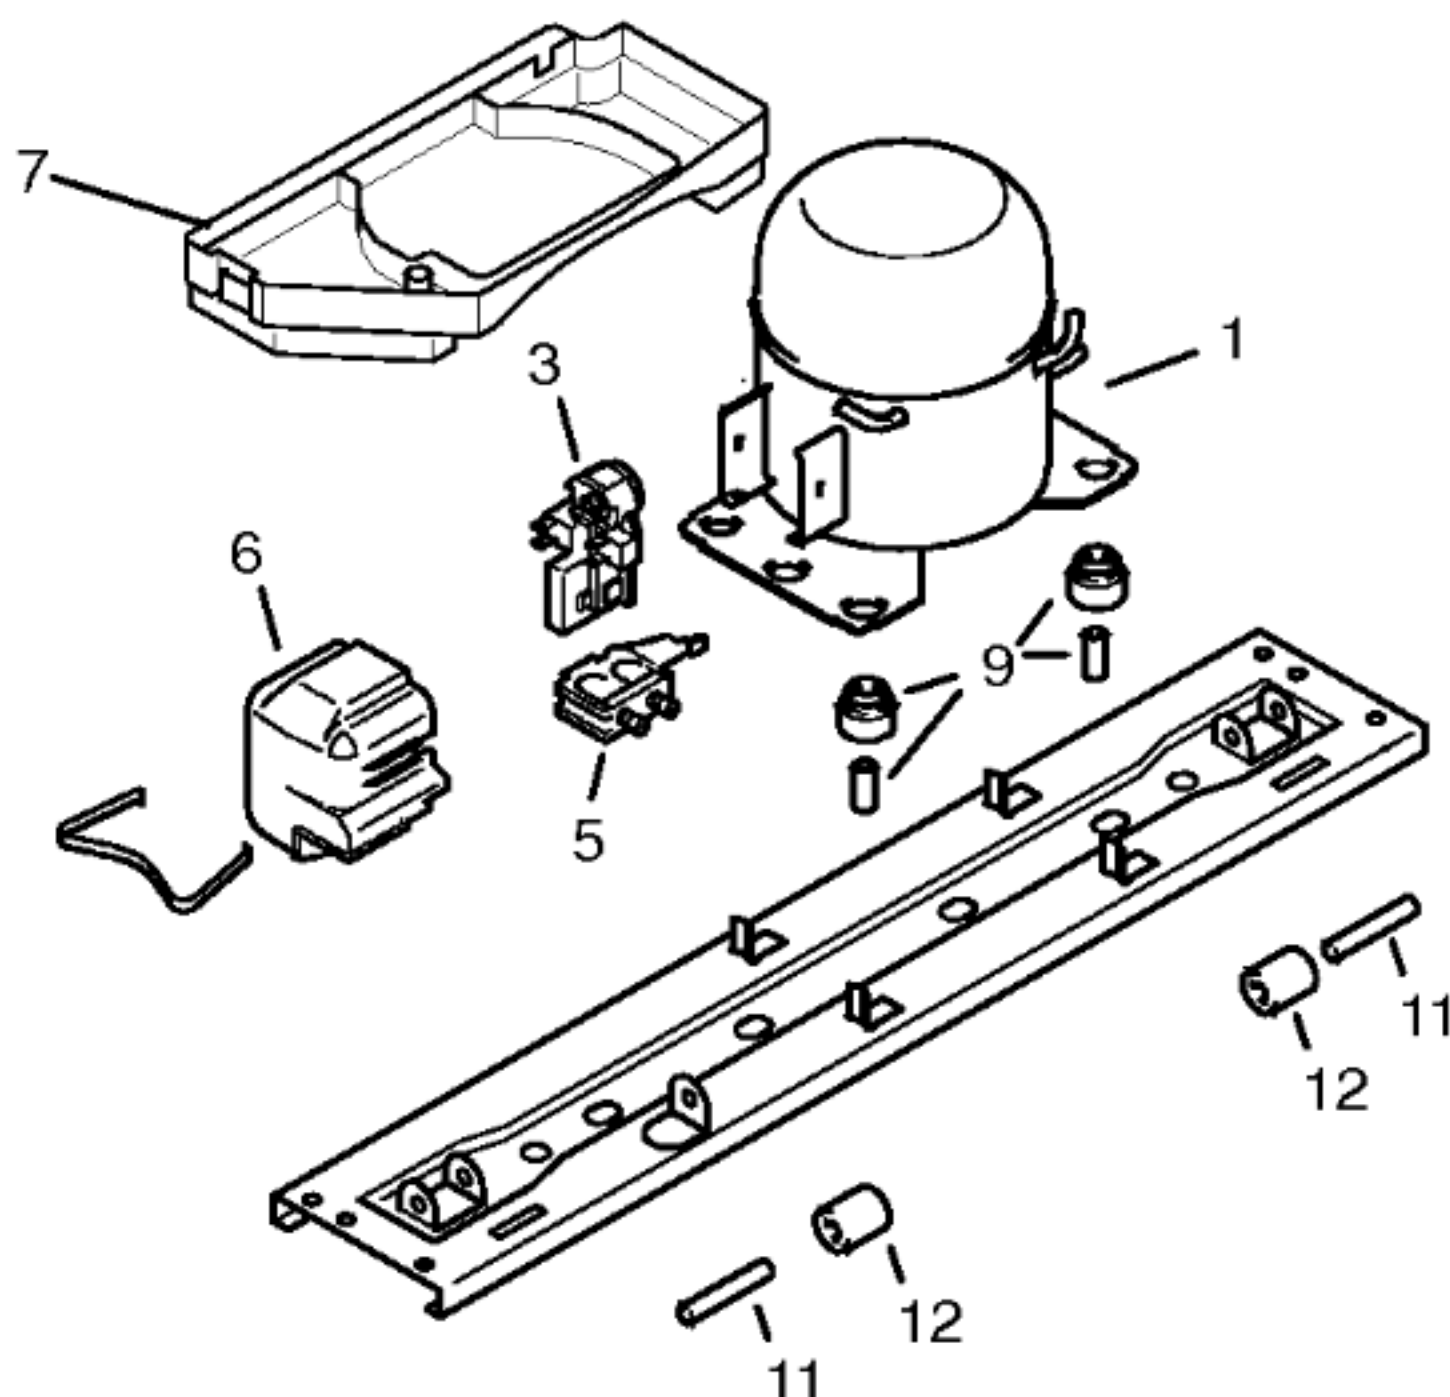
Gebrauchsanweisung
58 0892
(D,GB,F,I,NL,E,P)
58 0893
(DK,N,SF,S)

Montageanleitung
58 0241
(D,GB,F,I,NL,DK,N,
SF,S,E,P,TR,GR)

Beistellsatz
26 5629

- 1) 17 1455
- 2) 17 1454

Mat. – Nr. – Konstante
3740

Mat. – Nr. – Konstante
3740

	V01		
	Danfoss		
Pos.	NLE15 KTK		
1	14 2162		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	09 6212		
8			
9	05 0166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE15 KTK			
Förderleistung/Delivery/Débit		2637			
Anlaufstrom/Starting current/Cour de démarrageA					
Widerstand/Resistance/Résistance Ha/main/prinΩ					
Hi/aux Ω					
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values "warm"		-19 -20			
Valeurs de commutation "kalt"		-23 -24			
		-9 -14			
Füllmenge/Fill.quantity/Charge R600a		*			
Anschlußwert/Conn.load/Puiss. connectée W					
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance Ω		288		240	
Leistung/Power/Puissance W		200		24	
Ventilator/Blower/Ventilateur		560			
Widerstand/Resistance/Résistance Ω					
Raumtemperaturfühler 2%		C	K	C	k
		+10	9,9	-18	43,3
		+5	12,7	-22	54,6
		+0	16,3	-26	69,4
Widerstand NTC-Fühler 1%		°C	kΩ	°C	kΩ
		-1	17,3	-15	36,5
		-9	26,2	-16	38,8
		-14	34,5	-19	45,9
		-20	48,6	-23	58,1
		-24	61,6		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance Ω					
Spannung/Voltage/Tension V					

* siehe Typenschild