


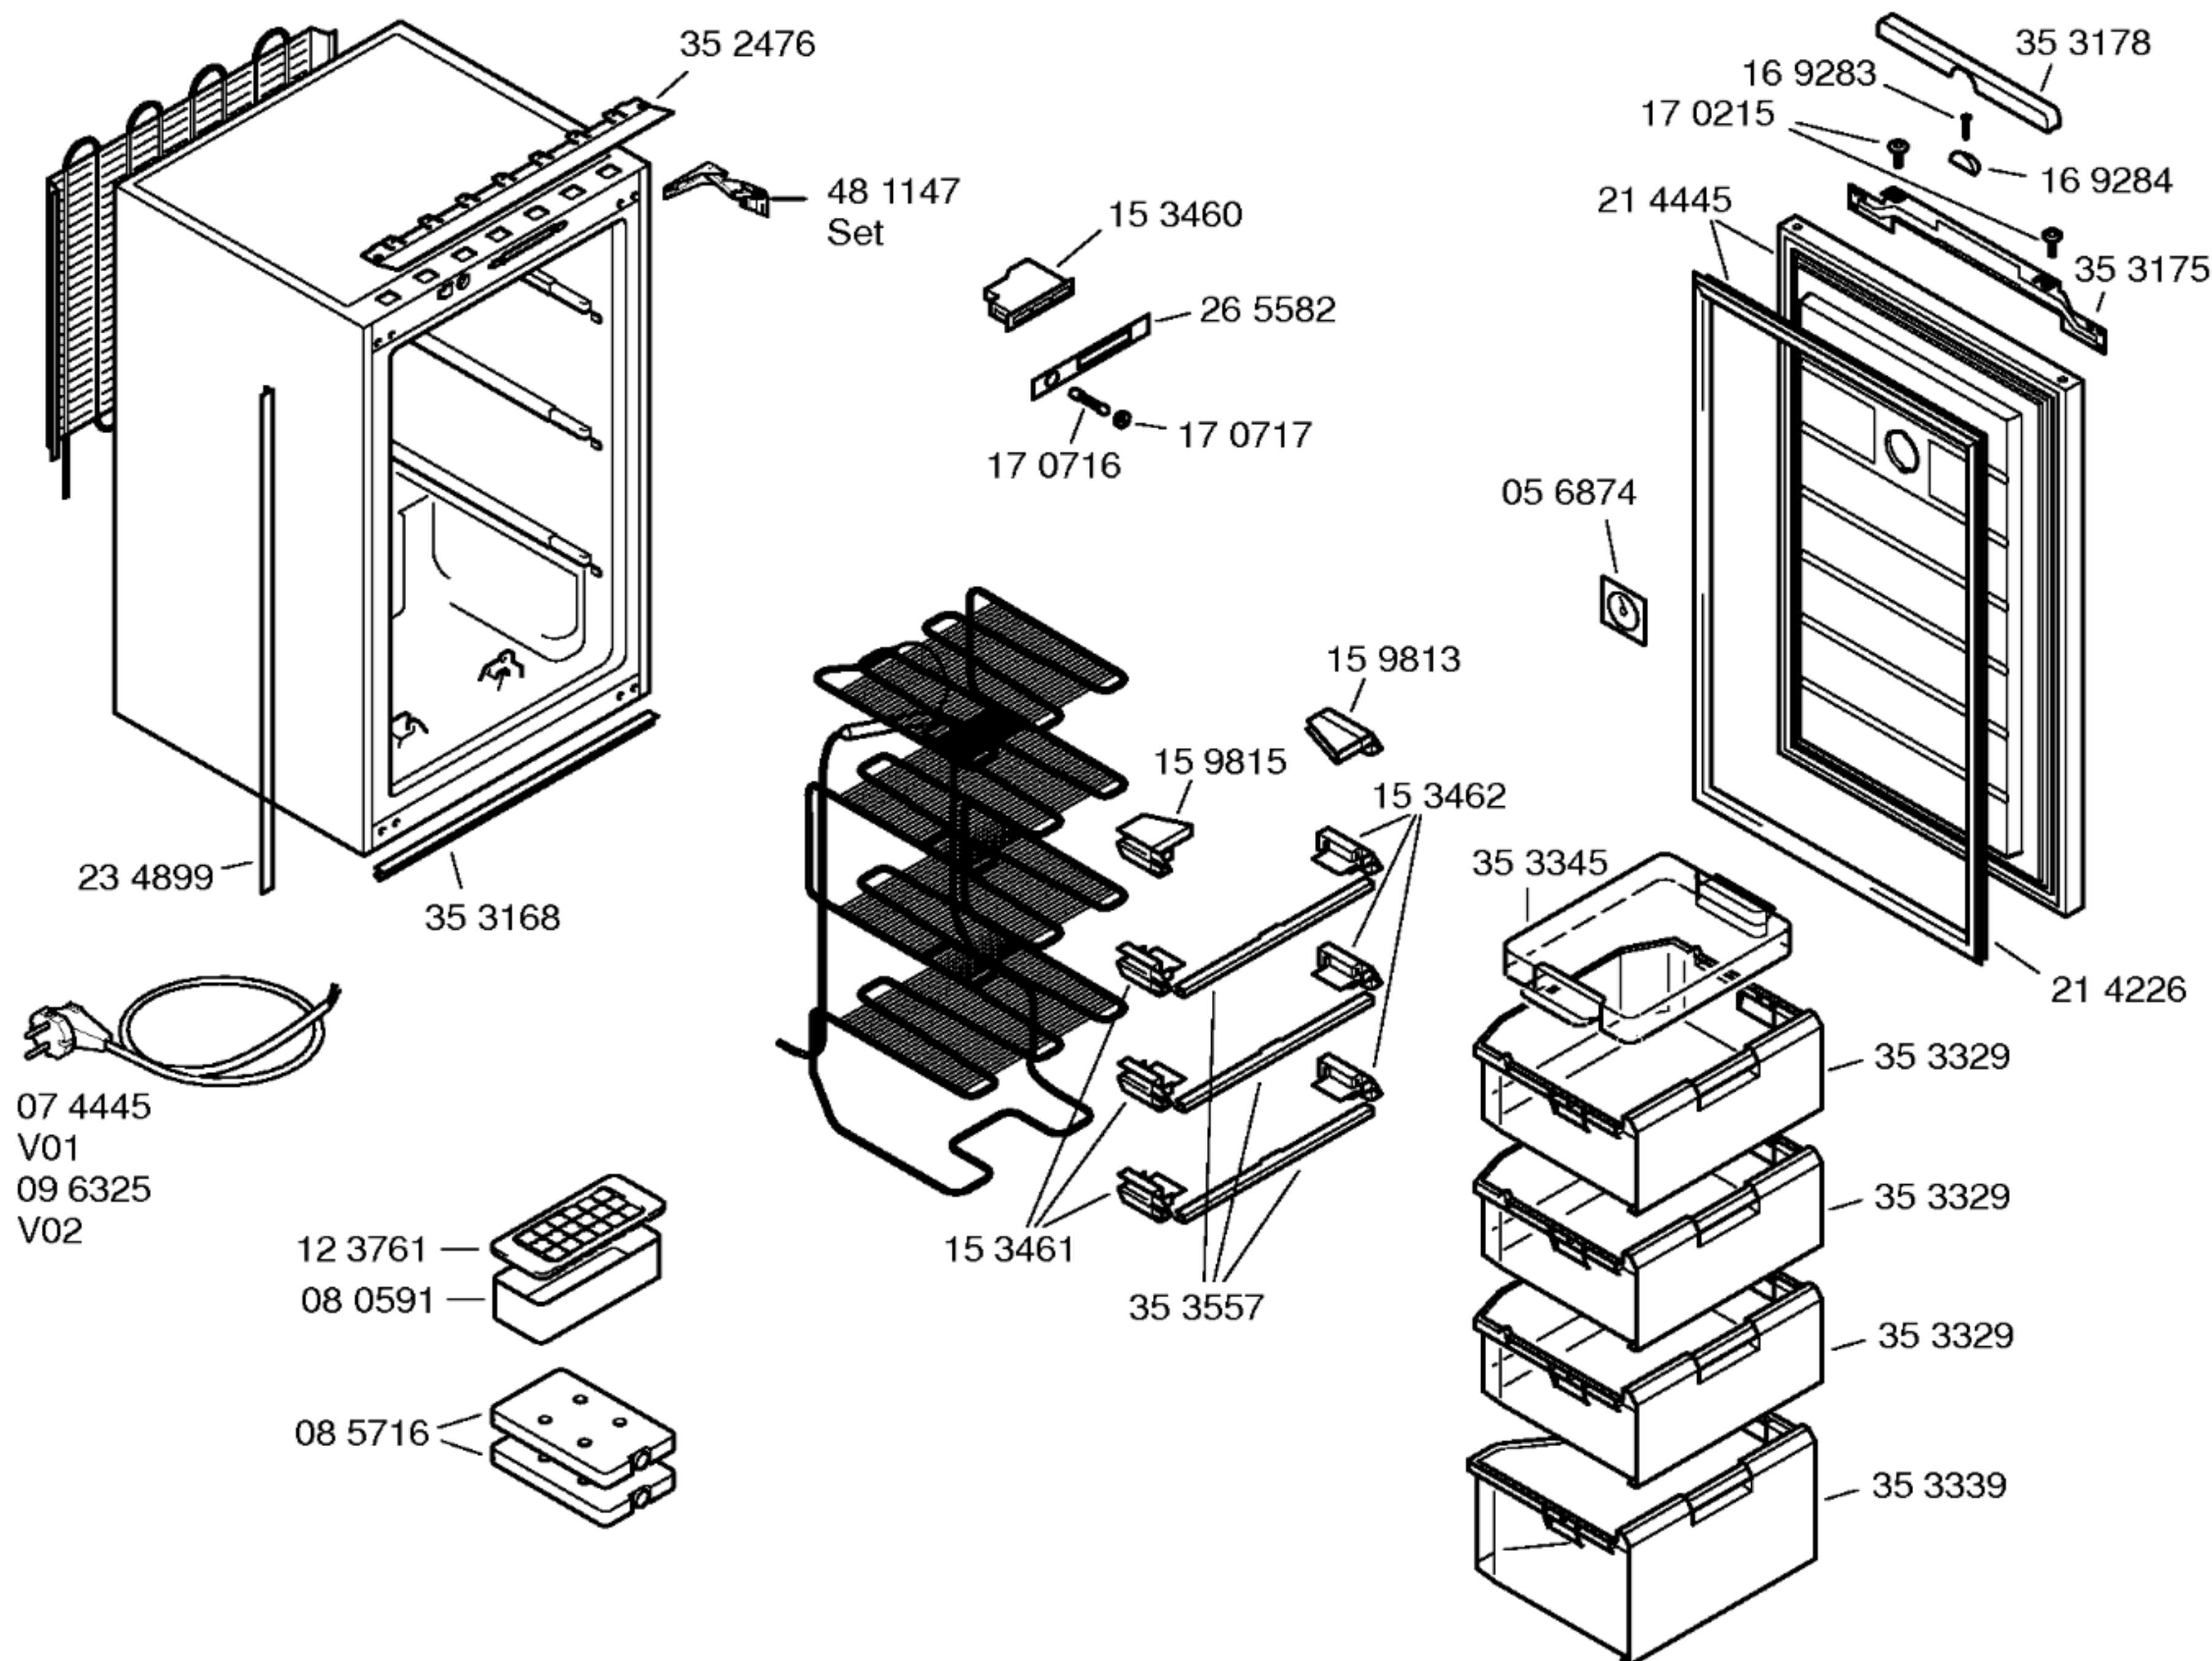


Gebrauchsanweisung
52 2707
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

Temp.-Regler
Rep.-Satz
26 5271

Mat. – Nr. – Konstante
3740

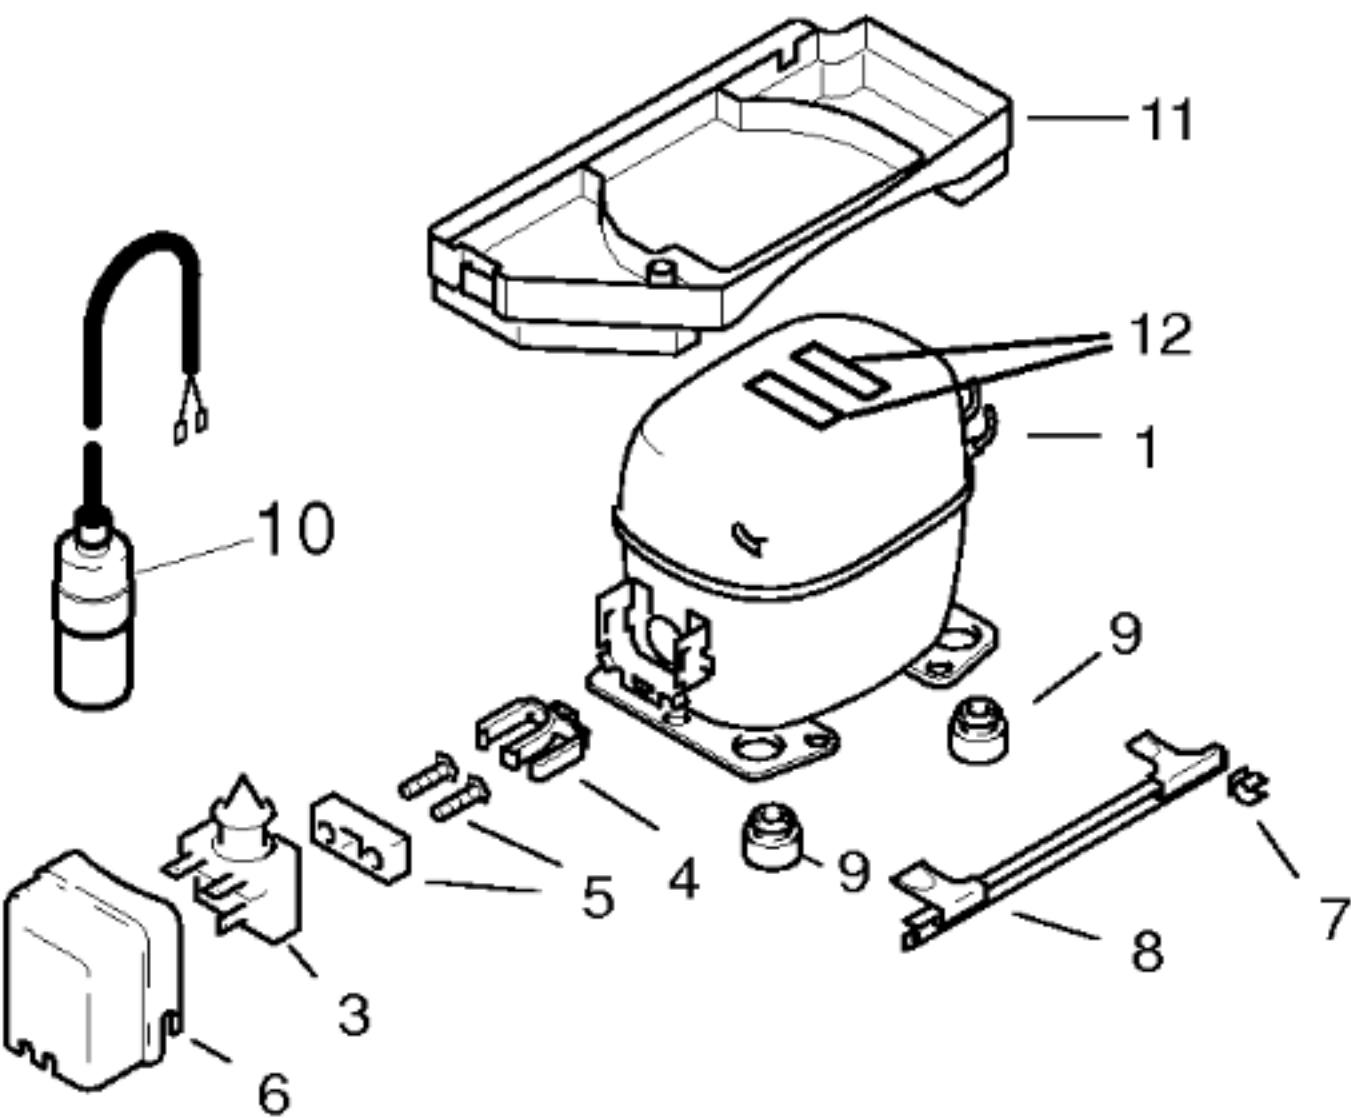

Pos.	V01–V02		
	Matsushita		
	ESS 60E		
1	14 2158		
2			
3	18 3589		
4			
5	18 3590		
6	18 3591		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita			
Typ/Type		ESS 60E			
Förderleistung/Delivery/Débit		l/h	1076		
Anlaufstrom/Starting current/Cour de démarrage		A	5,6		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω 30,6		
		Hi/aux	Ω 26,7		
Temp.–Regler/Thermostat		KER			
Typ/Type		RCO			
Regelstellung/Position		kalt	warm		
Schaltwerte/Switching values		ein"	–23,0	–15,0	
Valeurs de commutation		aus"	–31,0	–21,0	
		"alarm"			
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	63		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Temp.–Regler/Thermostat					
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			