
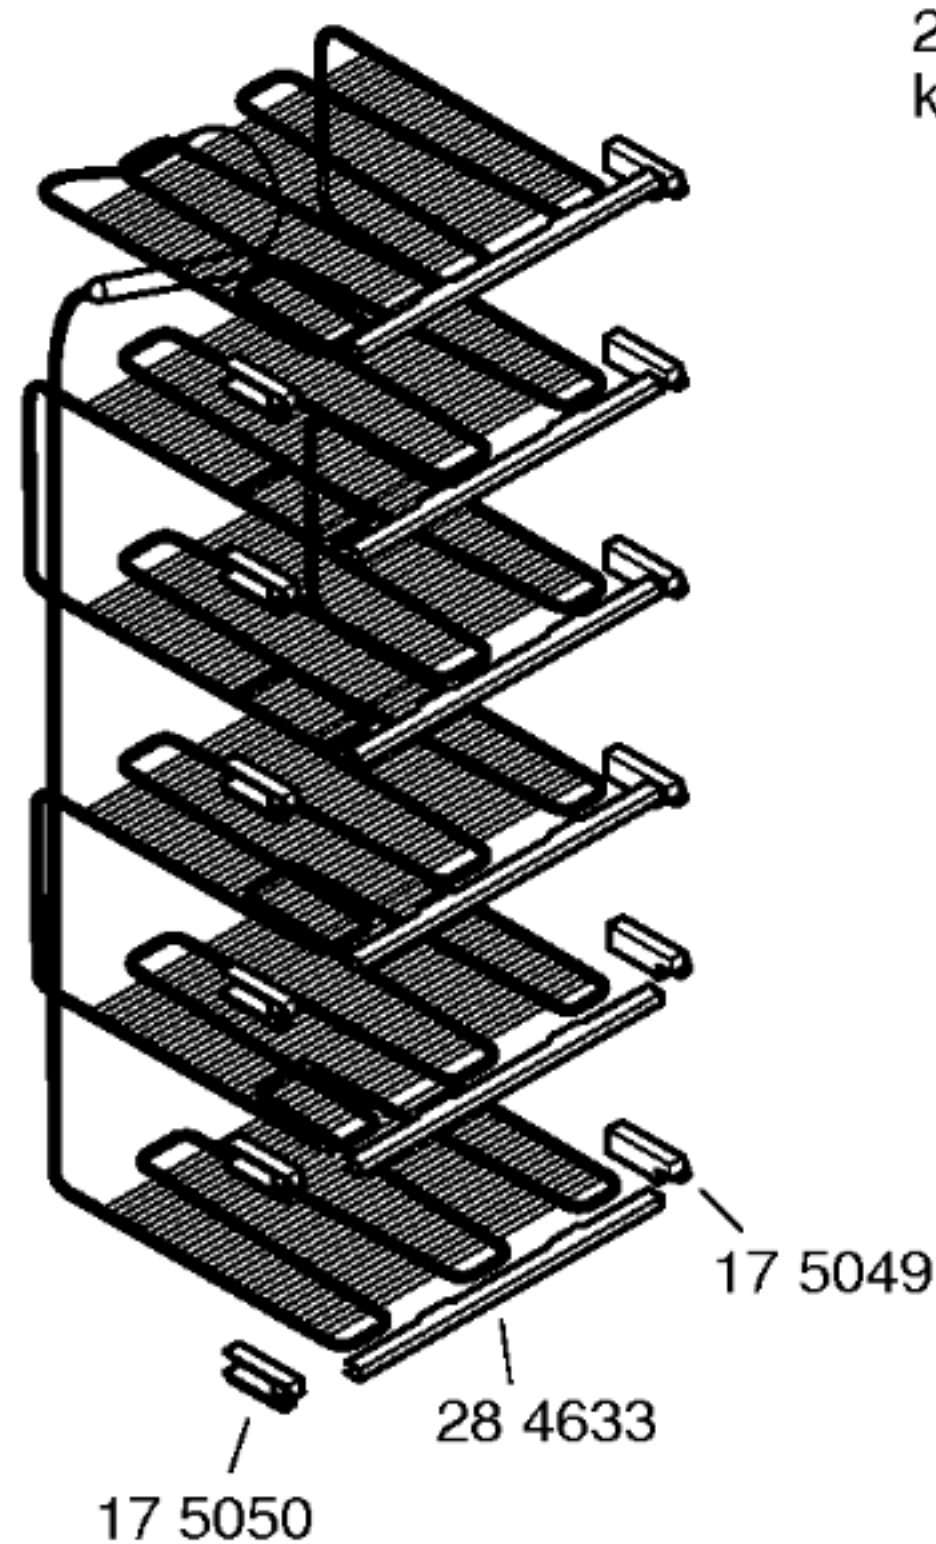
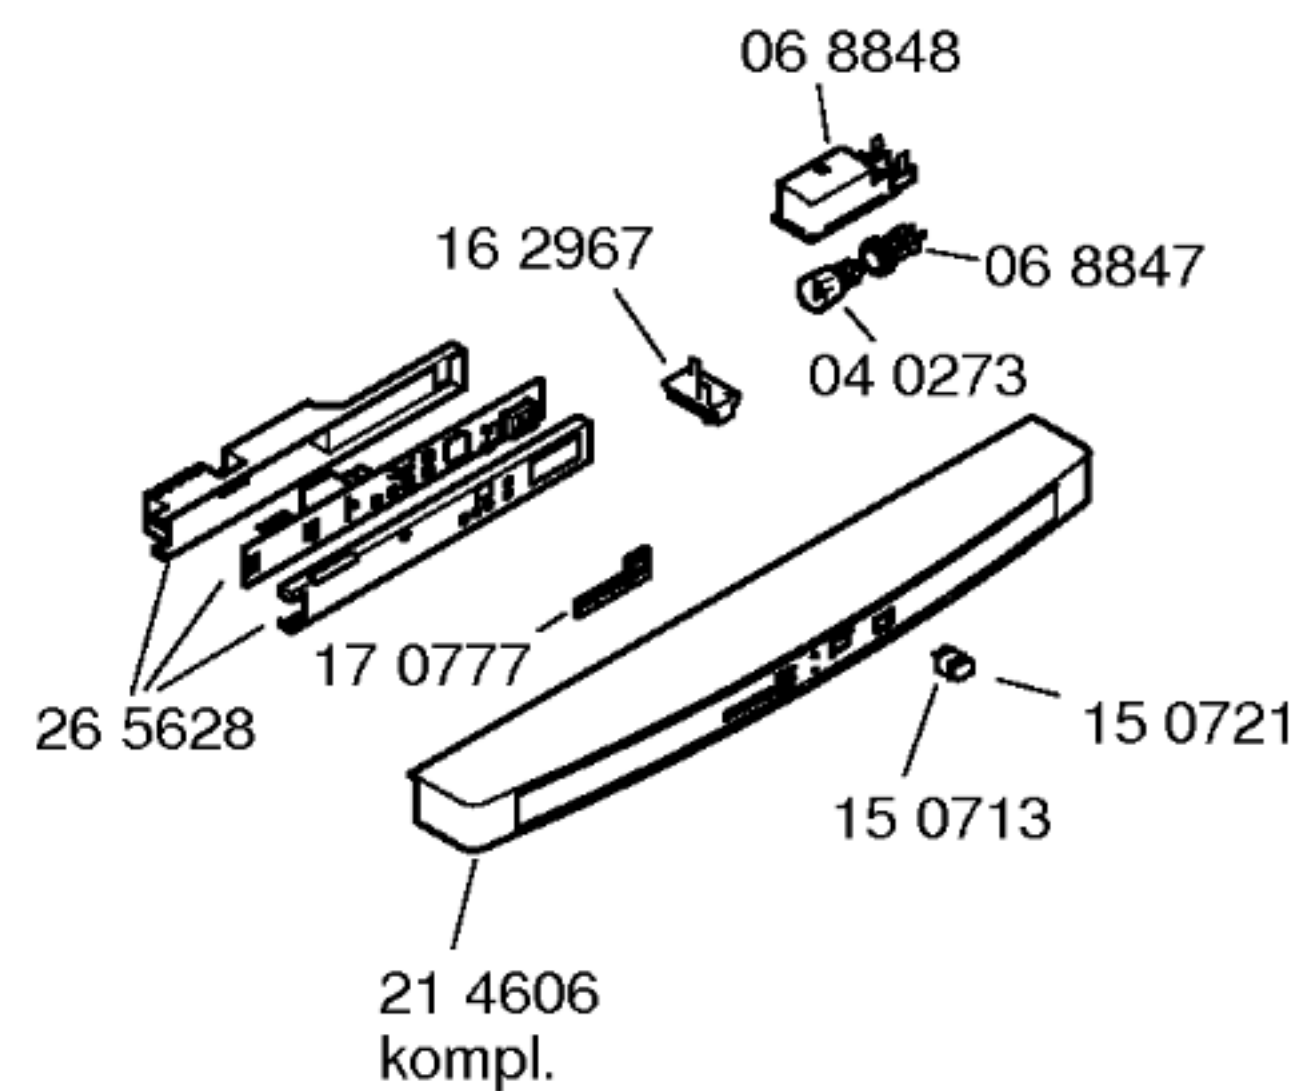



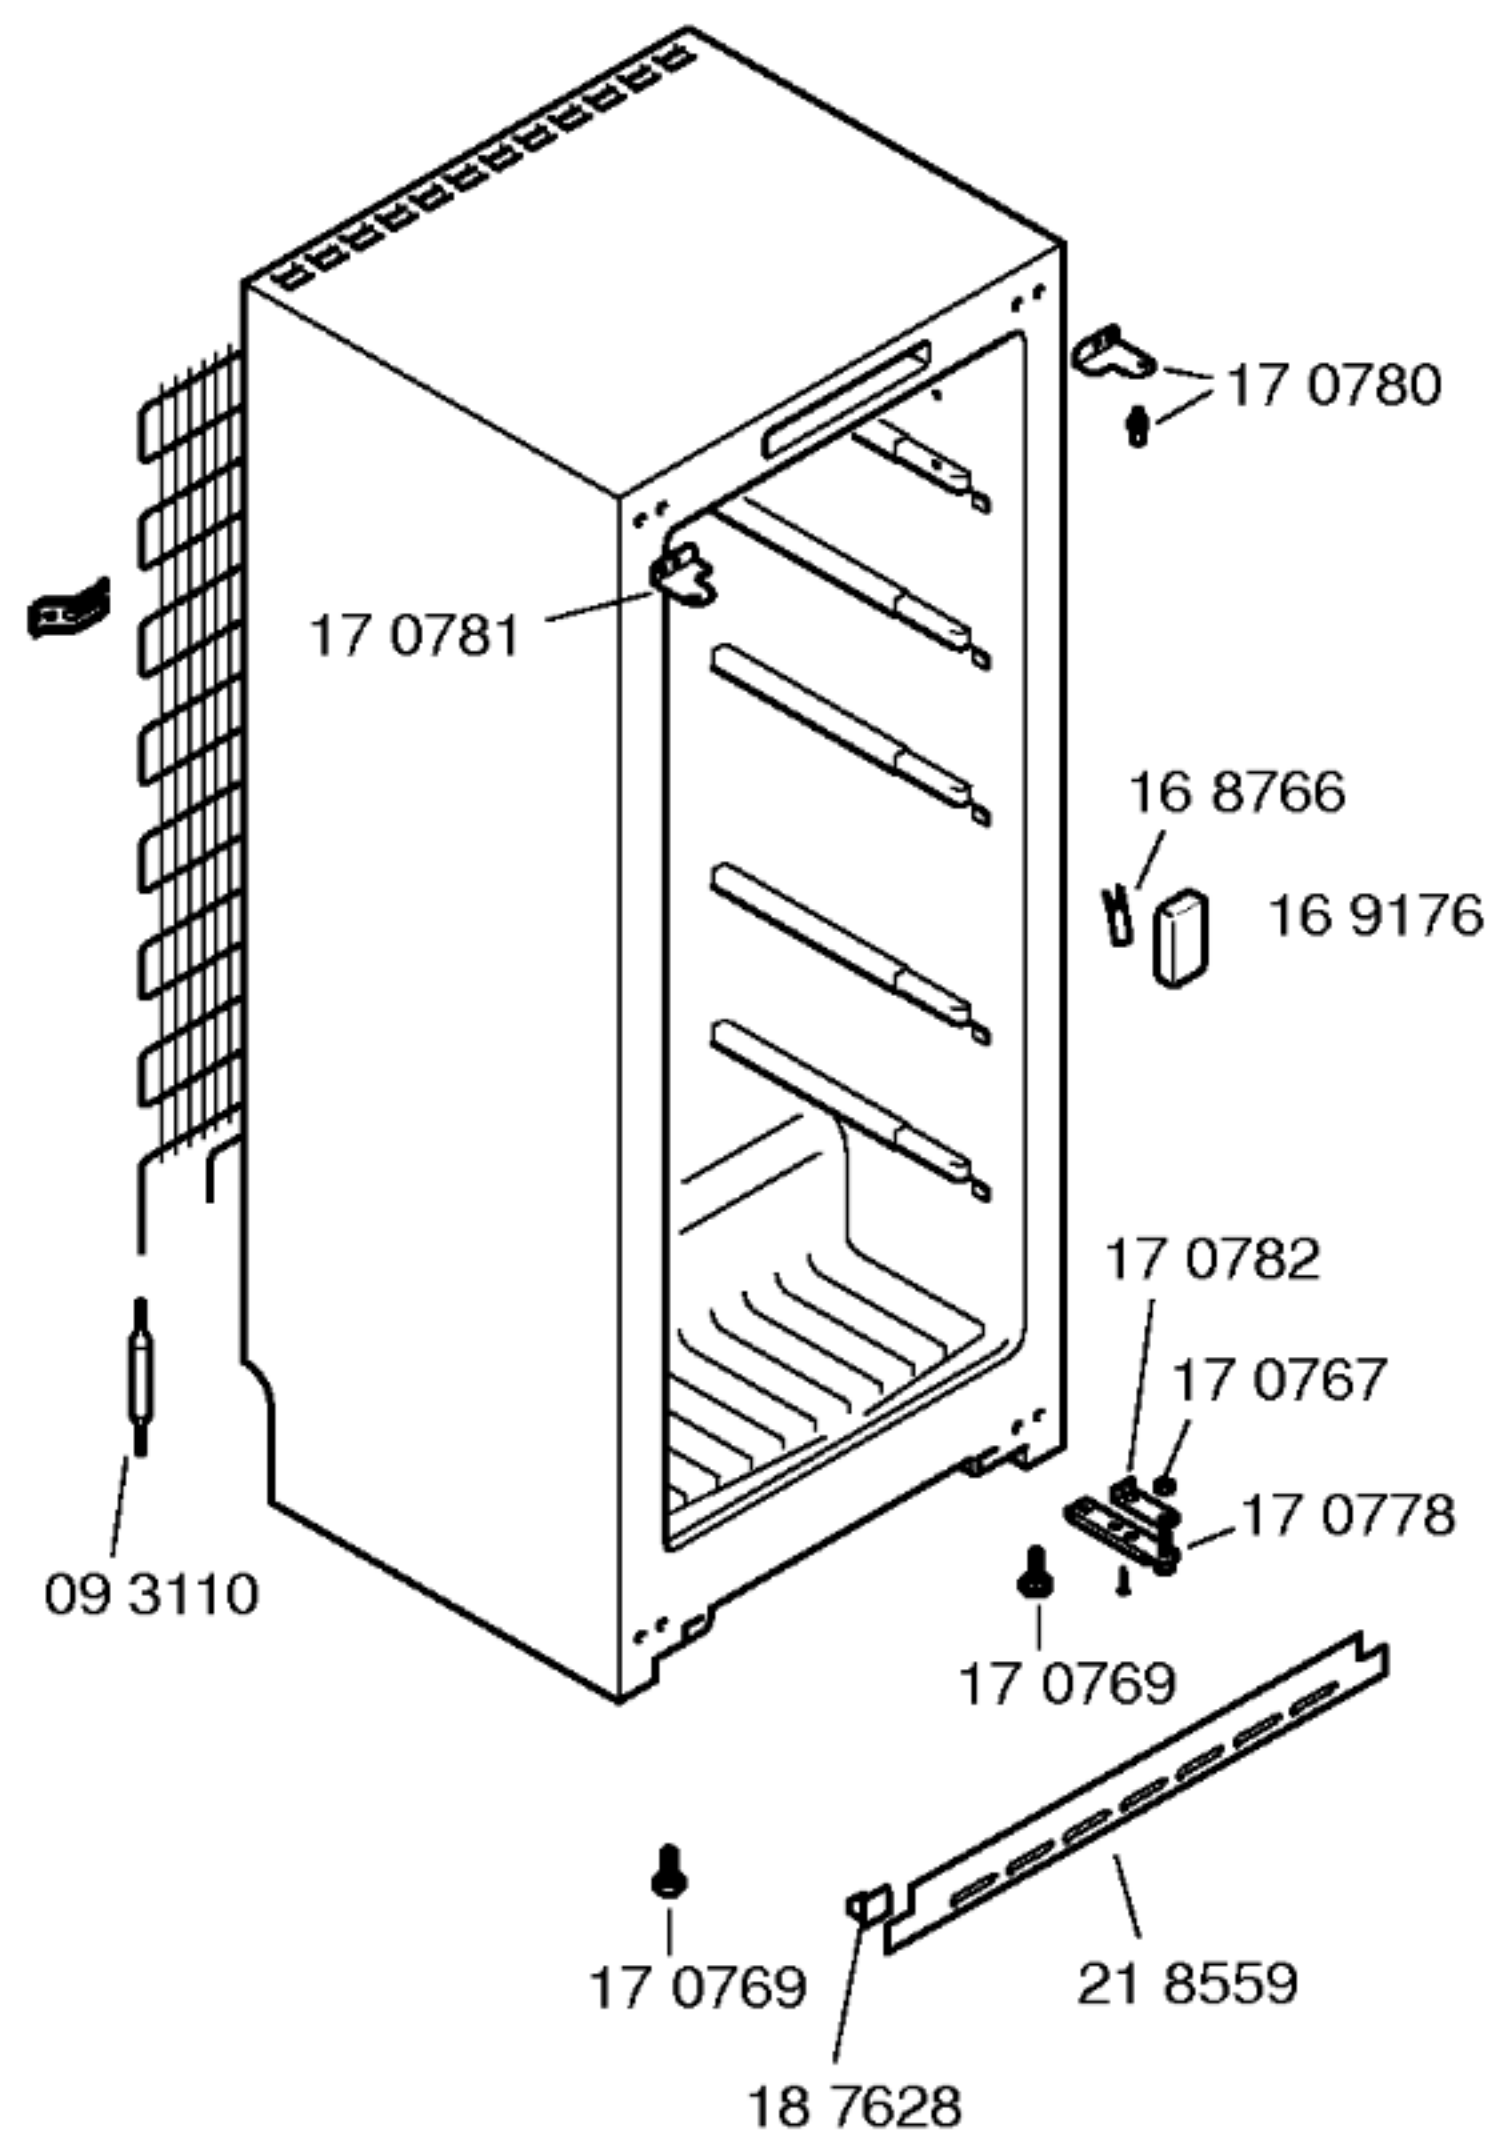



Gebrauchsanweisung
52 2791
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 9607

Side by Side
Beistellsatz zu KSR/KSK
48 1044

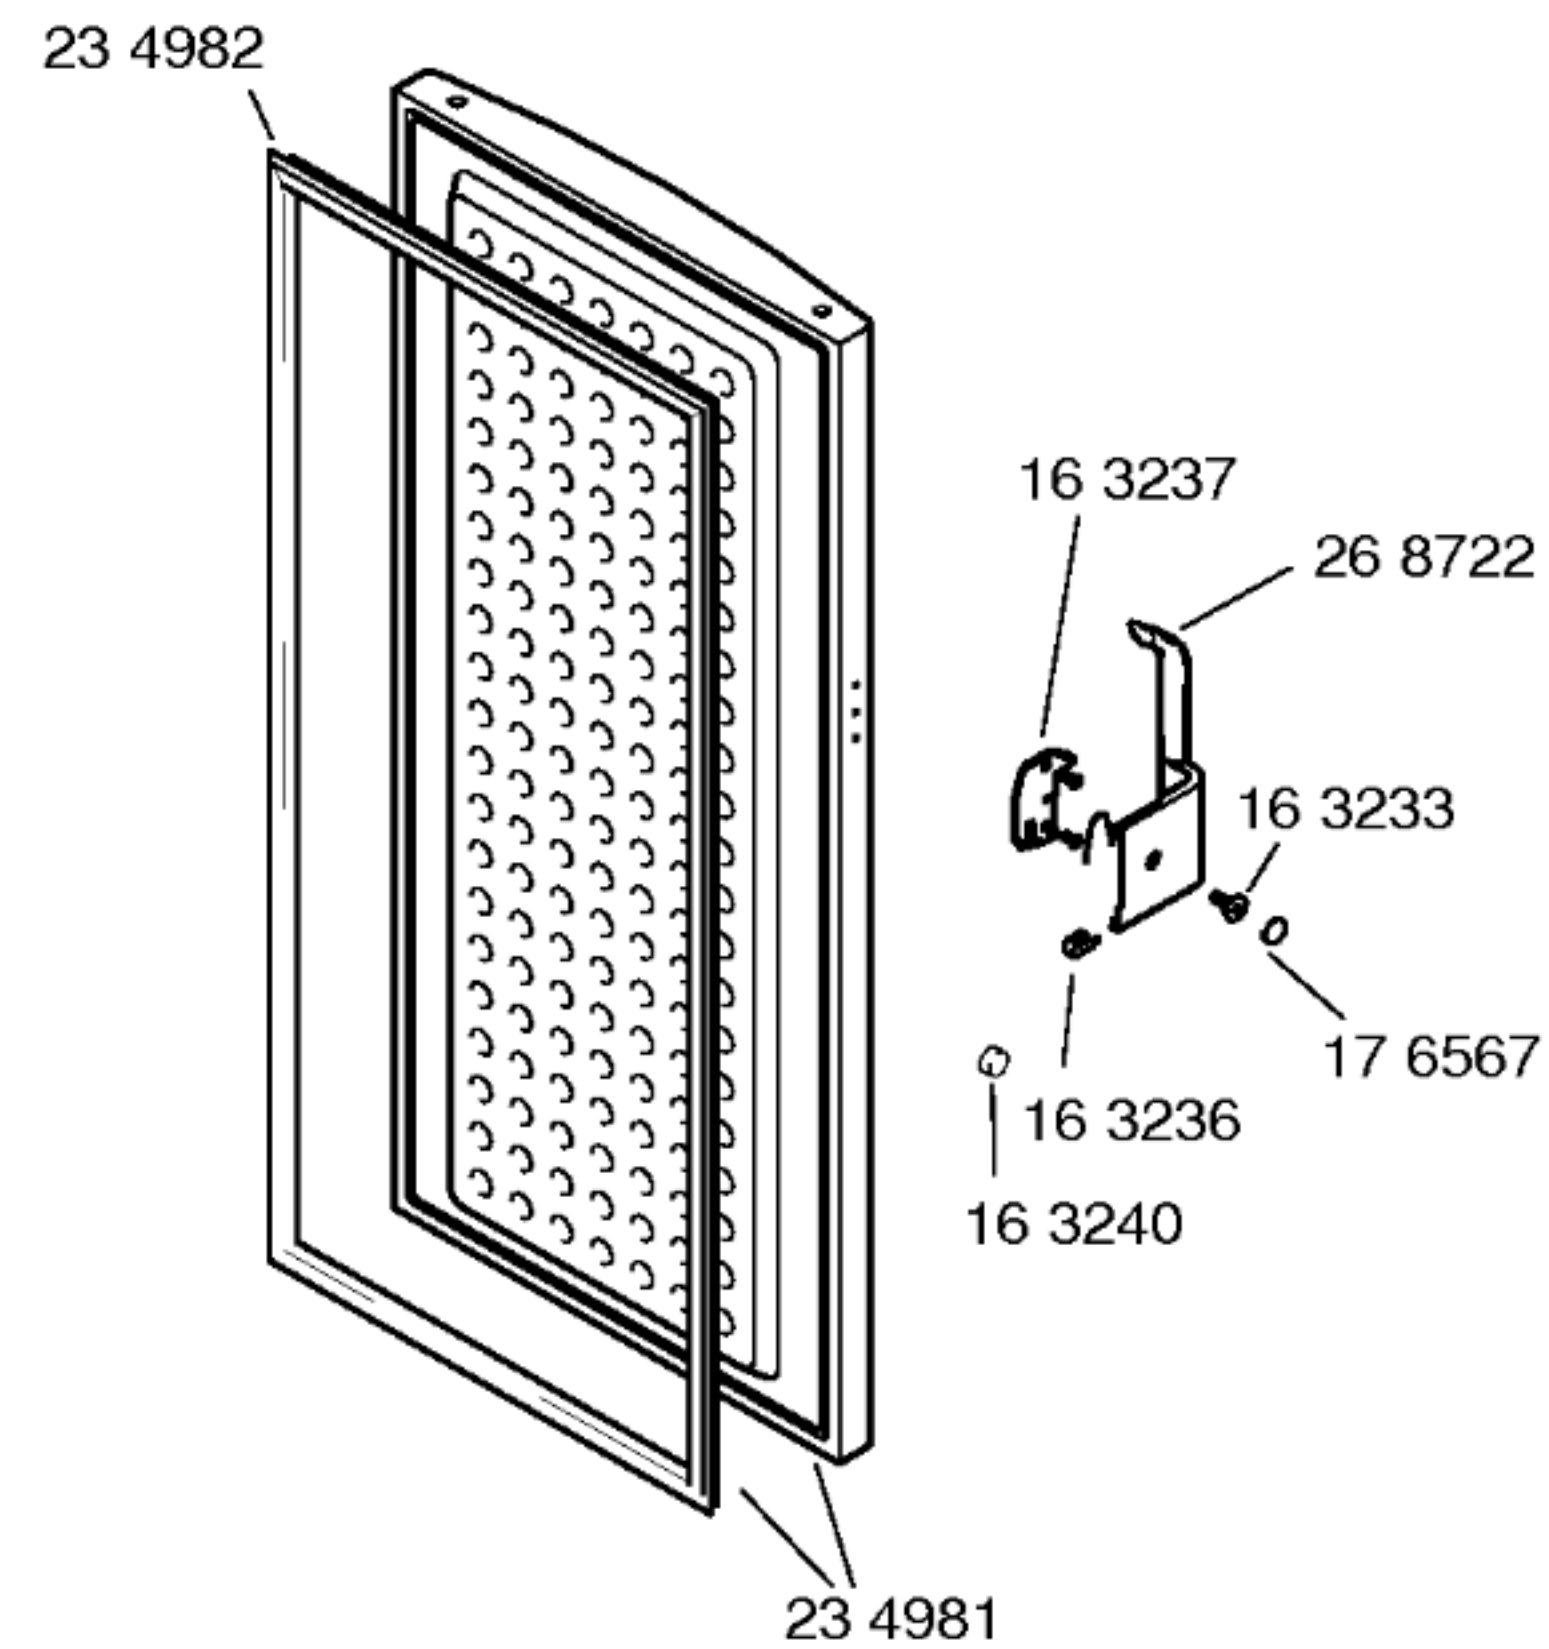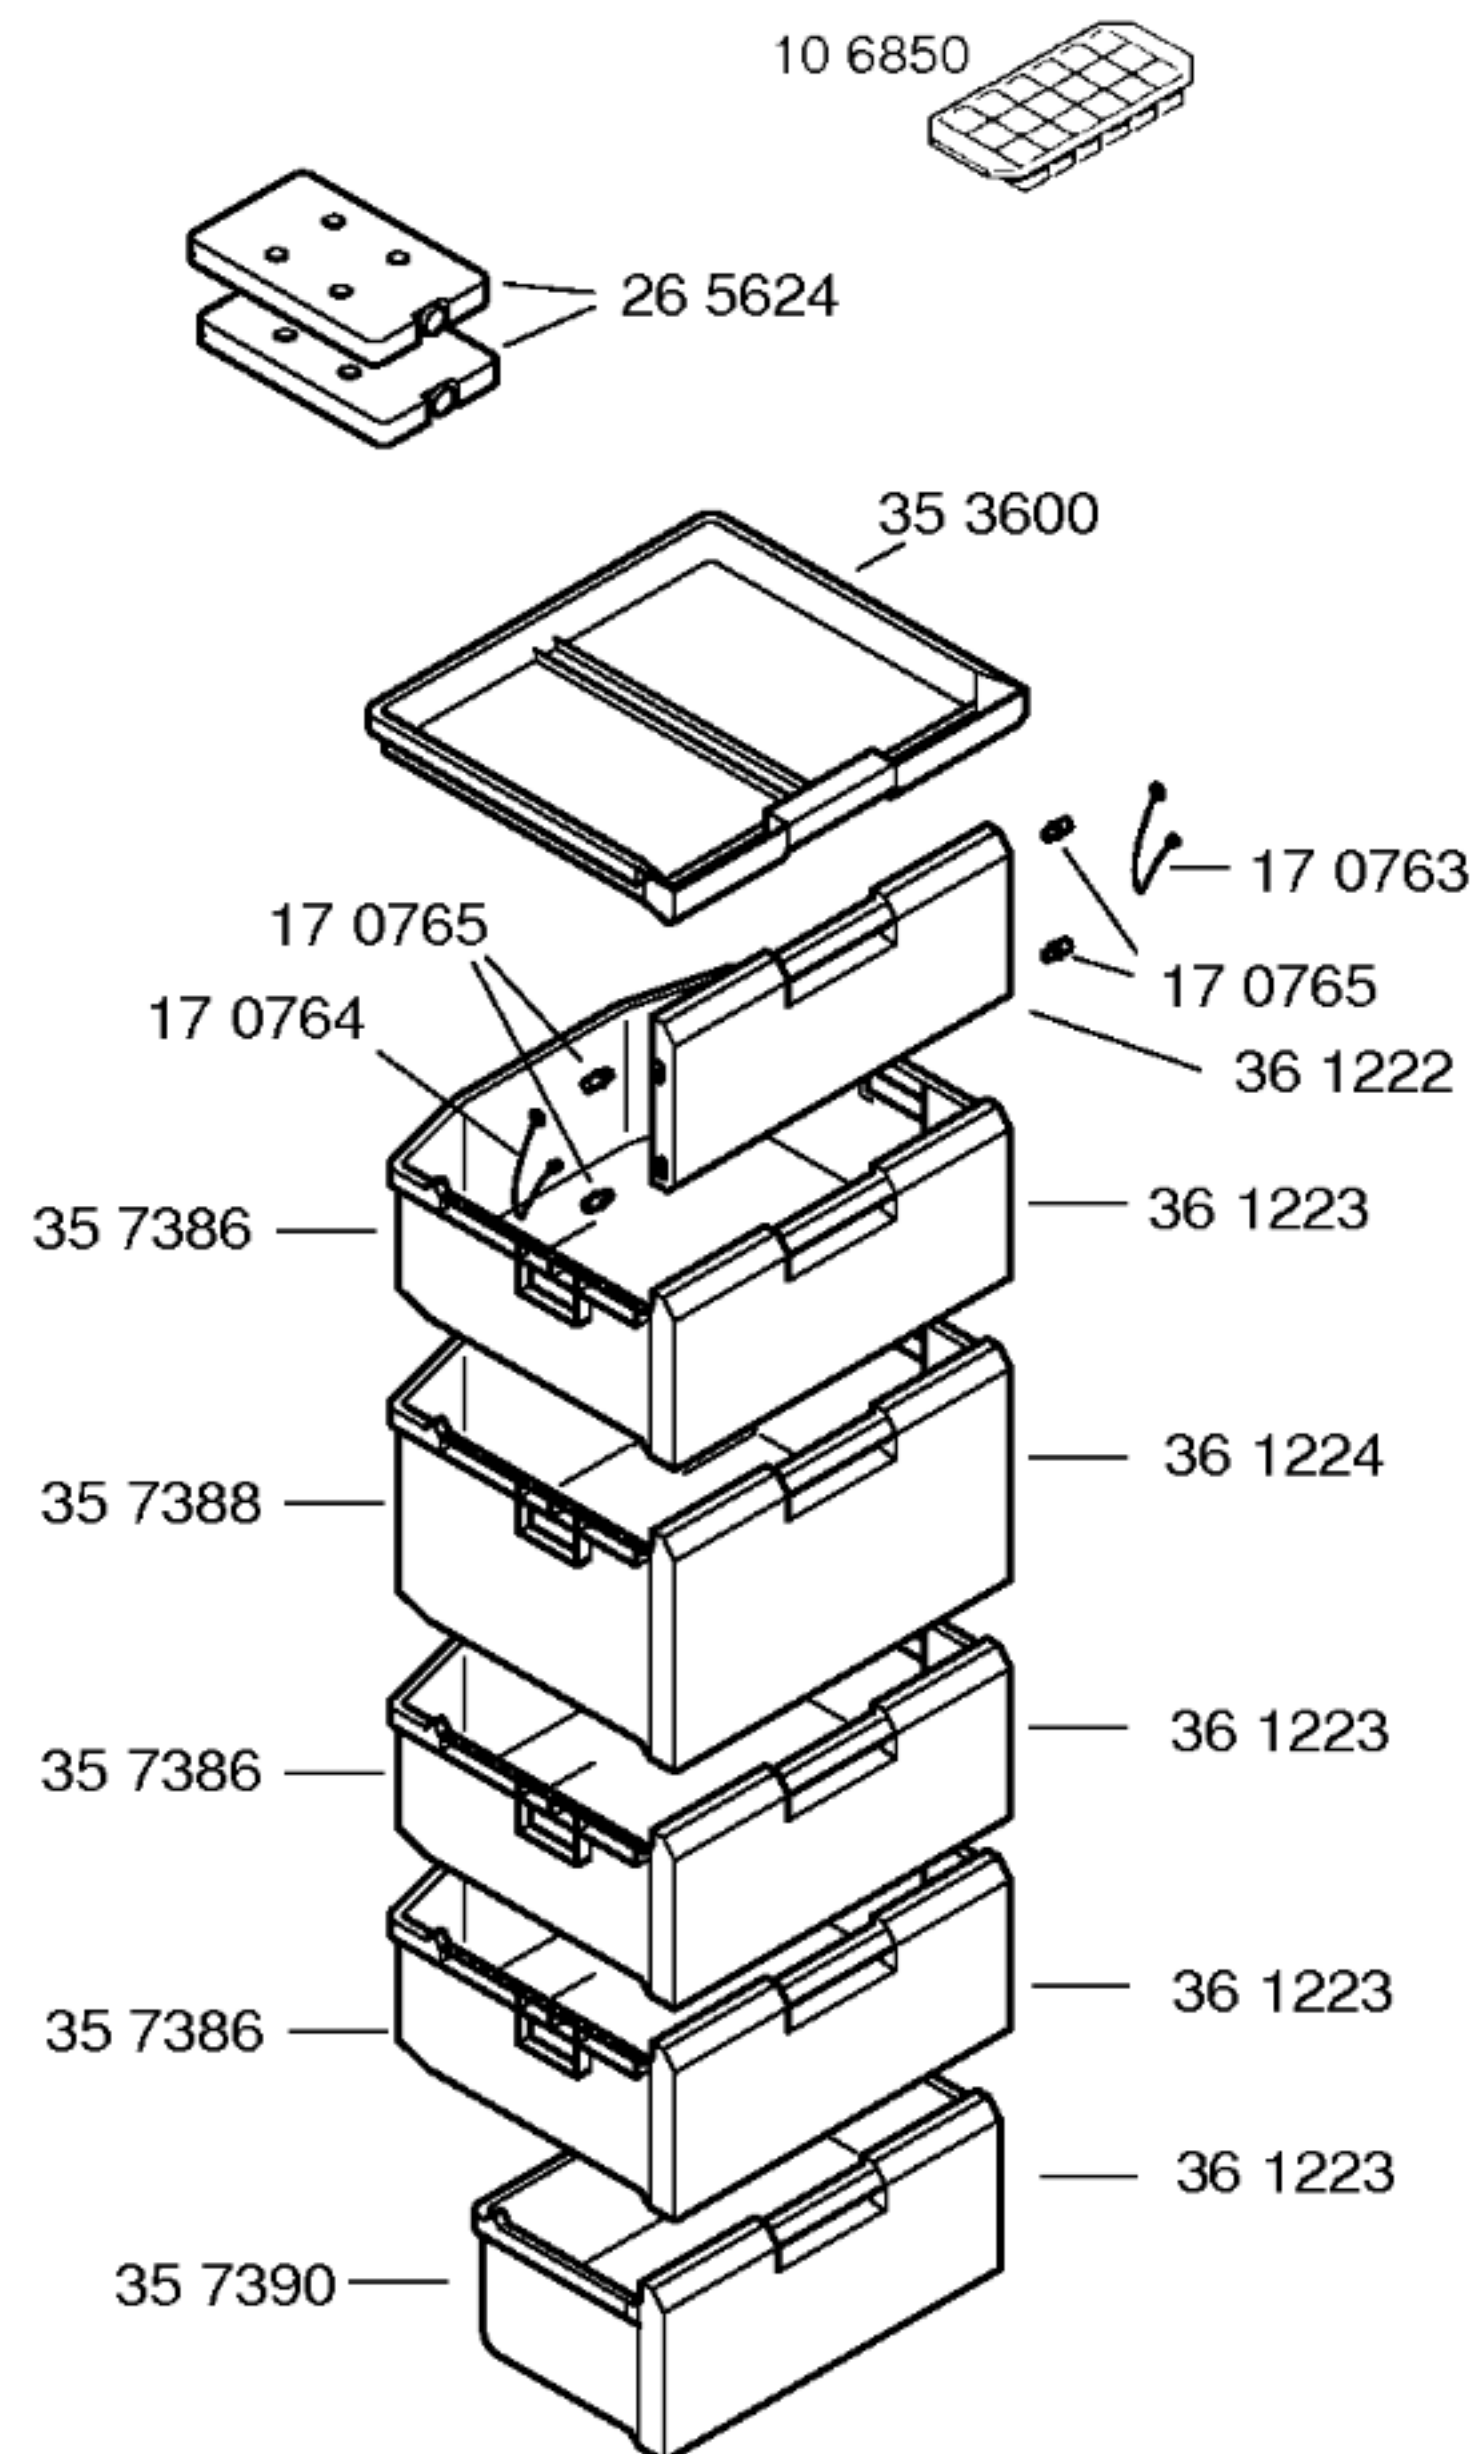

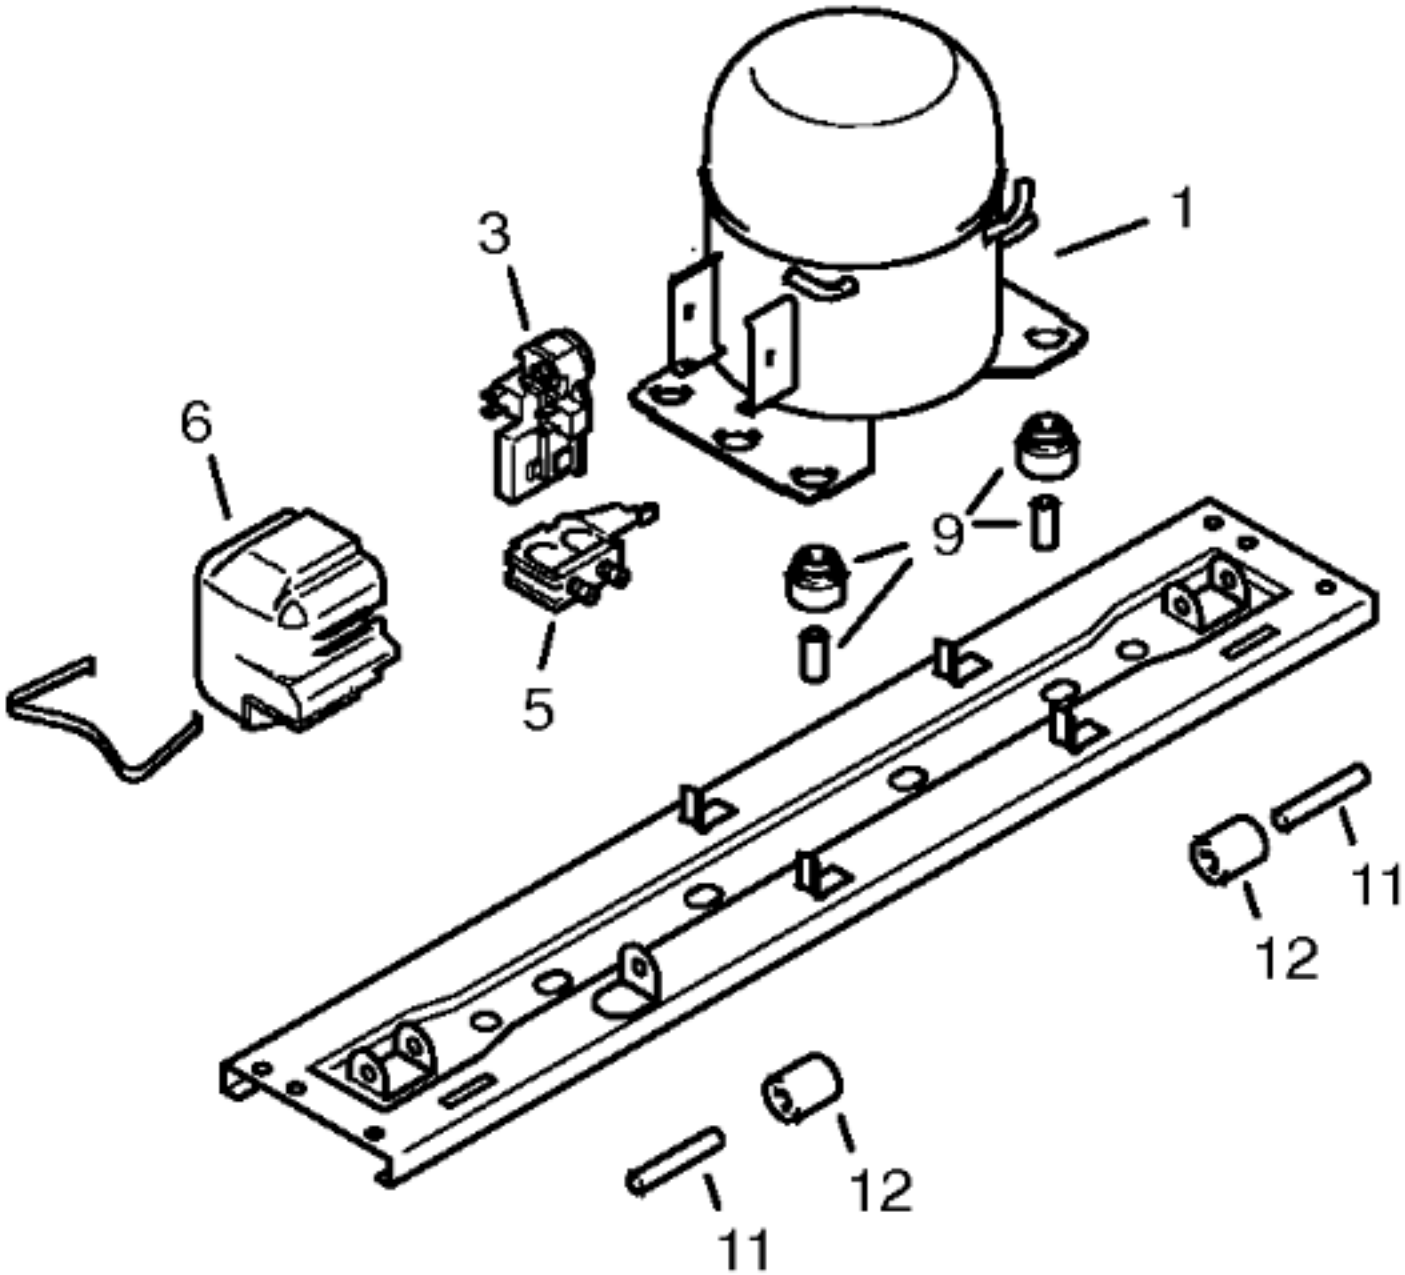

Pos.	V01	V02	
	Danfoss	Matsushita	
	NLE11KK2	DC 125 E	
1	14 2163	14 2131	
2			
3	15 1055	17 2967	
4			
5	15 0760	16 2549	
6	15 1072	16 6782	
7			
8	20 9294	20 9294	
9	050166	05 0166	
10			
11	01 9017	01 9017	
12	01 9016	01 1916	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Matsushita	
Typ/Type		NLE11KK2	DC 125 E	
Förderleistung/Delivery/Débit		2007	2246	
Anlaufstrom/Starting current/Cour de démarrage		A	9,2	
Widerstand/Resistance/Résistance Ha/main/prin		Ω	12,1	
Hi/aux		Ω	13,8	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	120	
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		