


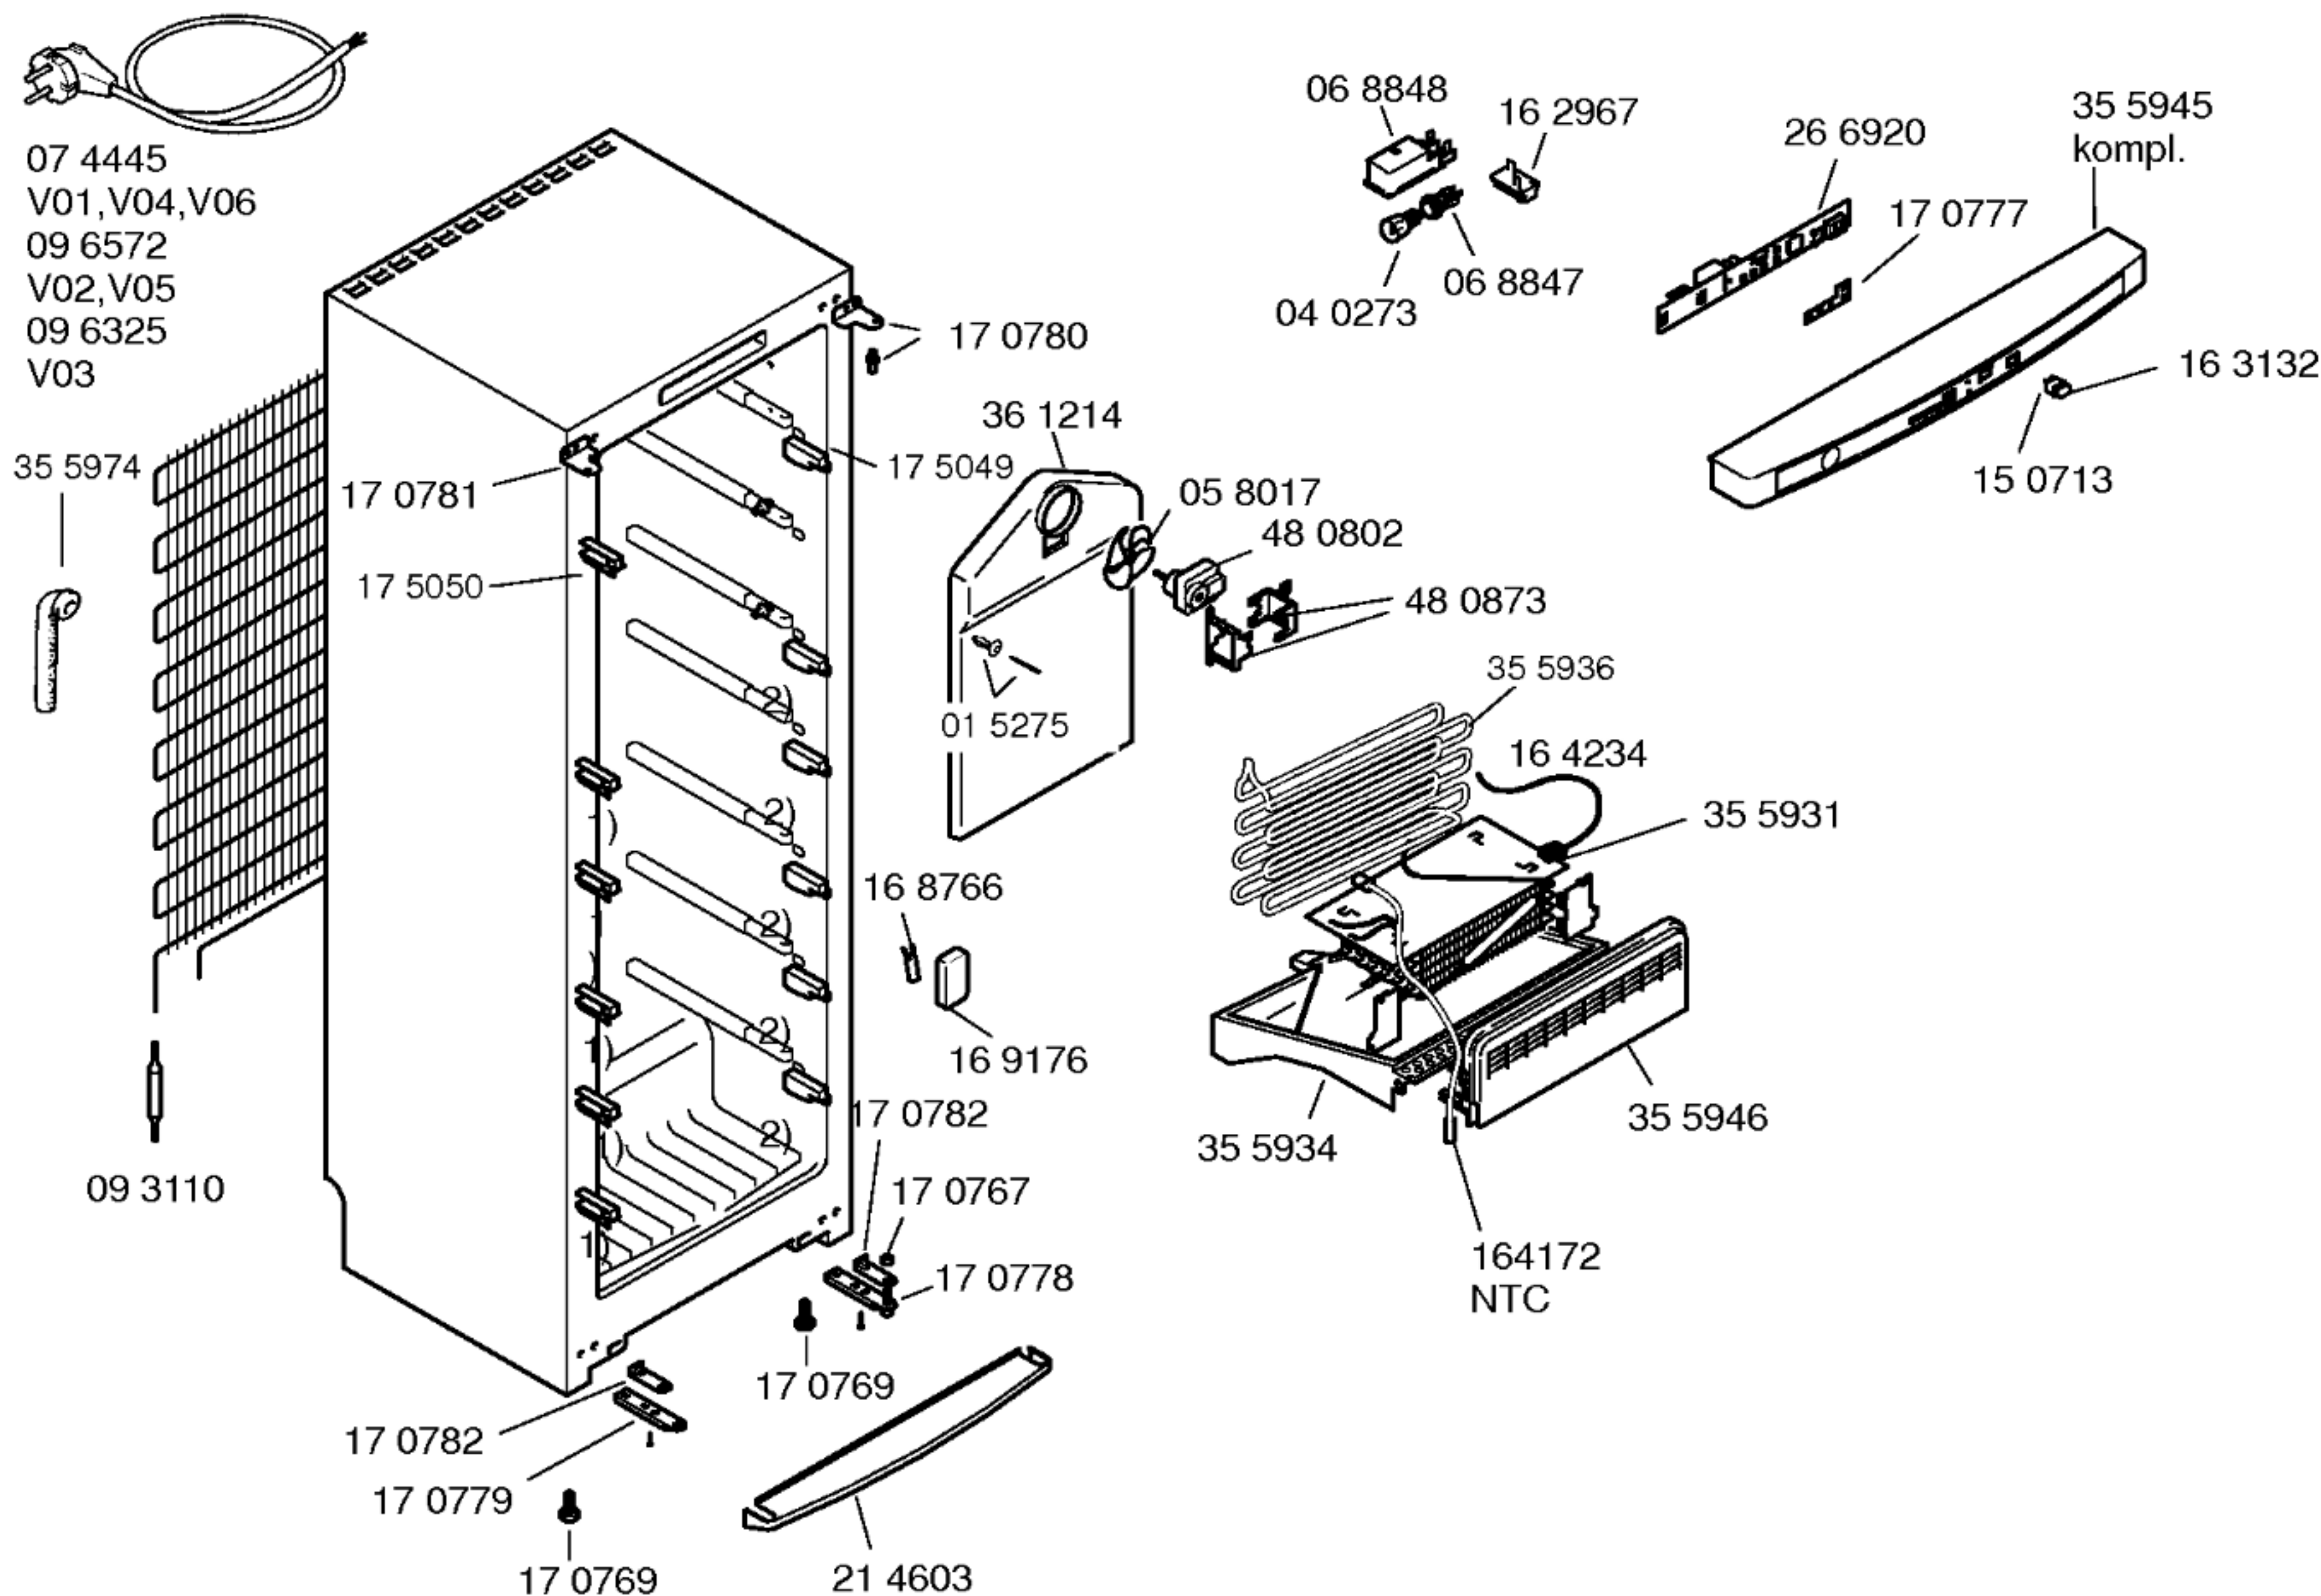




Gebrauchsanweisung
52 3813
(D,GB,F,I,NL,E,P)
Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N
SF,S,E,P,TR,GR)


Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

Gefrierraumteiler
35 3678

1) 17 1455
2) 17 1454

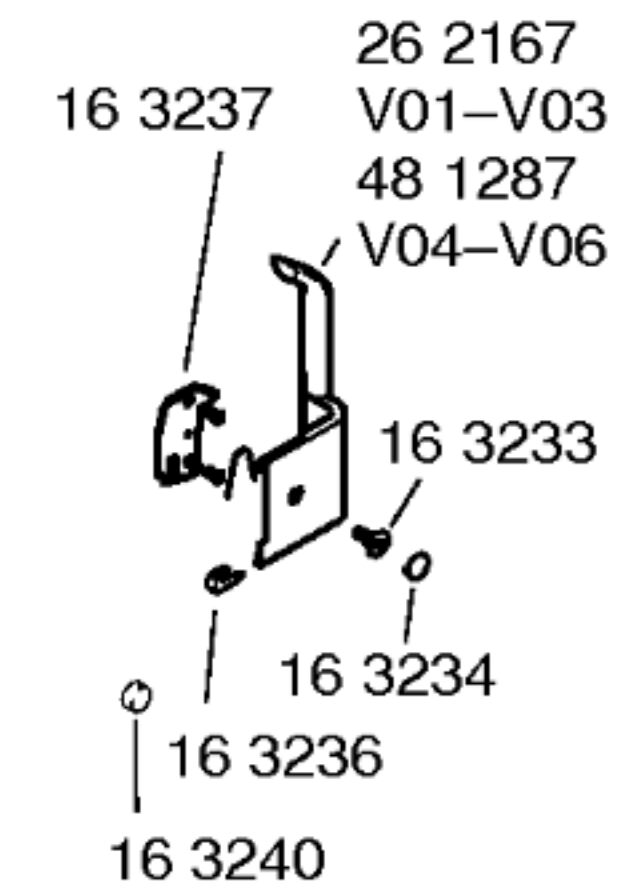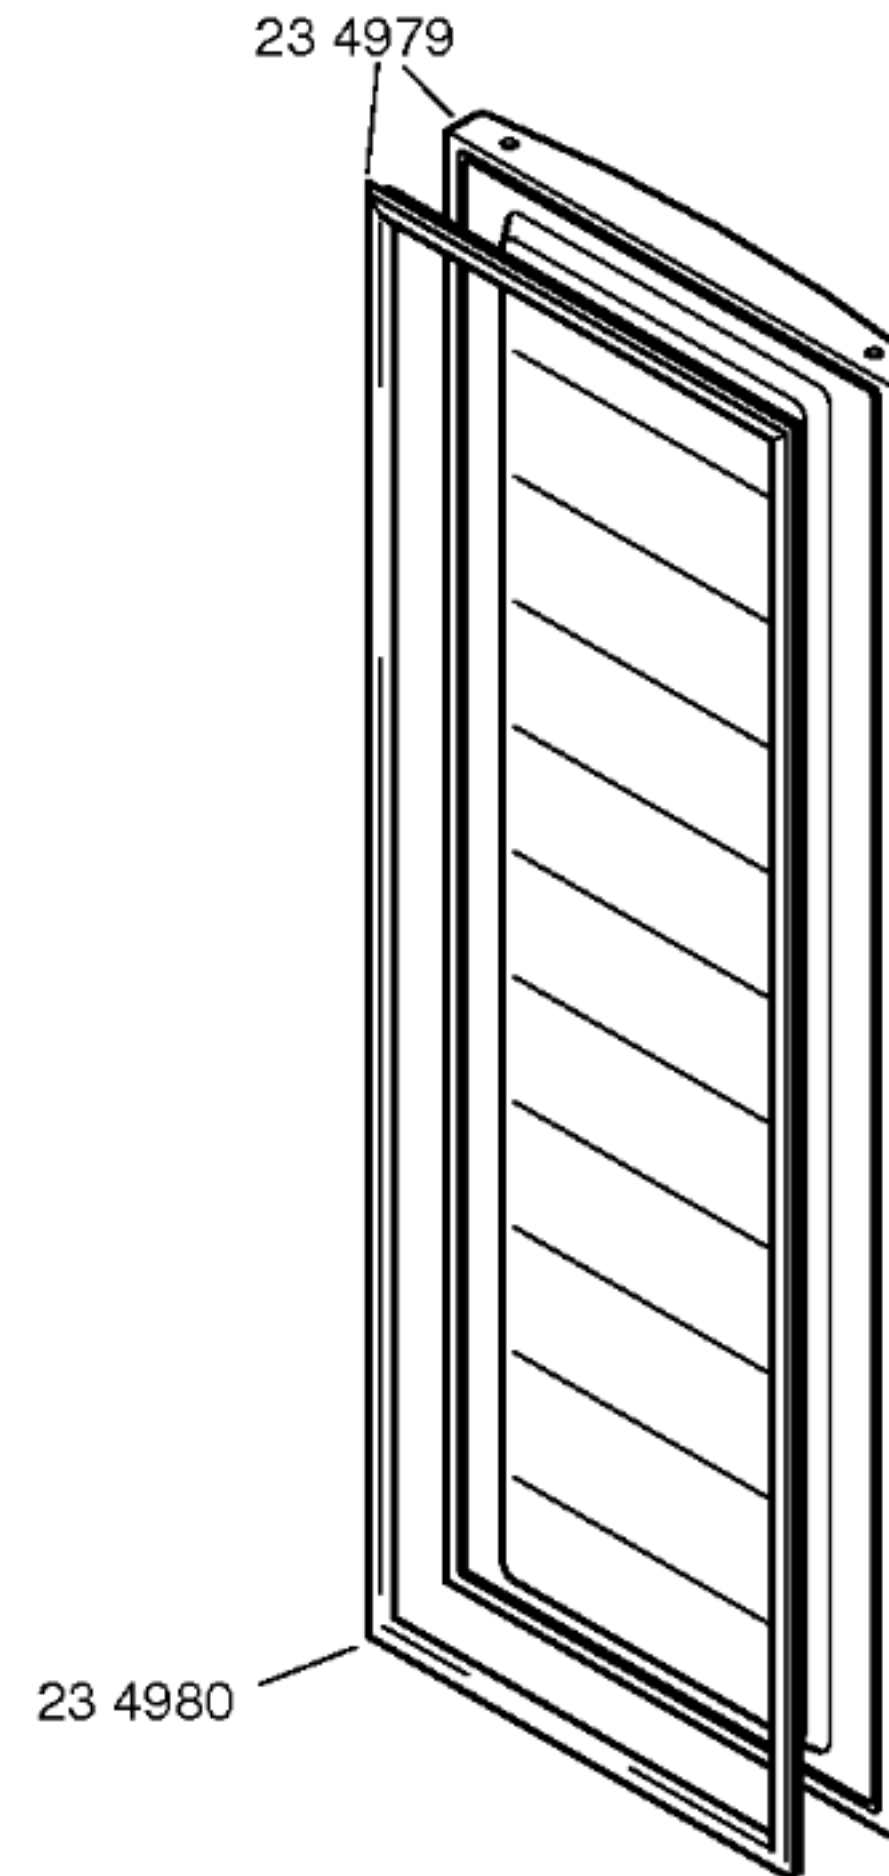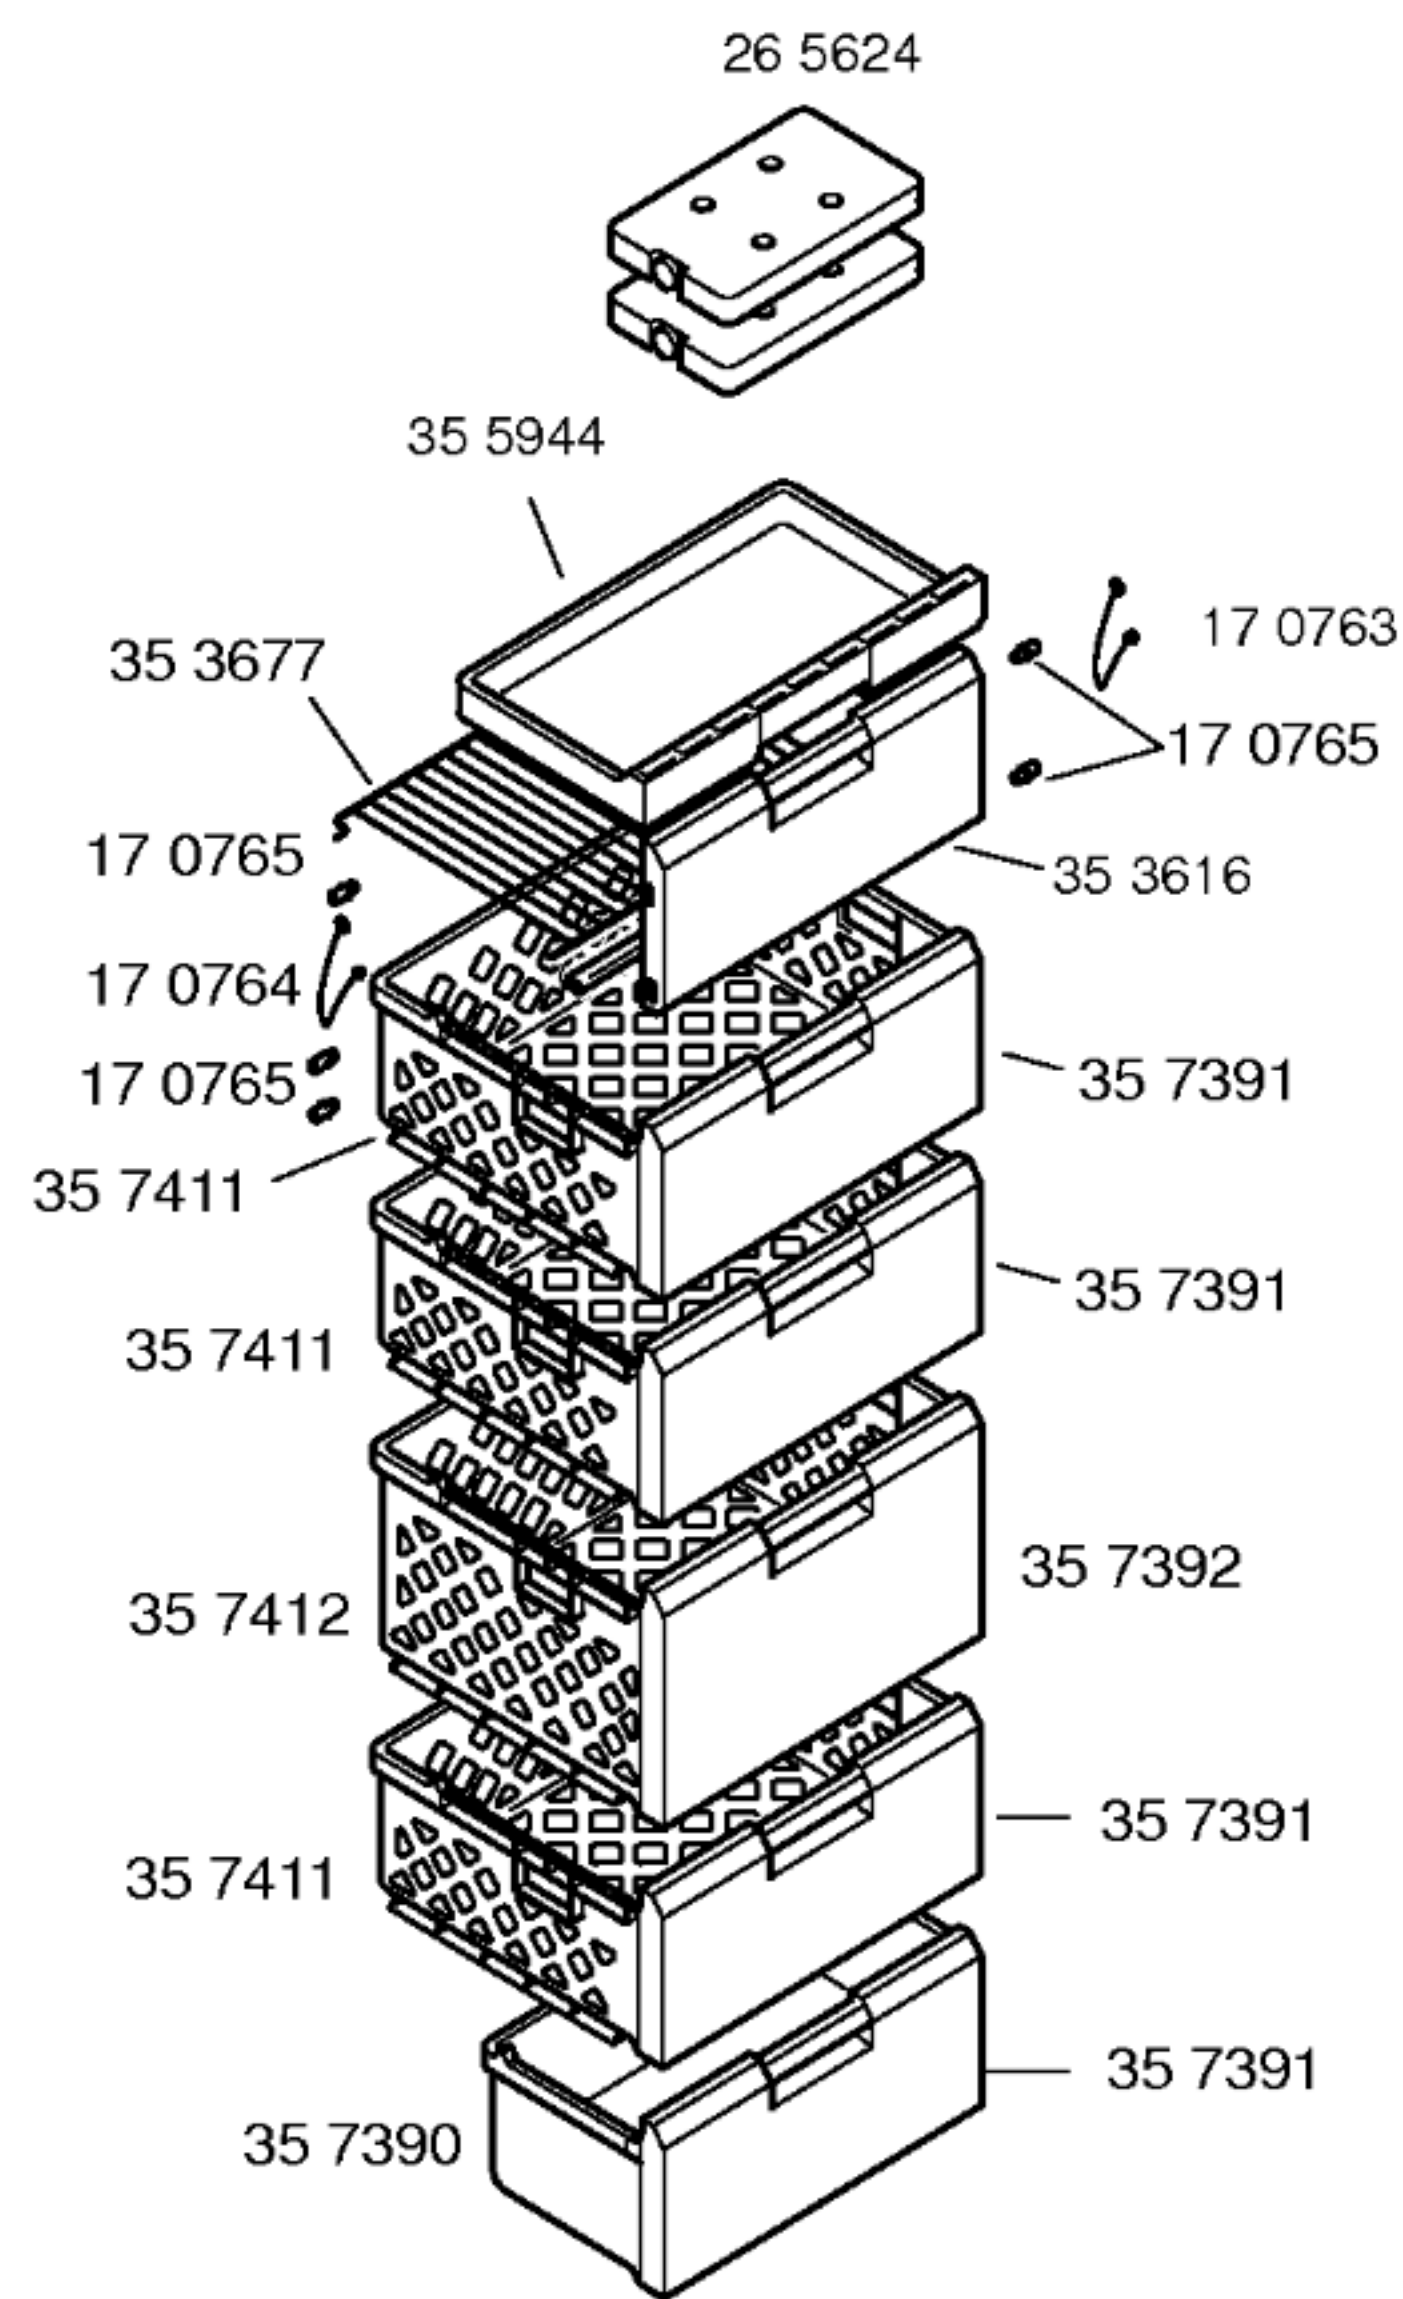

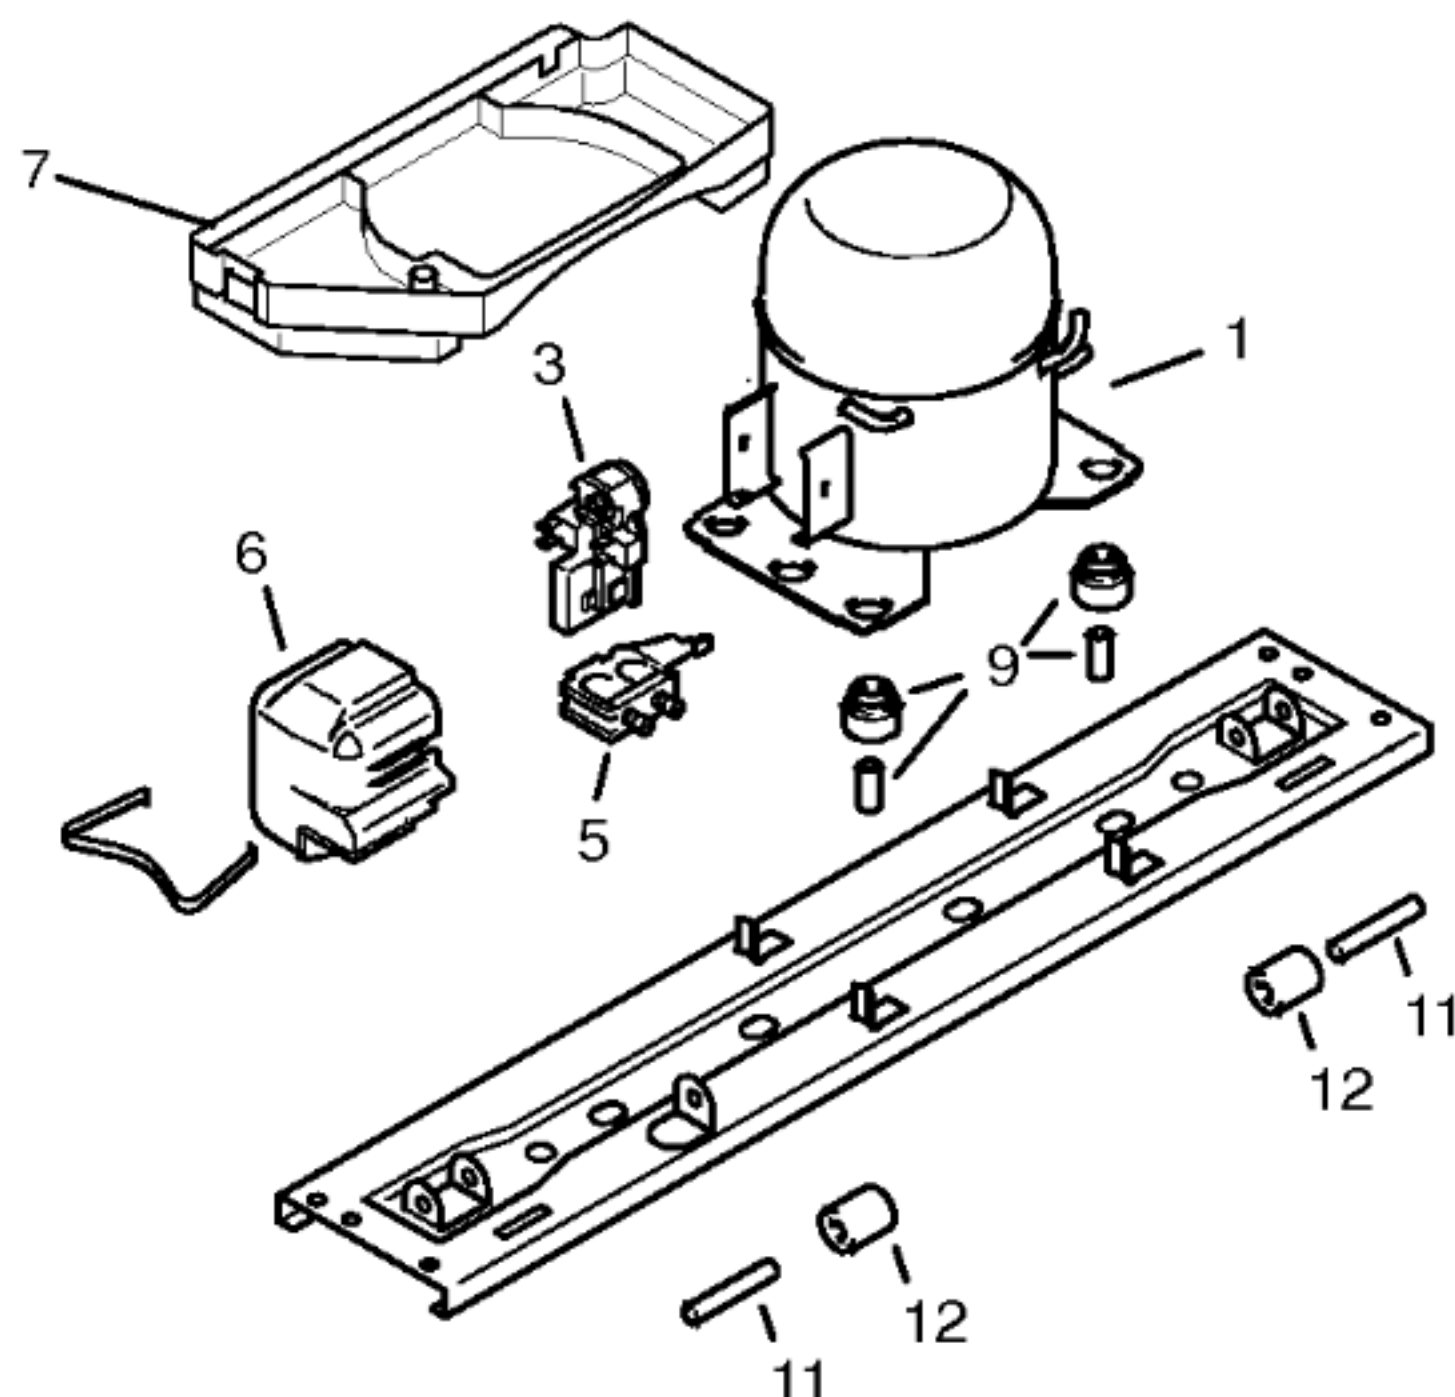

	V01-V03	V04	V05-V06
	Aspera	Matsushita	Danfoss
Pos.	NBT1116Y	DC125E	NLY13K
1	14 1845	14 2131	14 1747
2			
3	17 0623	17 2967	15 1055
4			
5	16 8903	16 2549	15 0760
6	16 8902	16 6782	15 1072
7	26 9958	08 8535	09 6212
8			
9	05 0166	05 0166	05 0166
10			
11	01 9017	01 9017	01 9017
12	01 9016	01 9016	01 9016

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur		Aspera		Matsushita		Danfoss
Typ/Type		NBT116Y		DC125E		NLY13K
Förderleistung/Delivery/Débit		l/h	2214	2246		2394
Anlaufstrom/Starting current/Cour de démarrage		A		9,2		11,3
Widerstand/Resistance/Résistance		Ω	13,2	12,1		11,0
Hi/main/prin		Ω	17,6	13,8		9,0
Hi/aux		Ω				
Temp.-Regler/Thermostat		Elektronisch				
Typ/Type		EIN AUS				
Regelstellung/Position		-15 -16				
Schaltwerte/Switching values		"warm" -19 -20				
Valeurs de commutation		"kalt" -23 -24				
		"alarm" -9 -14				
Füllmenge/Fill.quantity/Charge		R600a	*	*		
Anschlußwert/Conn.load/Puiss. connectée		W	124	120	133	
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung		
Widerstand/Resistance/Résistance		Ω	288	240		
Leistung/Power/Puissance		W	200	24		
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω	560			
Raumtemperaturfühler		C	K	C	k	
		+10	9,9	-18	43,3	
		+ 5	12,7	-22	54,6	
		+ 0	16,3	-26	69,4	
Widerstand NTC-Fühler		°C	kΩ	°C	kΩ	°C
		-1	17,3	-15	36,5	-20
		-9	26,2	-16	38,8	-23
		-14	34,5	-19	45,9	-24
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

* siehe Typenschild