


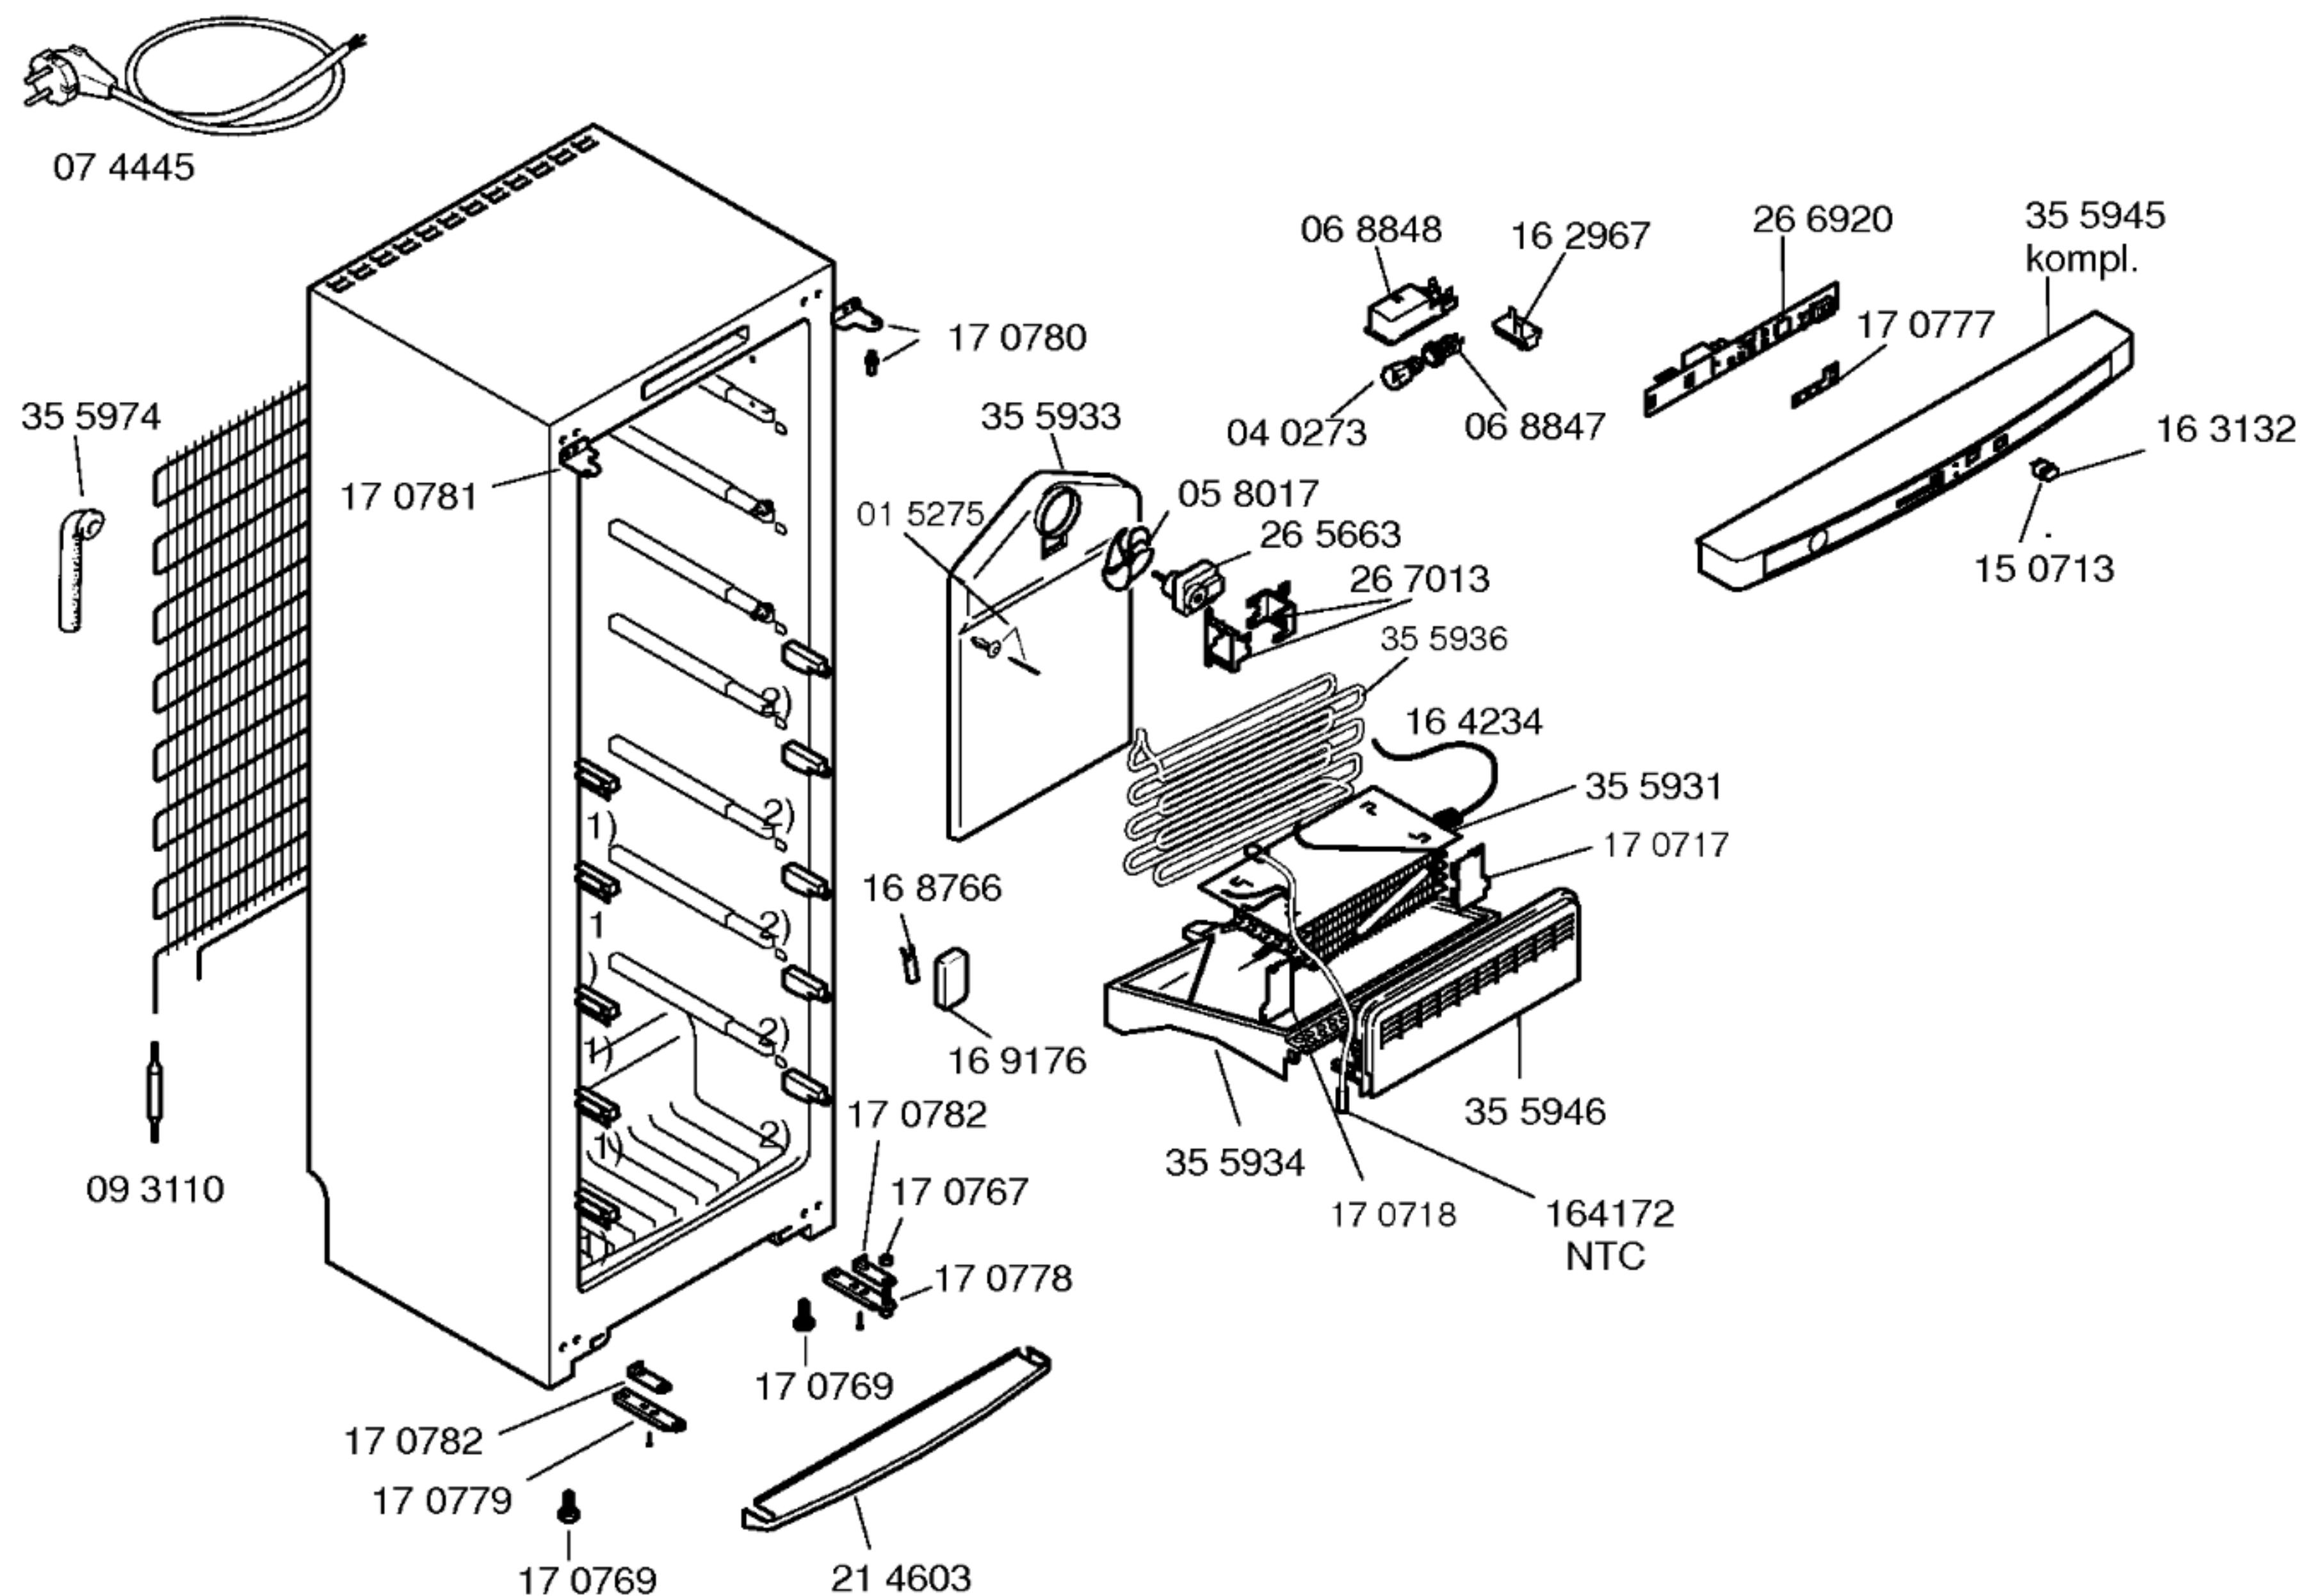

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 3813

(D,GB,F,I,NL,E,P)
Montageanleitung




52 2772
(D,GB,F,I,NL,DK,N
SF,S,E,P,TR,GR)


Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

Gefrierraumteiler
35 3678

1) 17 1455
2) 17 1454

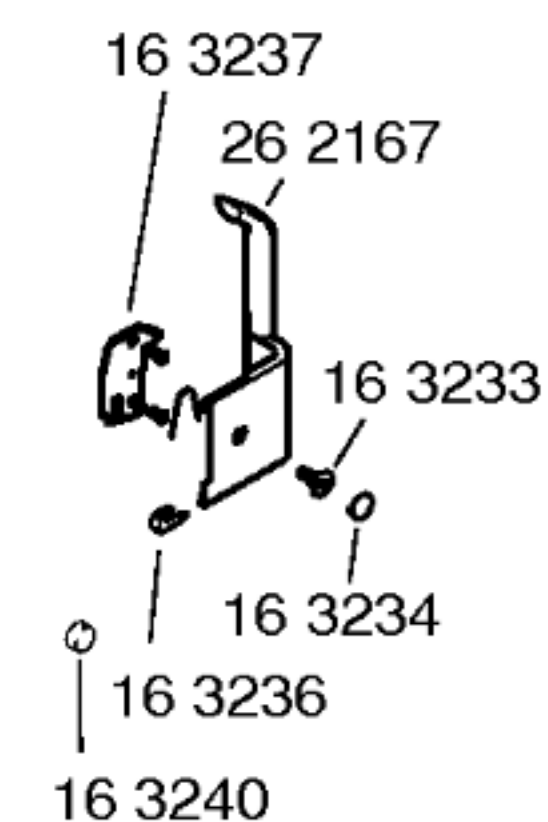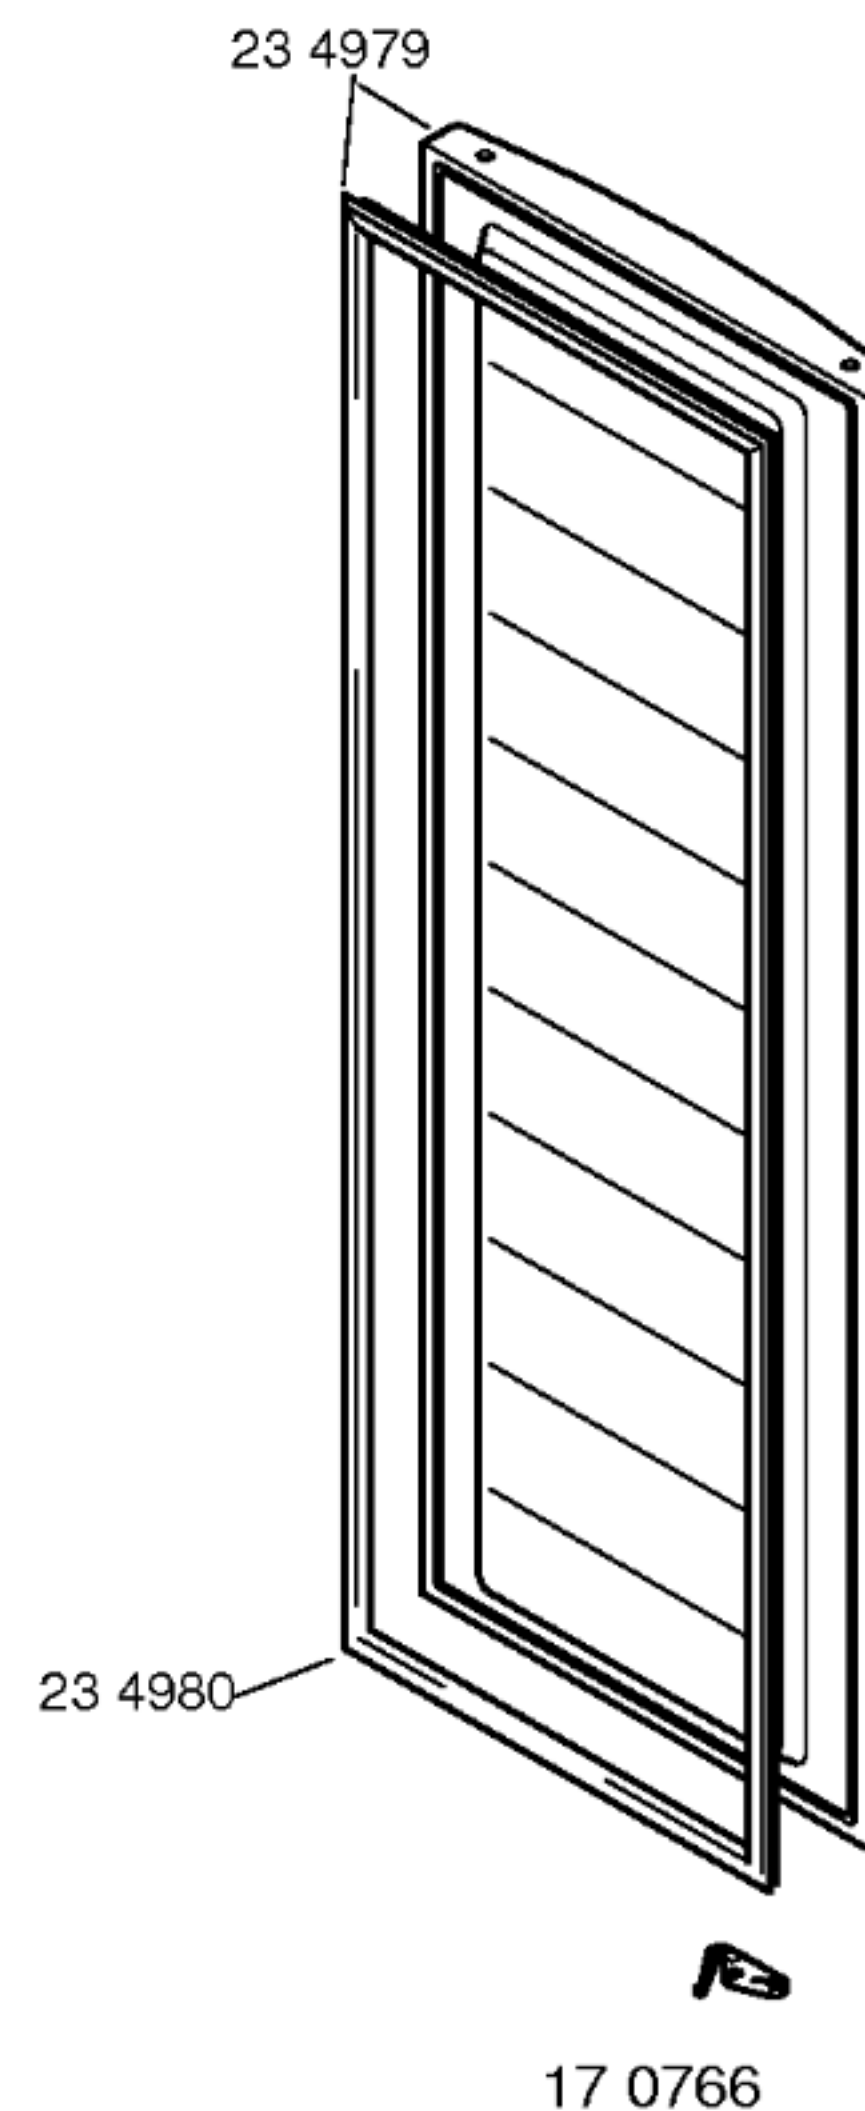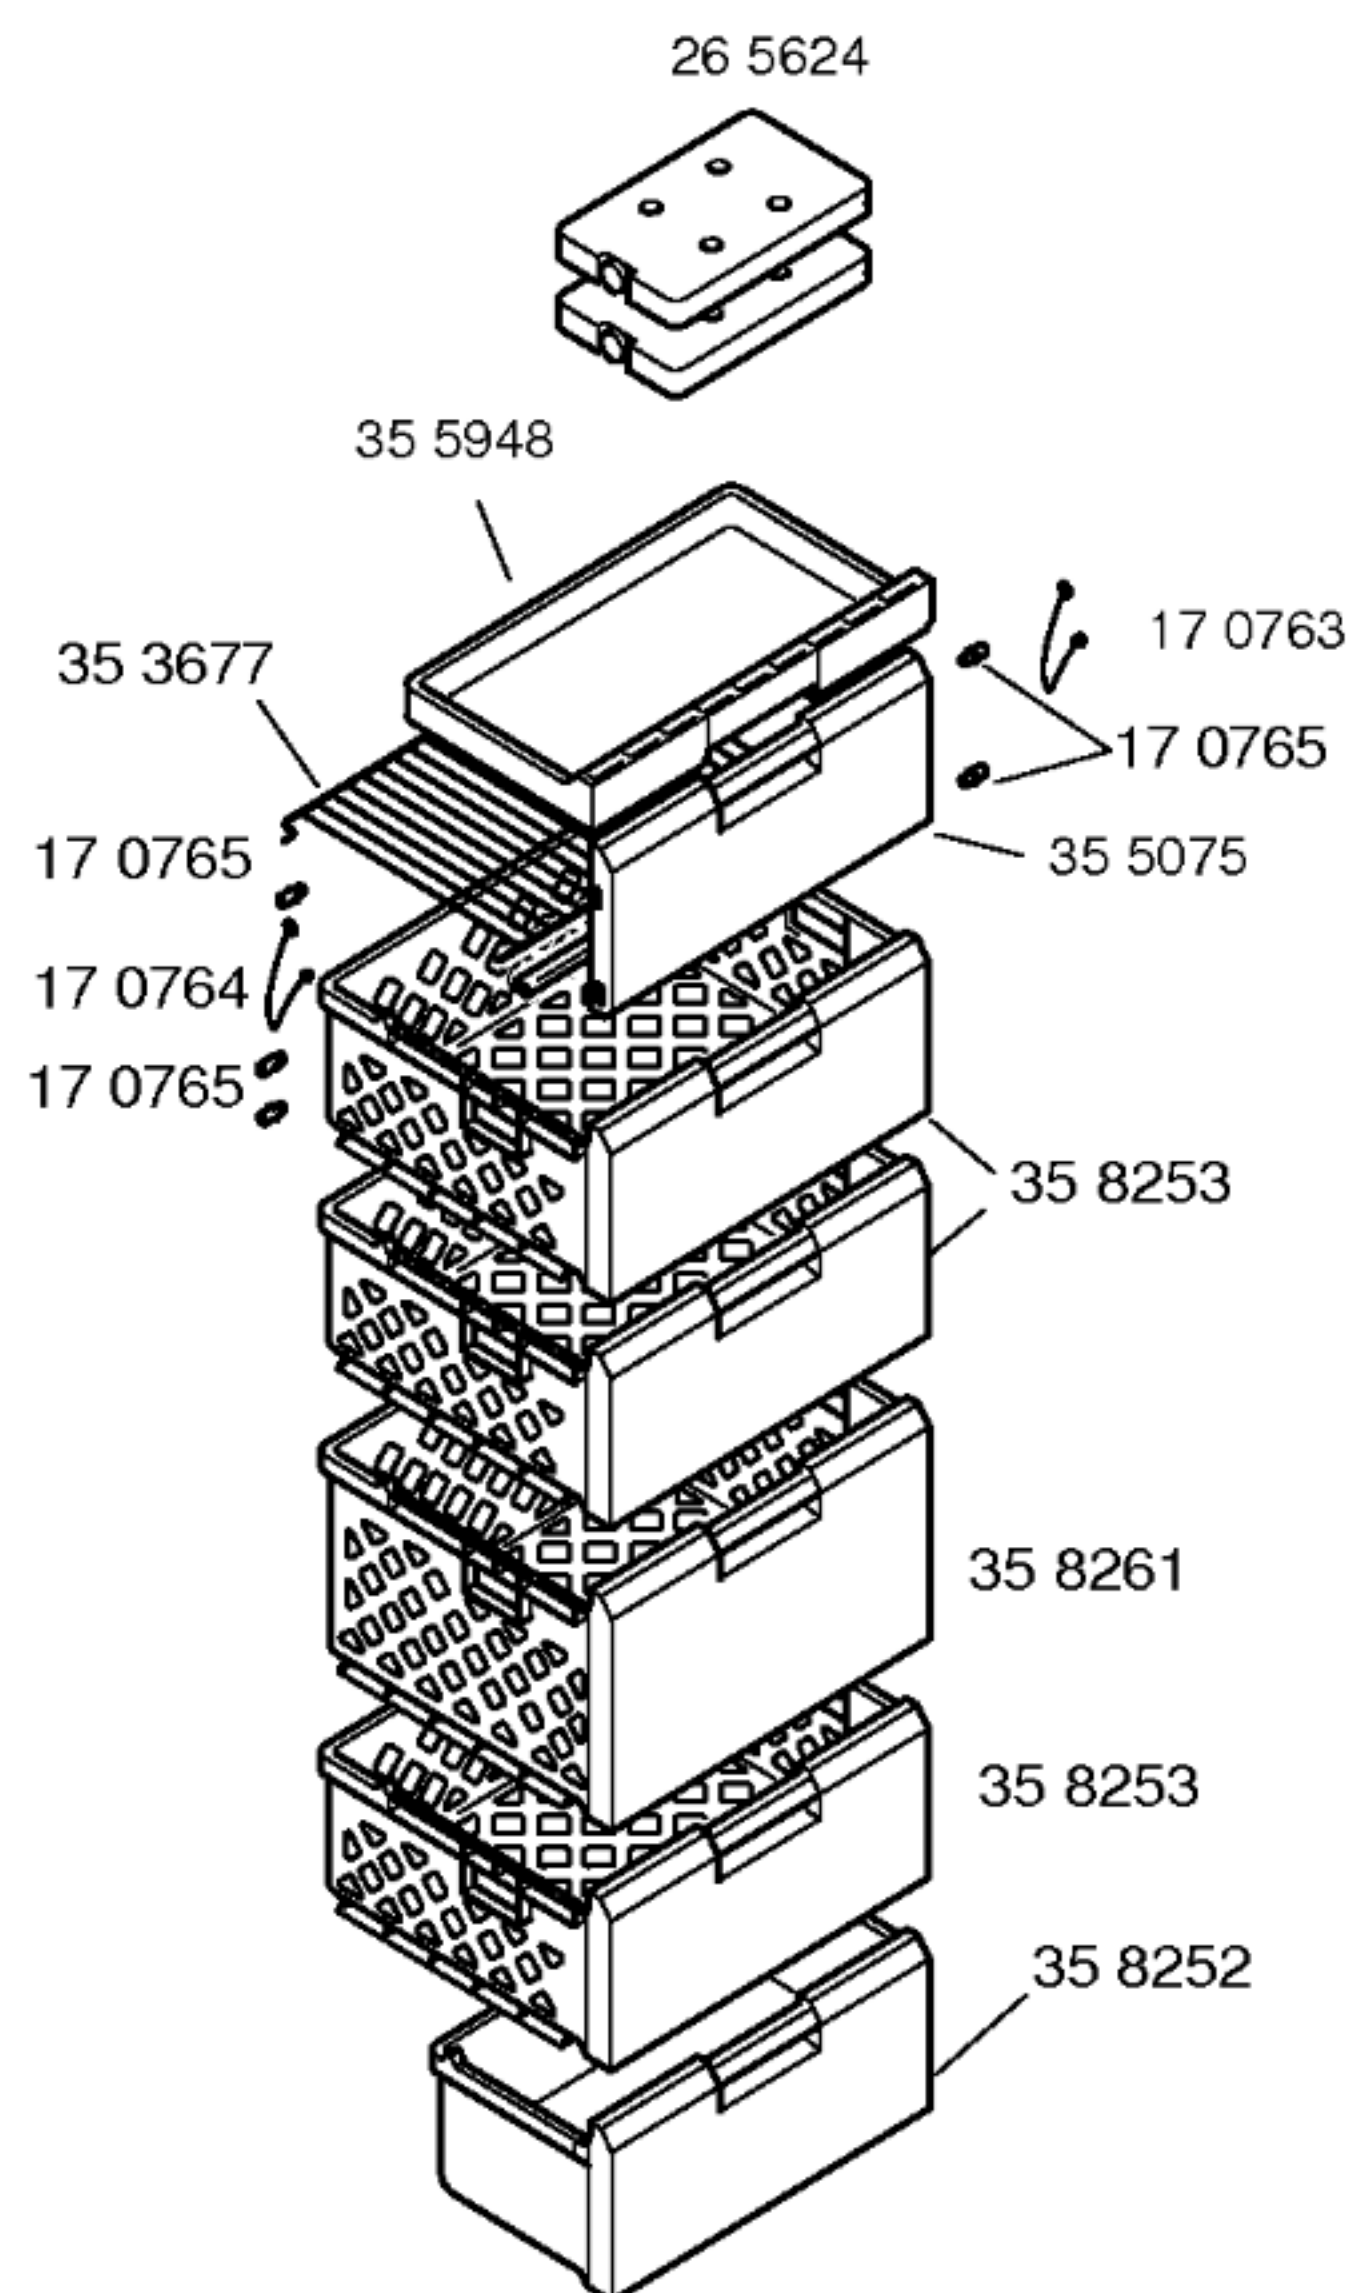

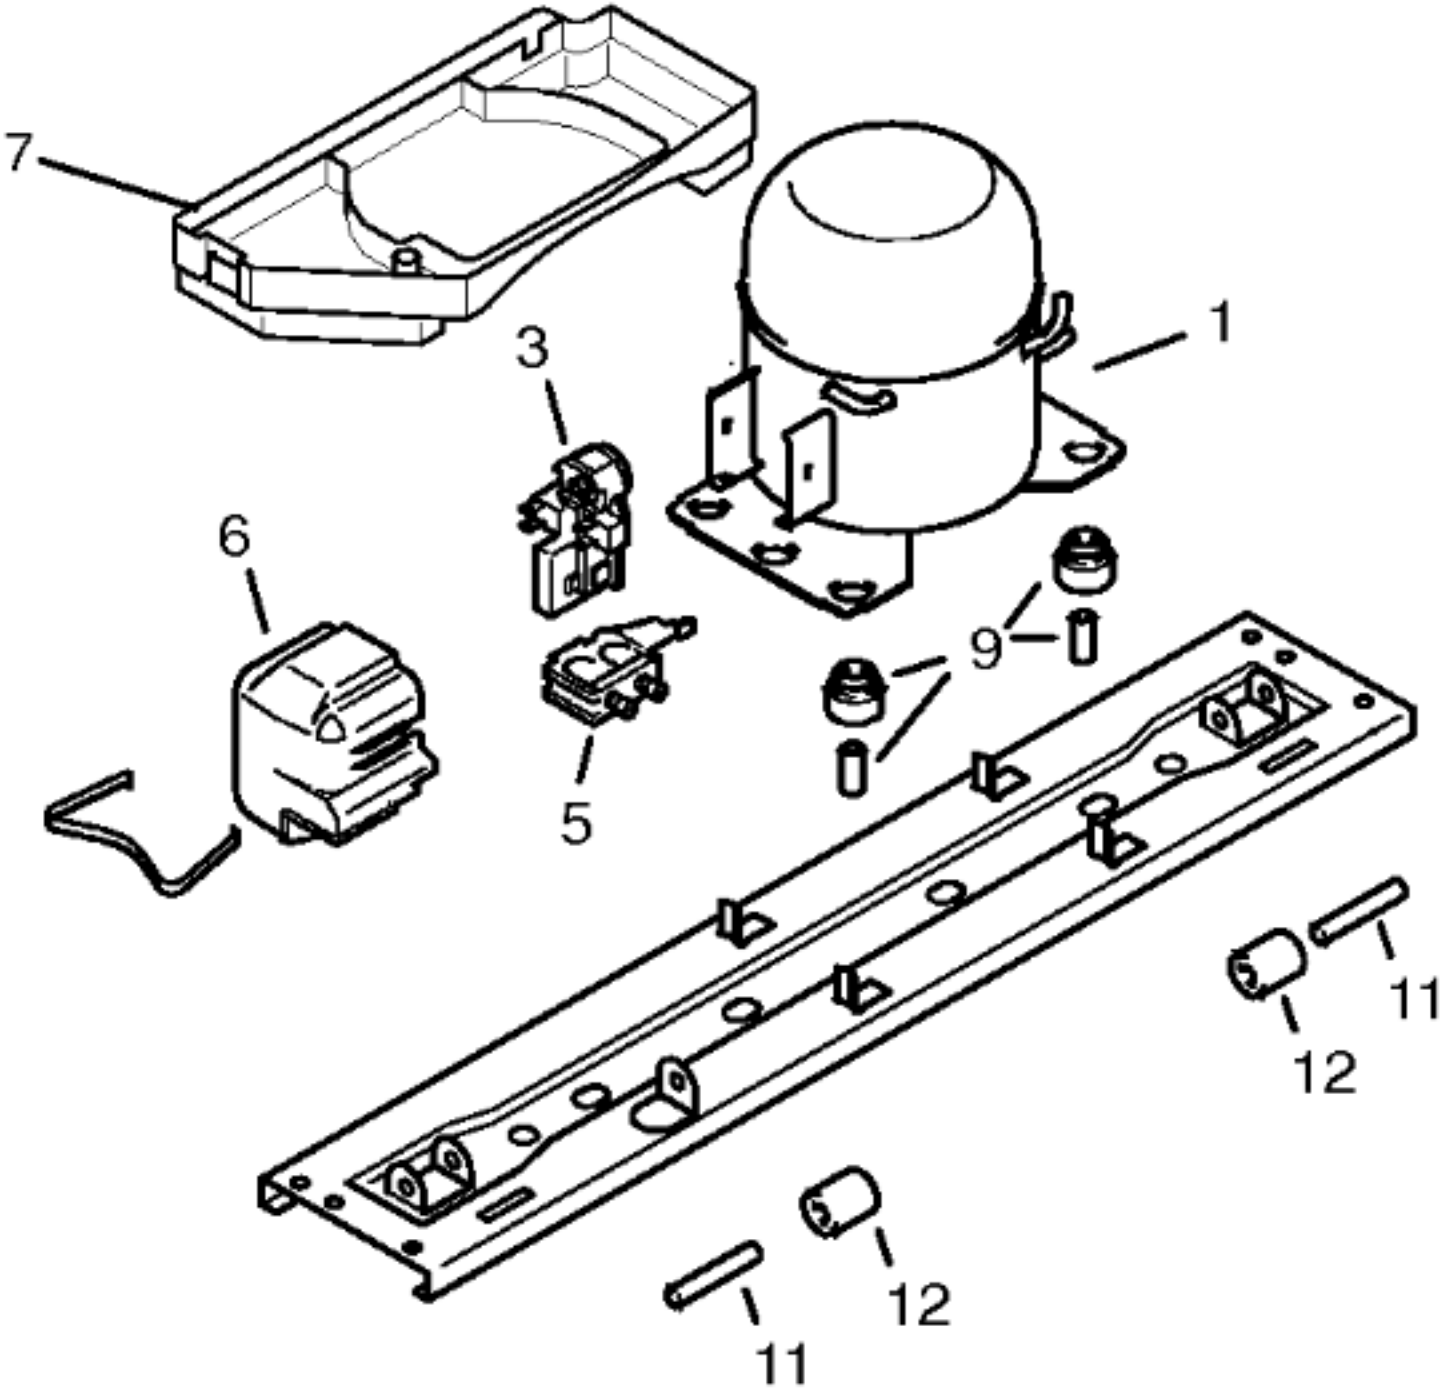

	V01	V02	
	Aspera	Matsushita	
Pos.	NBT1116Y	DC125E	
1	14 1845	141965	
2			
3	17 0623	17 2967	
4			
5	16 8903	16 2549	
6	16 8902	16 6782	
7	26 5483	08 8535	
8			
9	05 0166	05 0166	
10			
11	01 9017	01 9017	
12	01 9016	01 9016	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Aspera		Matsushita	
Typ/Type		NBT1116Y		DC125E	
Förderleistung/Delivery/Débit		l/h	2214	2246	
Anlaufstrom/Starting current/Cour de démarrage		A		9,2	
Widerstand/Resistance/Résistance		Ω	13,2	12,1	
Hi/main/prin		Ω	17,6	13,8	
Hi/aux		Ω			
Temp.–Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		–15 –16			
Schaltwerte/Switching values		"warm"	–19 –20		
Valeurs de commutation		"kalt"	–23 –24		
		"alarm"	–9 –14		
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	124	120	
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance		Ω	288	240	
Leistung/Power/Puissance		W	200	24	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	560		
Raumtemperaturfühler 2%		C	K	C	k
		+10	9,9	–18	43,3
		+ 5	12,7	–22	54,6
		+ 0	16,3	–26	69,4
Widerstand NTC–Fühler 1%		°C	kΩ	°C	kΩ
		–1	17,3	–15	36,5
		–9	26,2	–16	38,8
		–14	34,5	–19	45,9
				–20	48,6
				–23	58,1
				–24	61,6
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild