


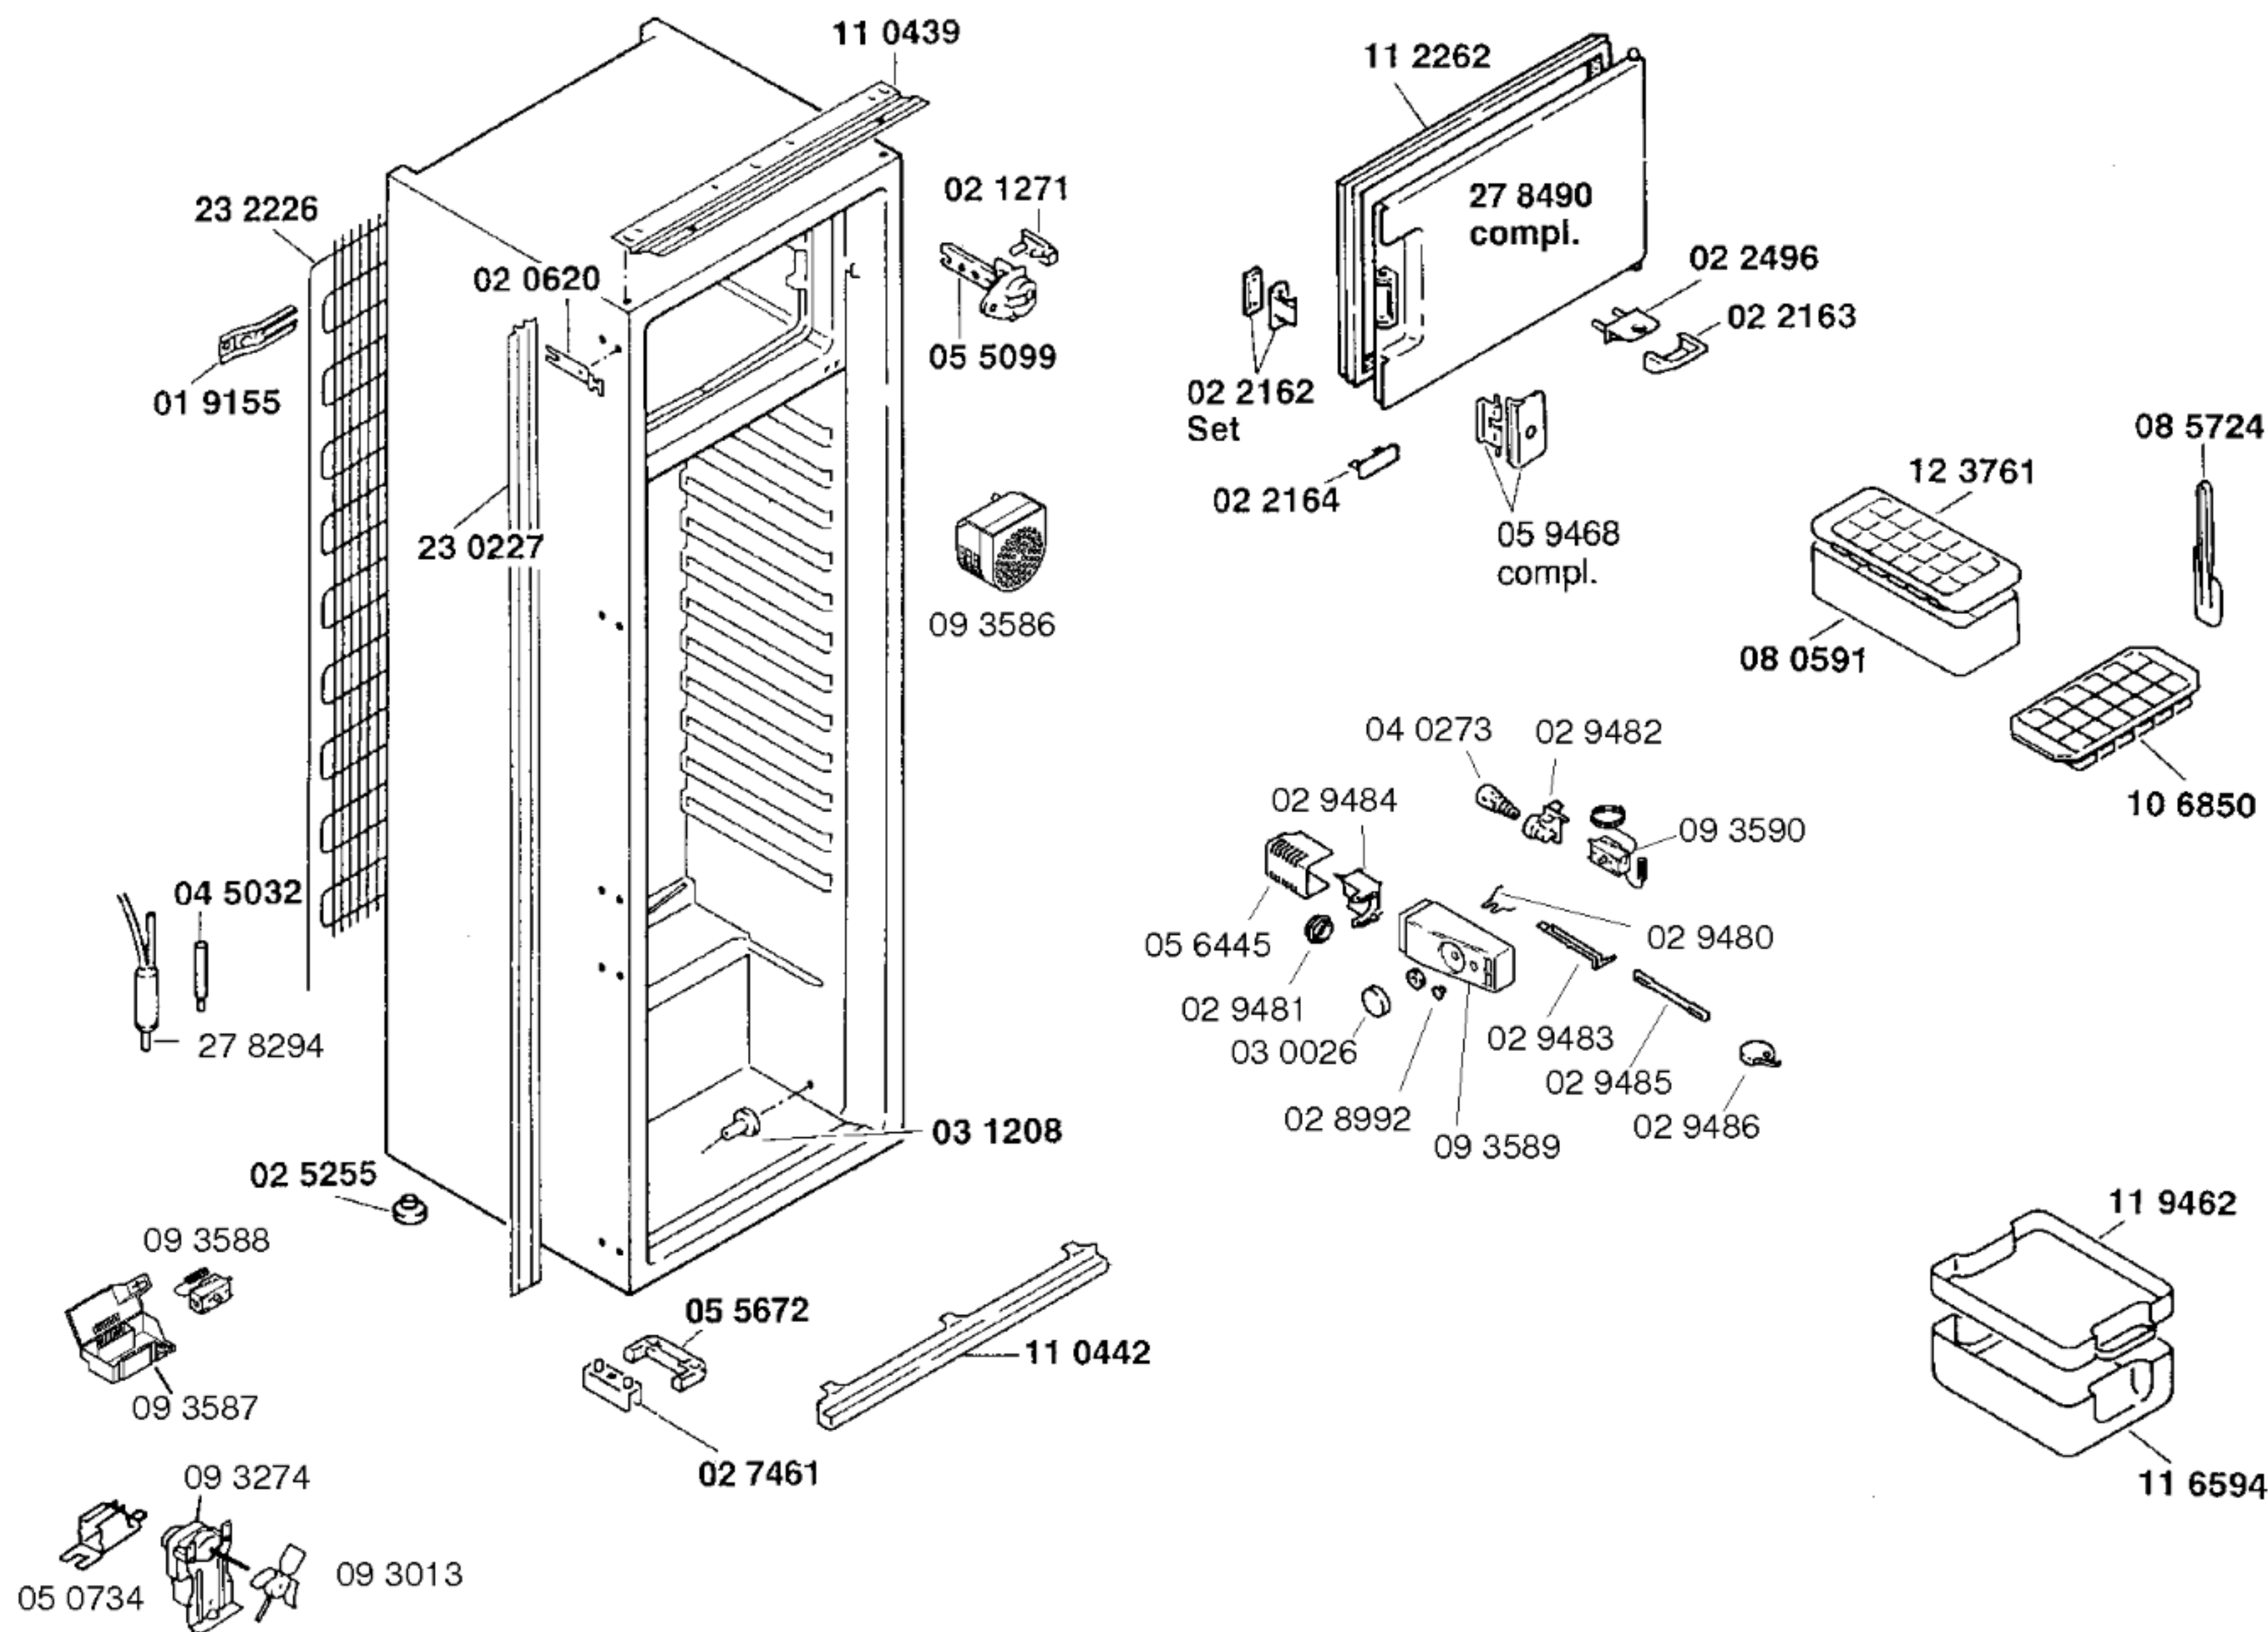



51 4430
Gebrauchsanweisung
(D,GB,F,I,NL,E)

51 5436
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

08 8957
Befestigungssatz

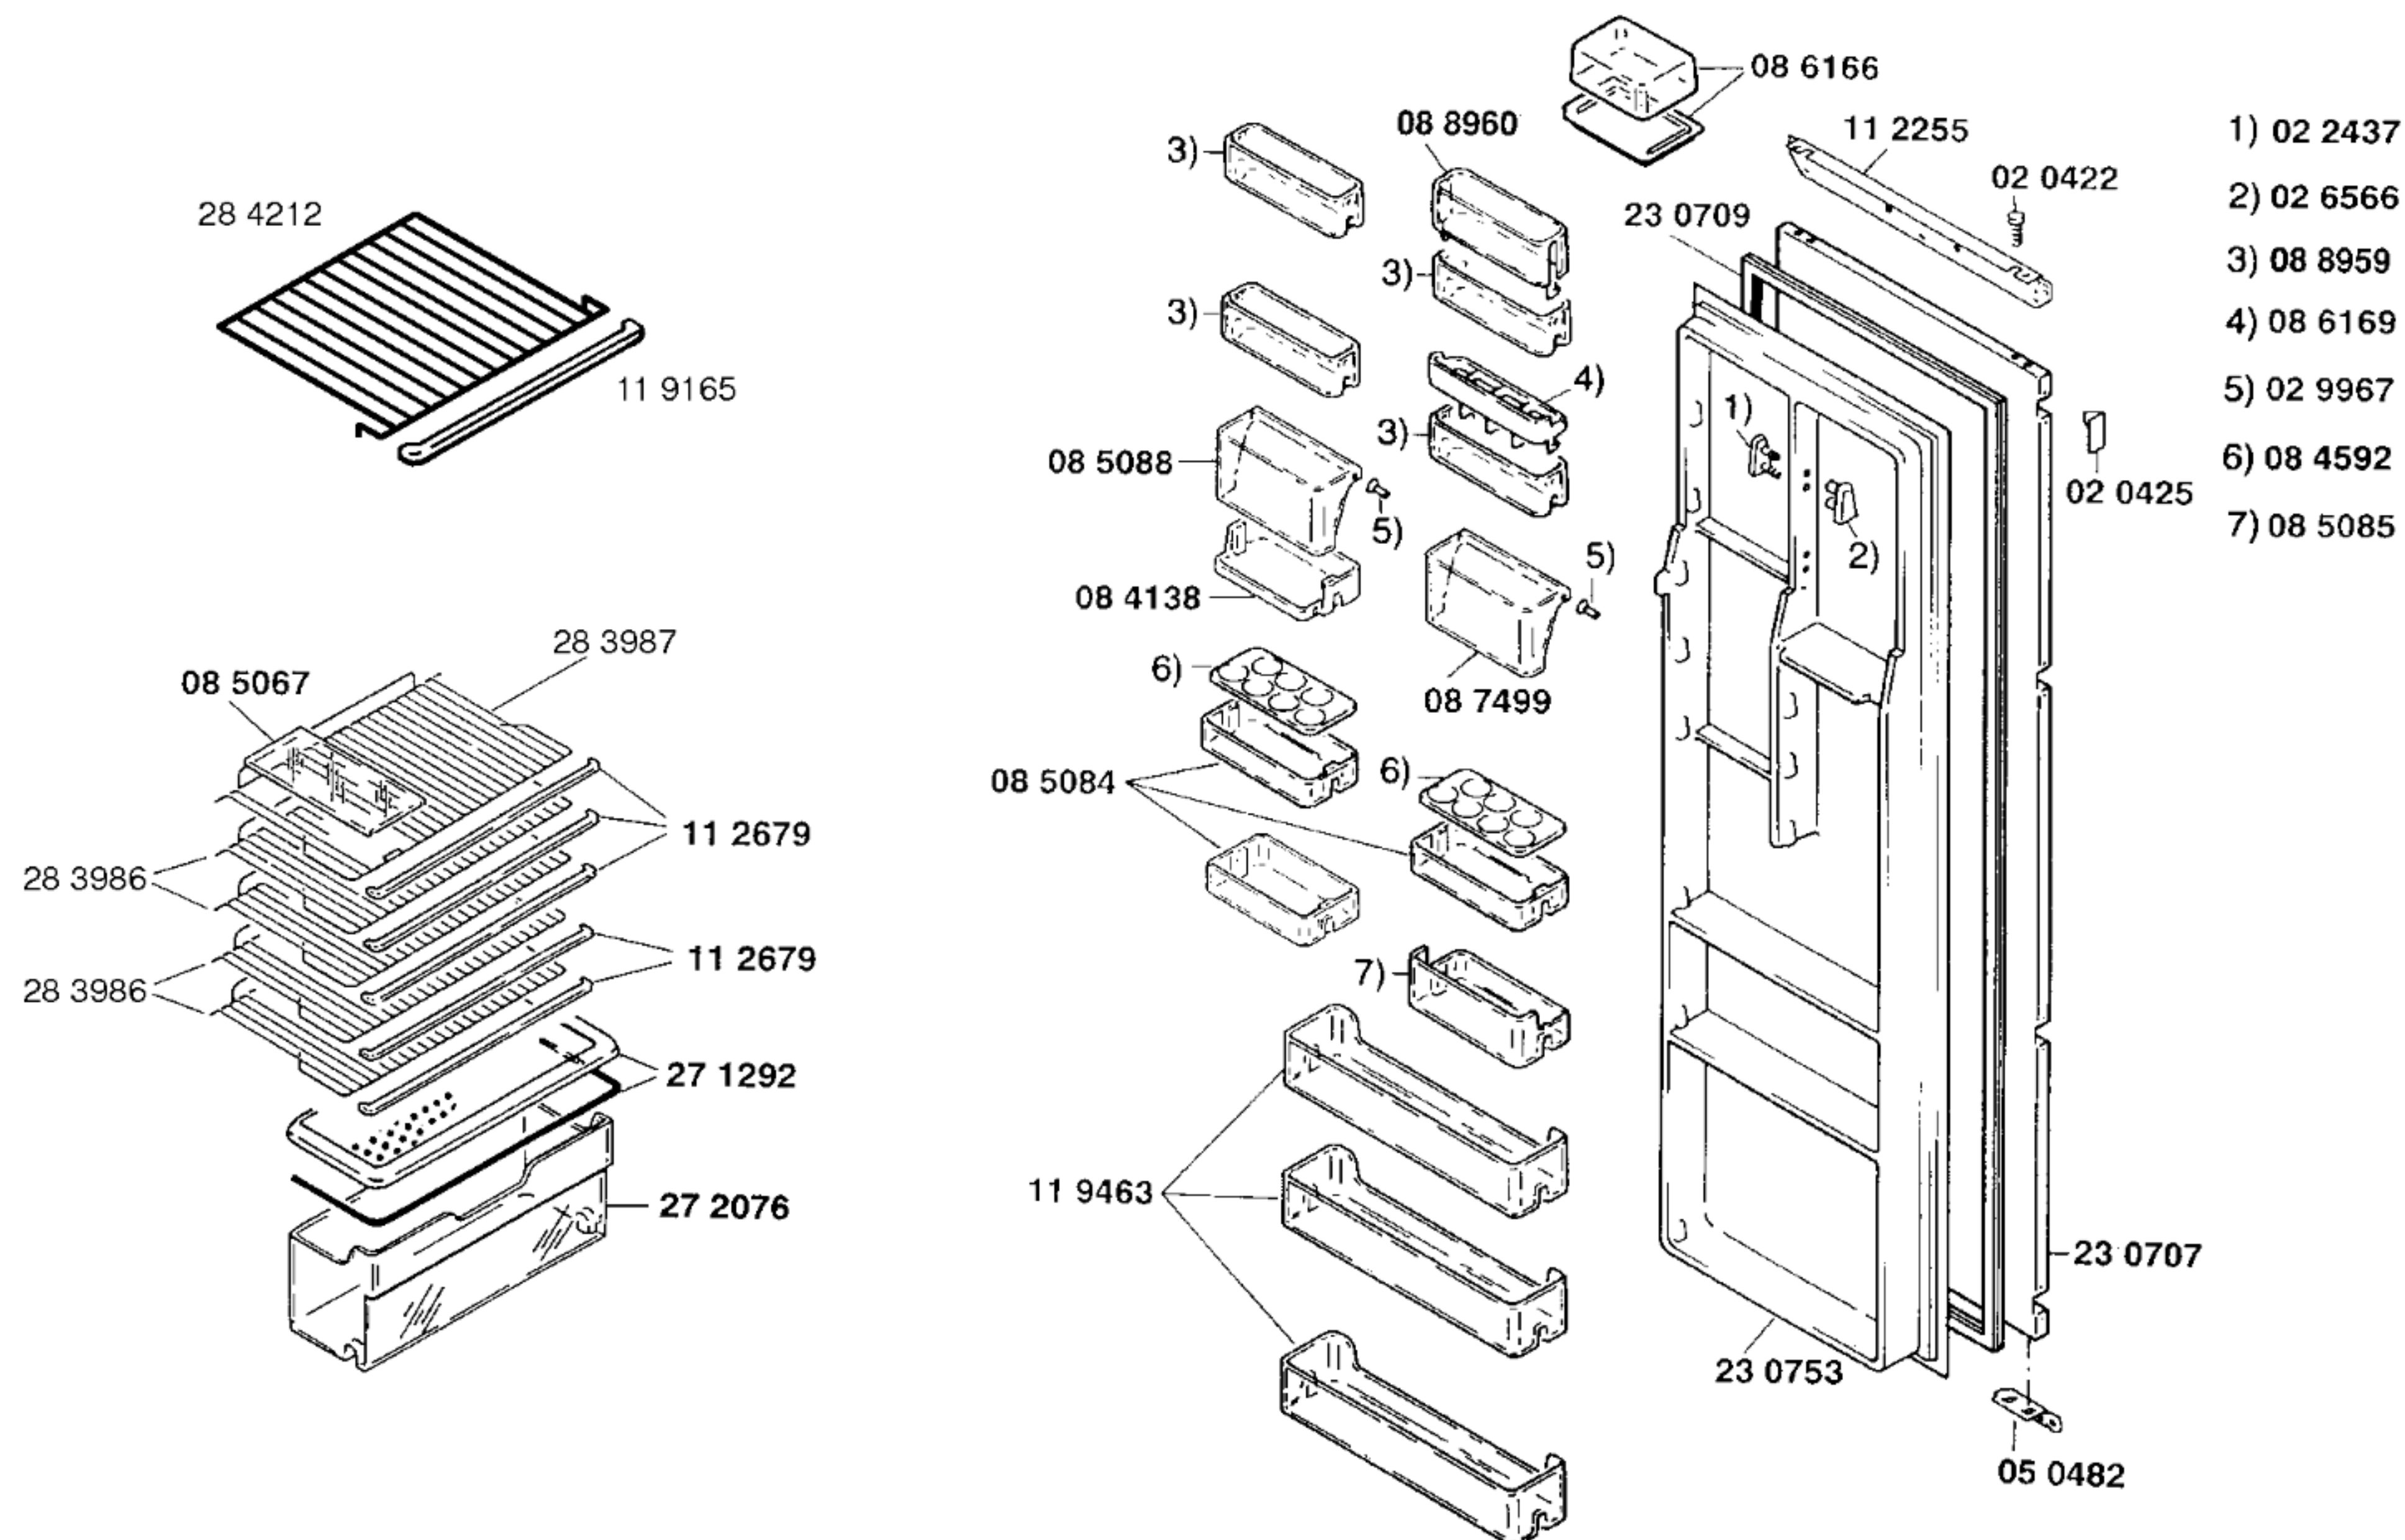

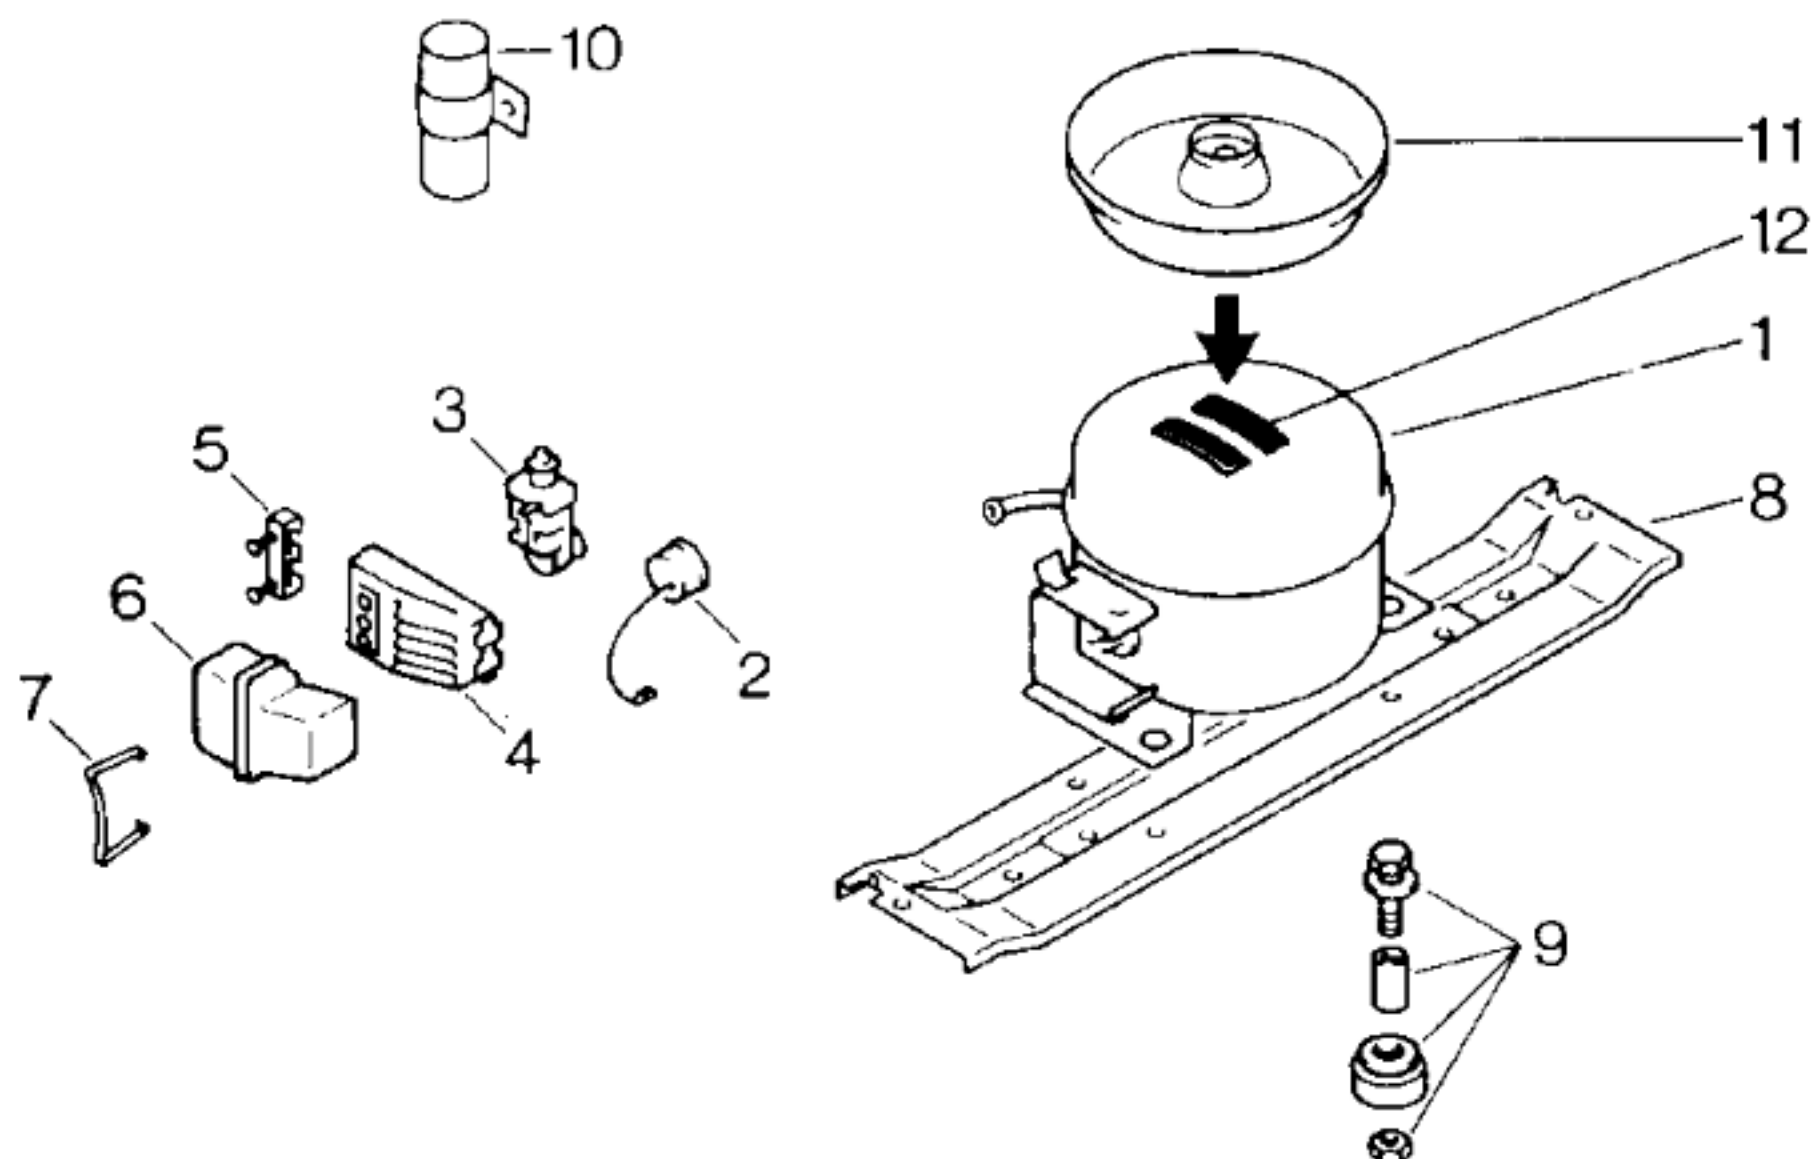

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		D116LRAA		
Förderleistung/Delivery/Débit	l/h	1184		
Anlaufstrom/Starting current/Cour. de démarrage	A	8,75		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	12,0		
	Hi/aux Ω	28,7		
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 52-1		
Reglerstellung/Position		Innentemp. K 50-L5772		
Schaltwerte/Switching values/	„ein“ °C	Kontaktf. kalt warm		
Valeurs de commutation	„aus“	+4 +7,5 +31,5		
	(„abtauen“ od.) „alarm“	0 +10 +28,5		
Füllmenge/Fill.quantity/Charge		R12	g	180
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur		Innen	Außen	
Widerstand/Resistance/Résistance	Ω	1300	350	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	Matsushita		
	D116LRAA		
1	14 0563		
2	05 8506		
3			
4			
5			
6	05 8458		
7	02 6731		
8	28 1825		
9	05 0166		
10	05 9467		
11	08 5182		
12	05 6008		