

**BOSCH**

GSS2104/01-V01
 GSS2104/02-V02
 GSS2104/03-V03
 GSS2104/04-V04


KÜHL-,GEFRIERGERÄTE
 Gefrierschränke, Stand

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisungen

51 6980
 (D,GB,F,I,NL,P,E)
 51 6981
 (S,DK,SF,N)

- | | |
|-----|---------|
| 1) | 02 6816 |
| 2) | 02 6819 |
| 3) | 02 7786 |
| 4) | 02 6824 |
| 5) | 06 8297 |
| 6) | 06 8299 |
| 7) | 06 8298 |
| 8) | 06 8300 |
| 9) | 06 8654 |
| 10) | 05 4795 |

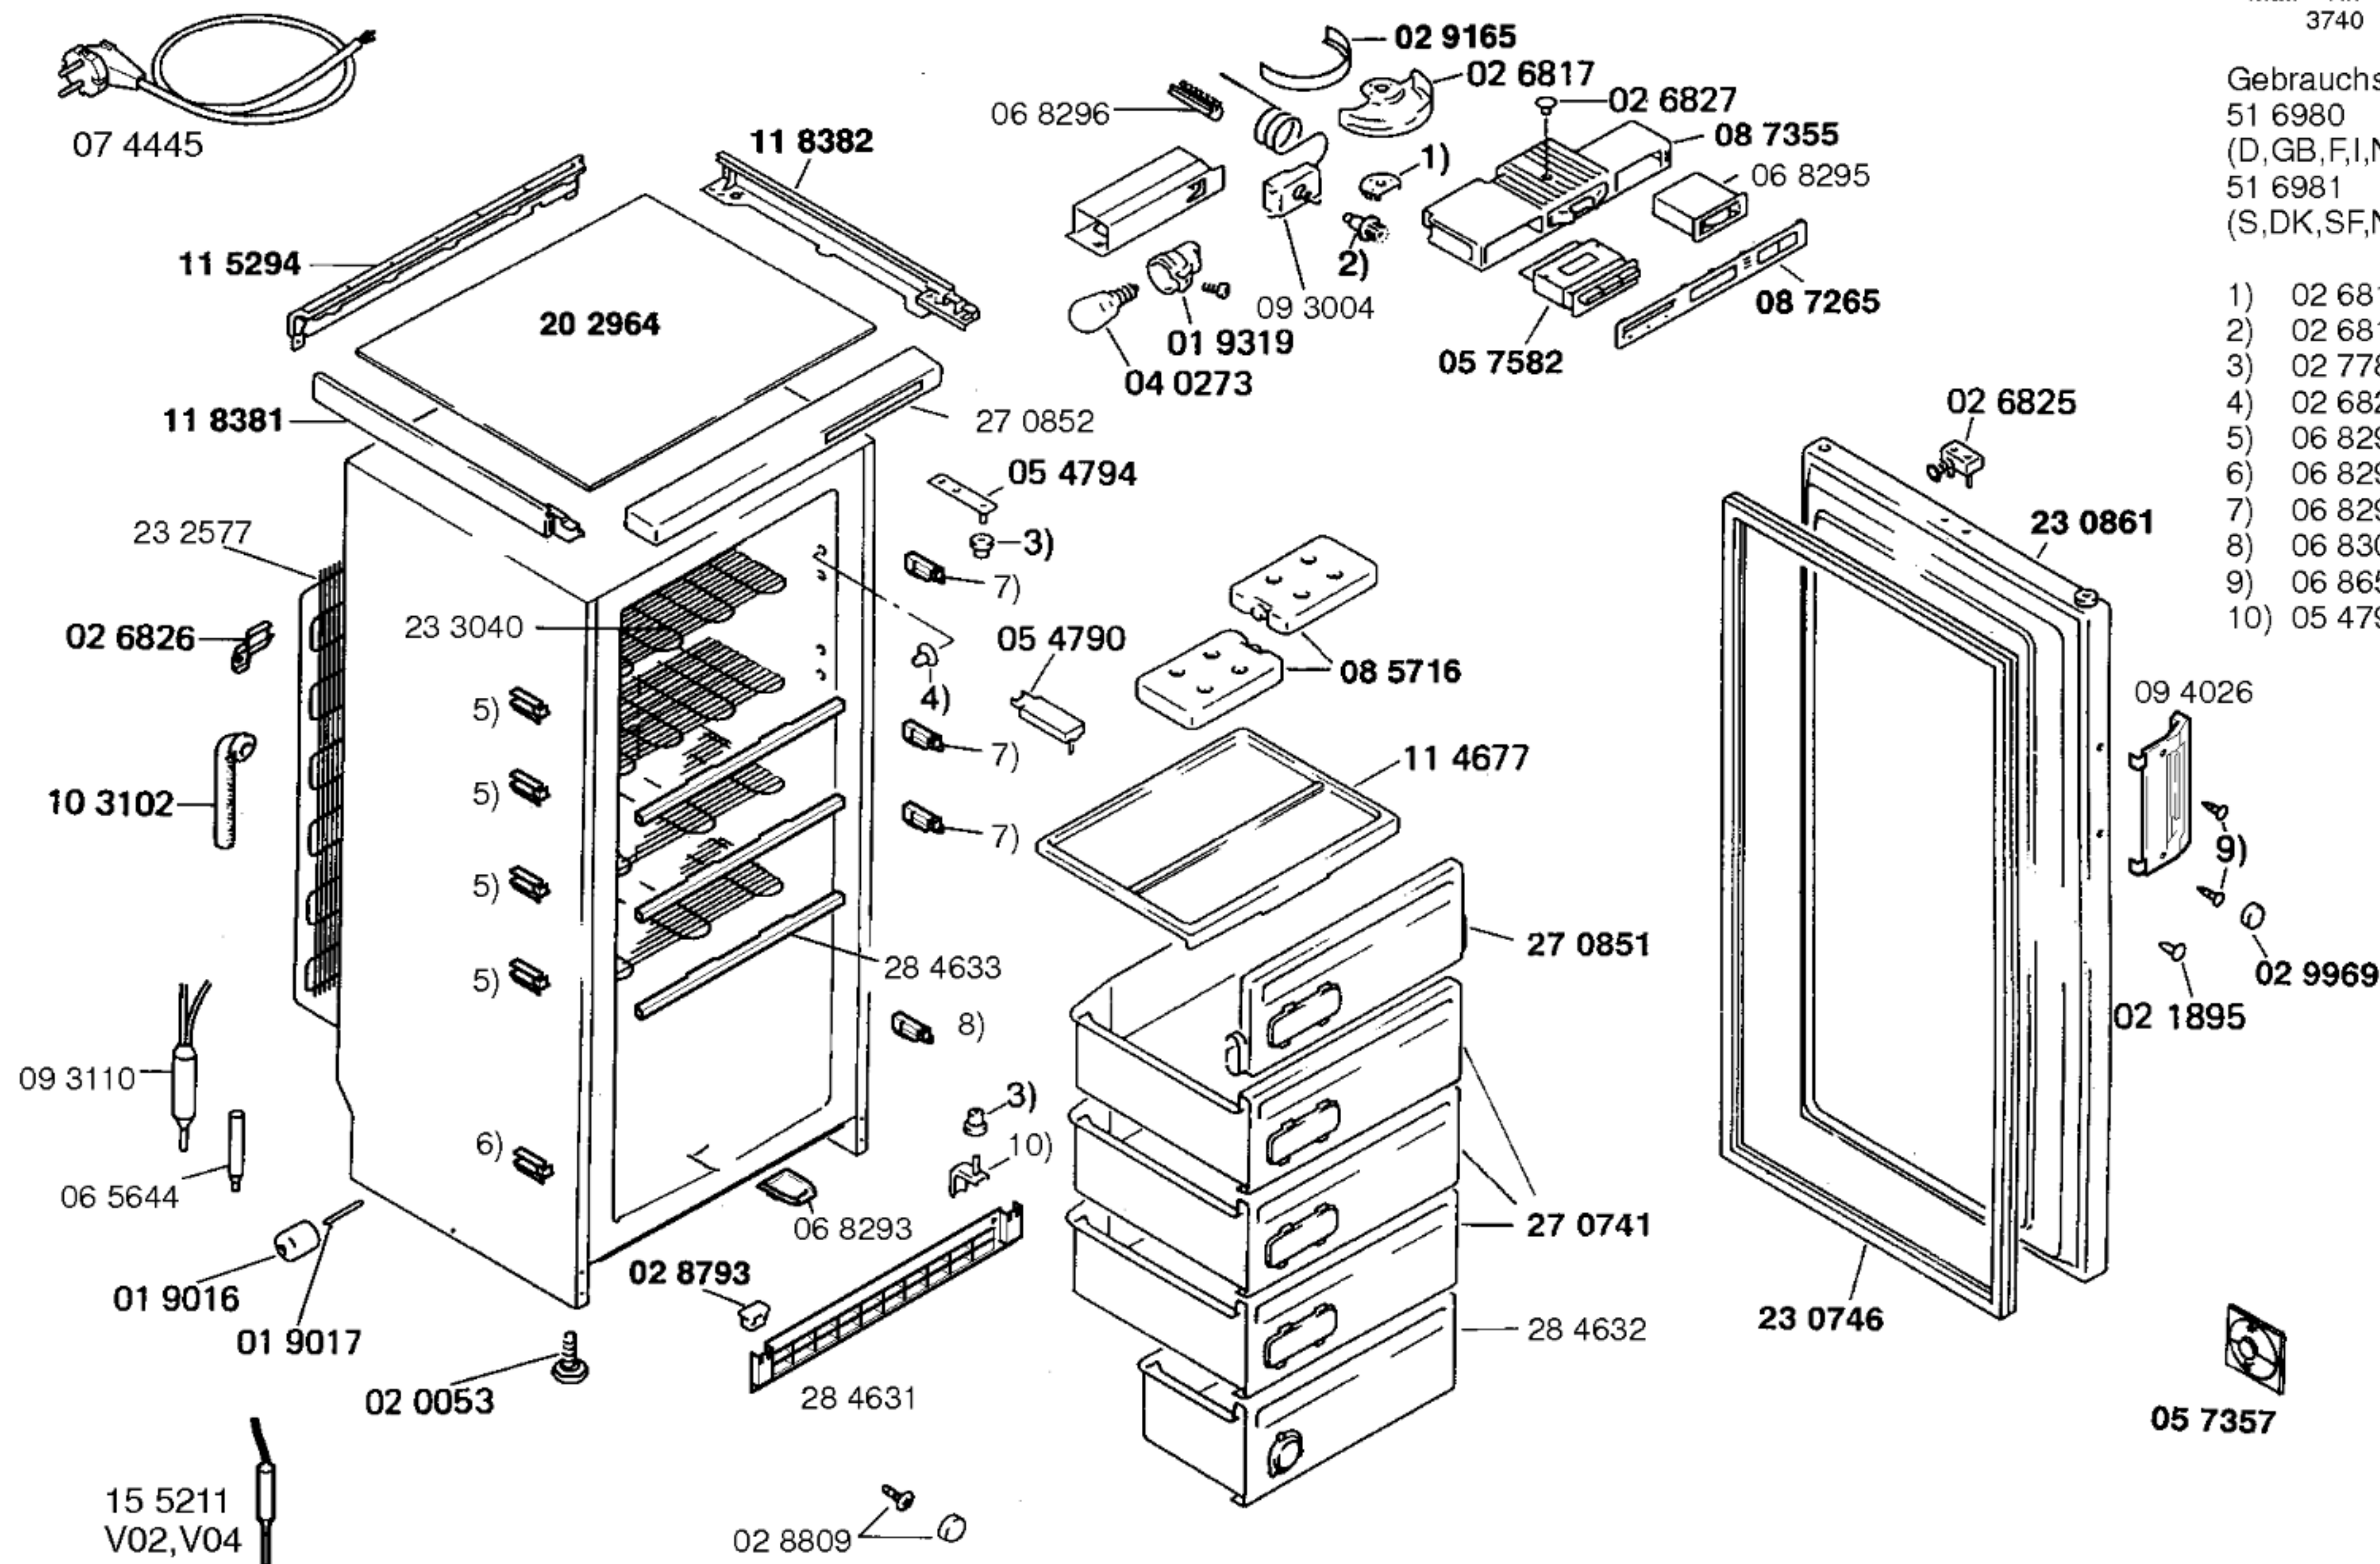


**BOSCH**

GSS2104/01-V01

GSS2104/02-V02

GSS2104/03-V03

GSS2104/04-V04

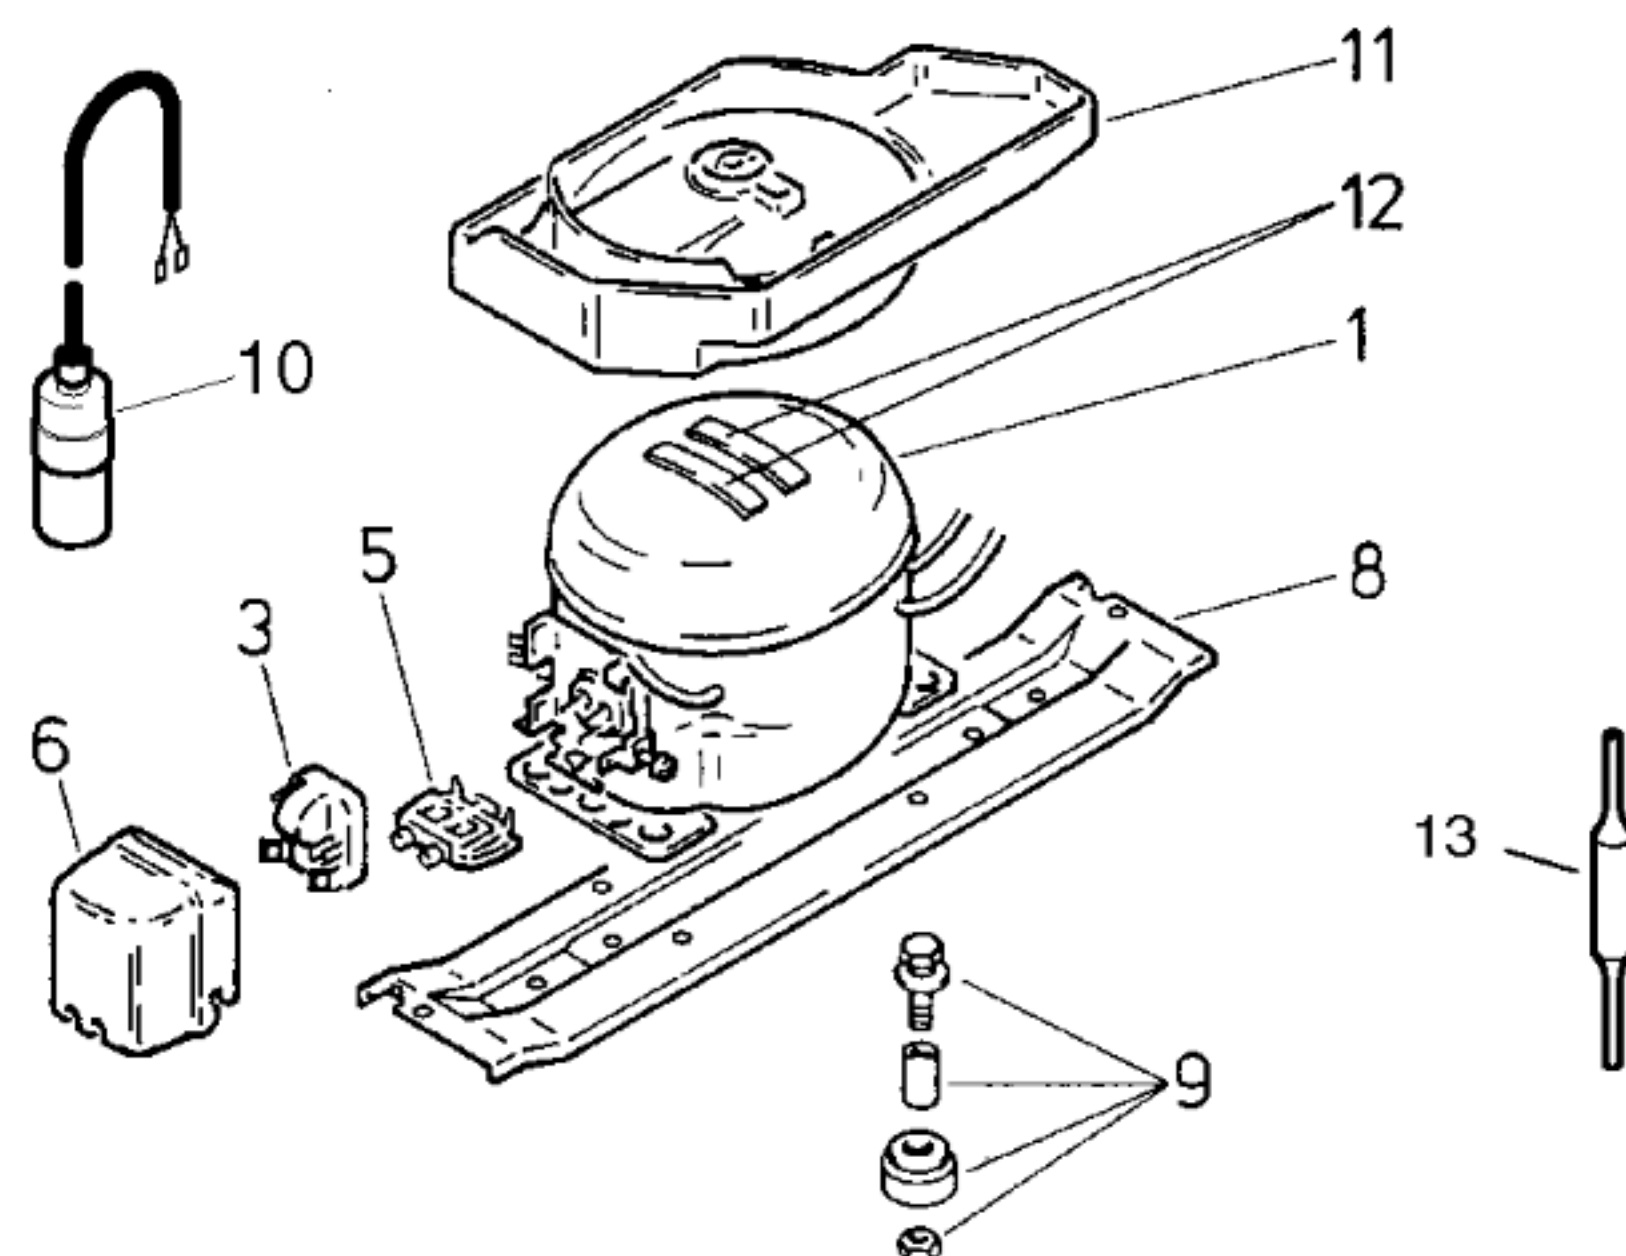KÜHL-,GEFRIERGERÄTE
Gefrierschränke, StandMat. – Nr. – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Matsushita
Typ/Type		NLE 11 K	DA 110 E
Förderleistung/Delivery/Débit	l/h	2007	1980
Anlaufstrom/Starting current/Cour de démarrage	A	10,7	8,7
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	12,9	12
	Hi/aux Ω	18	28,7
Temp.-Regler/Thermostat		Danfoss	
Typ/Type		077B2157	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-22	-14
Valeurs de commutation	„aus“	-32	-22
	(„abtauen“ od.) „alarm“	-17,5	-10
Füllmenge/Fill.quantity/Charge	R600a g	65	
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

	V01,V03	V02,V04	
Pos.	Danfoss	Matsushita	
	NLE 11 K	DA110E	
1	14 1319	14 1324	
2			
3	15 1055	05 8506	
4			
5	15 0760		
6	15 1072	05 8458	
7			
8	11 1919	11 1919	
9	05 0166	05 0166	
10			
11			
12			
13	35 0026		