

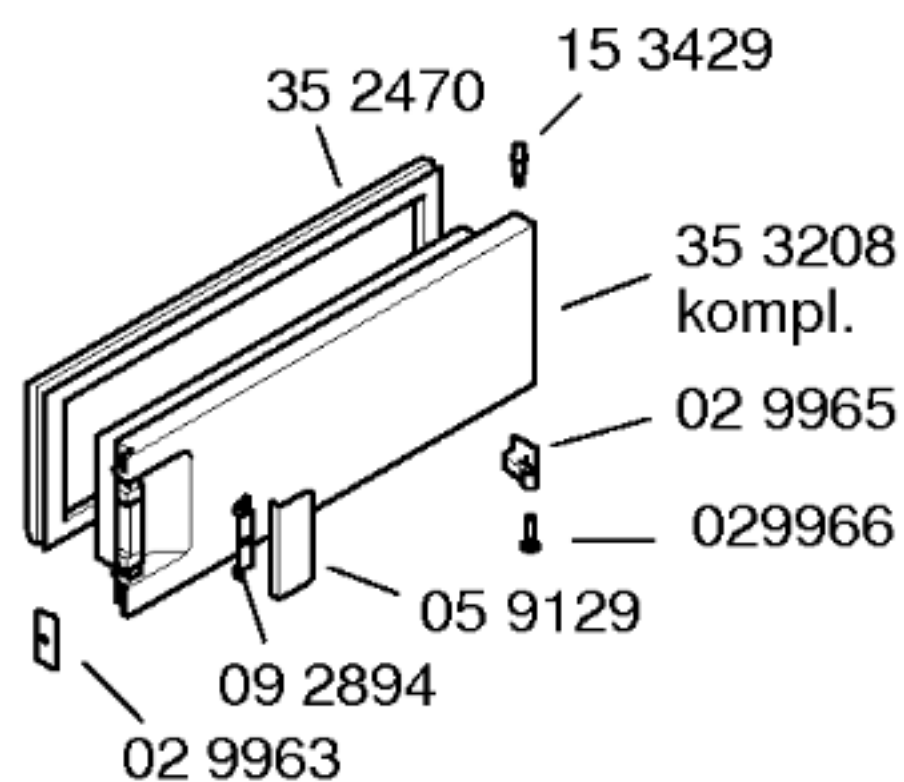


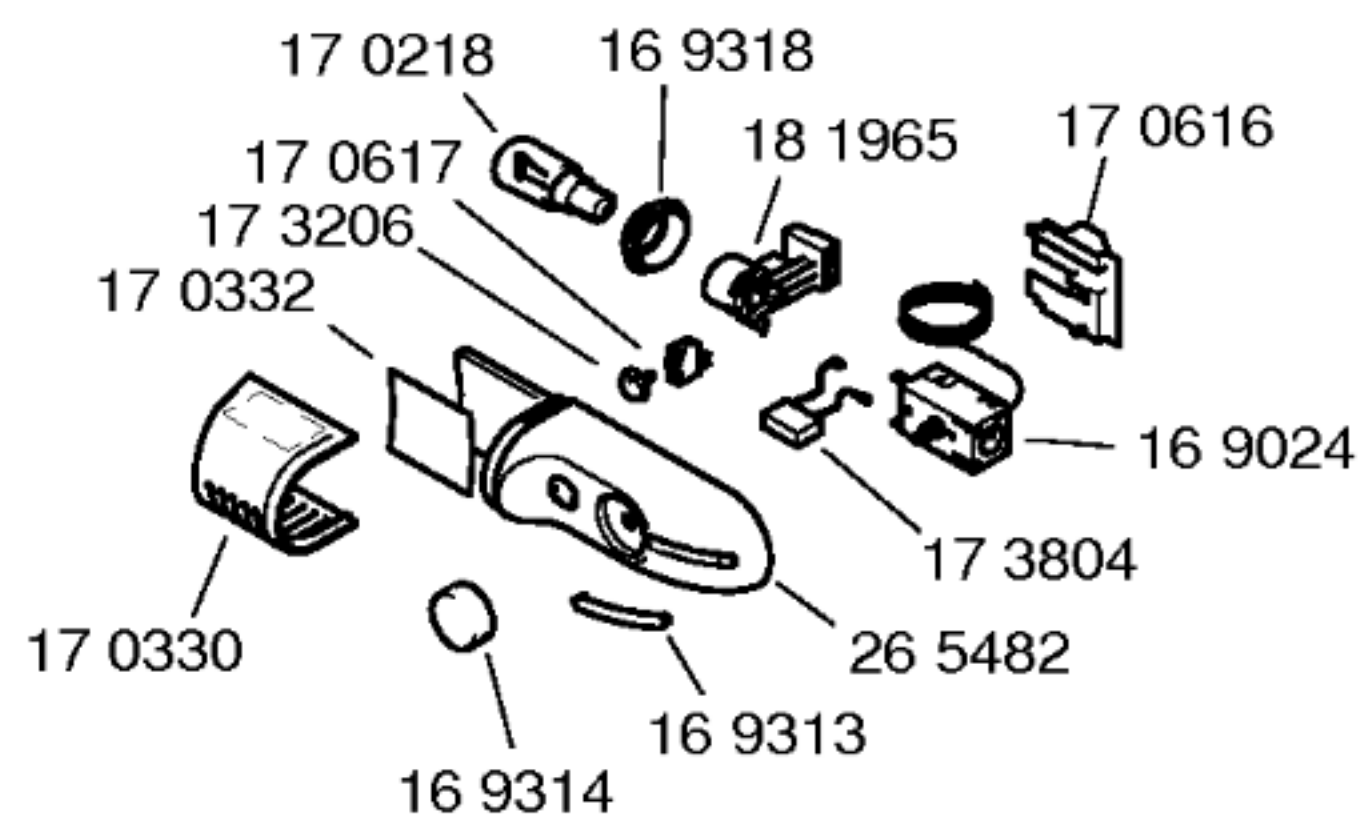


07 4445

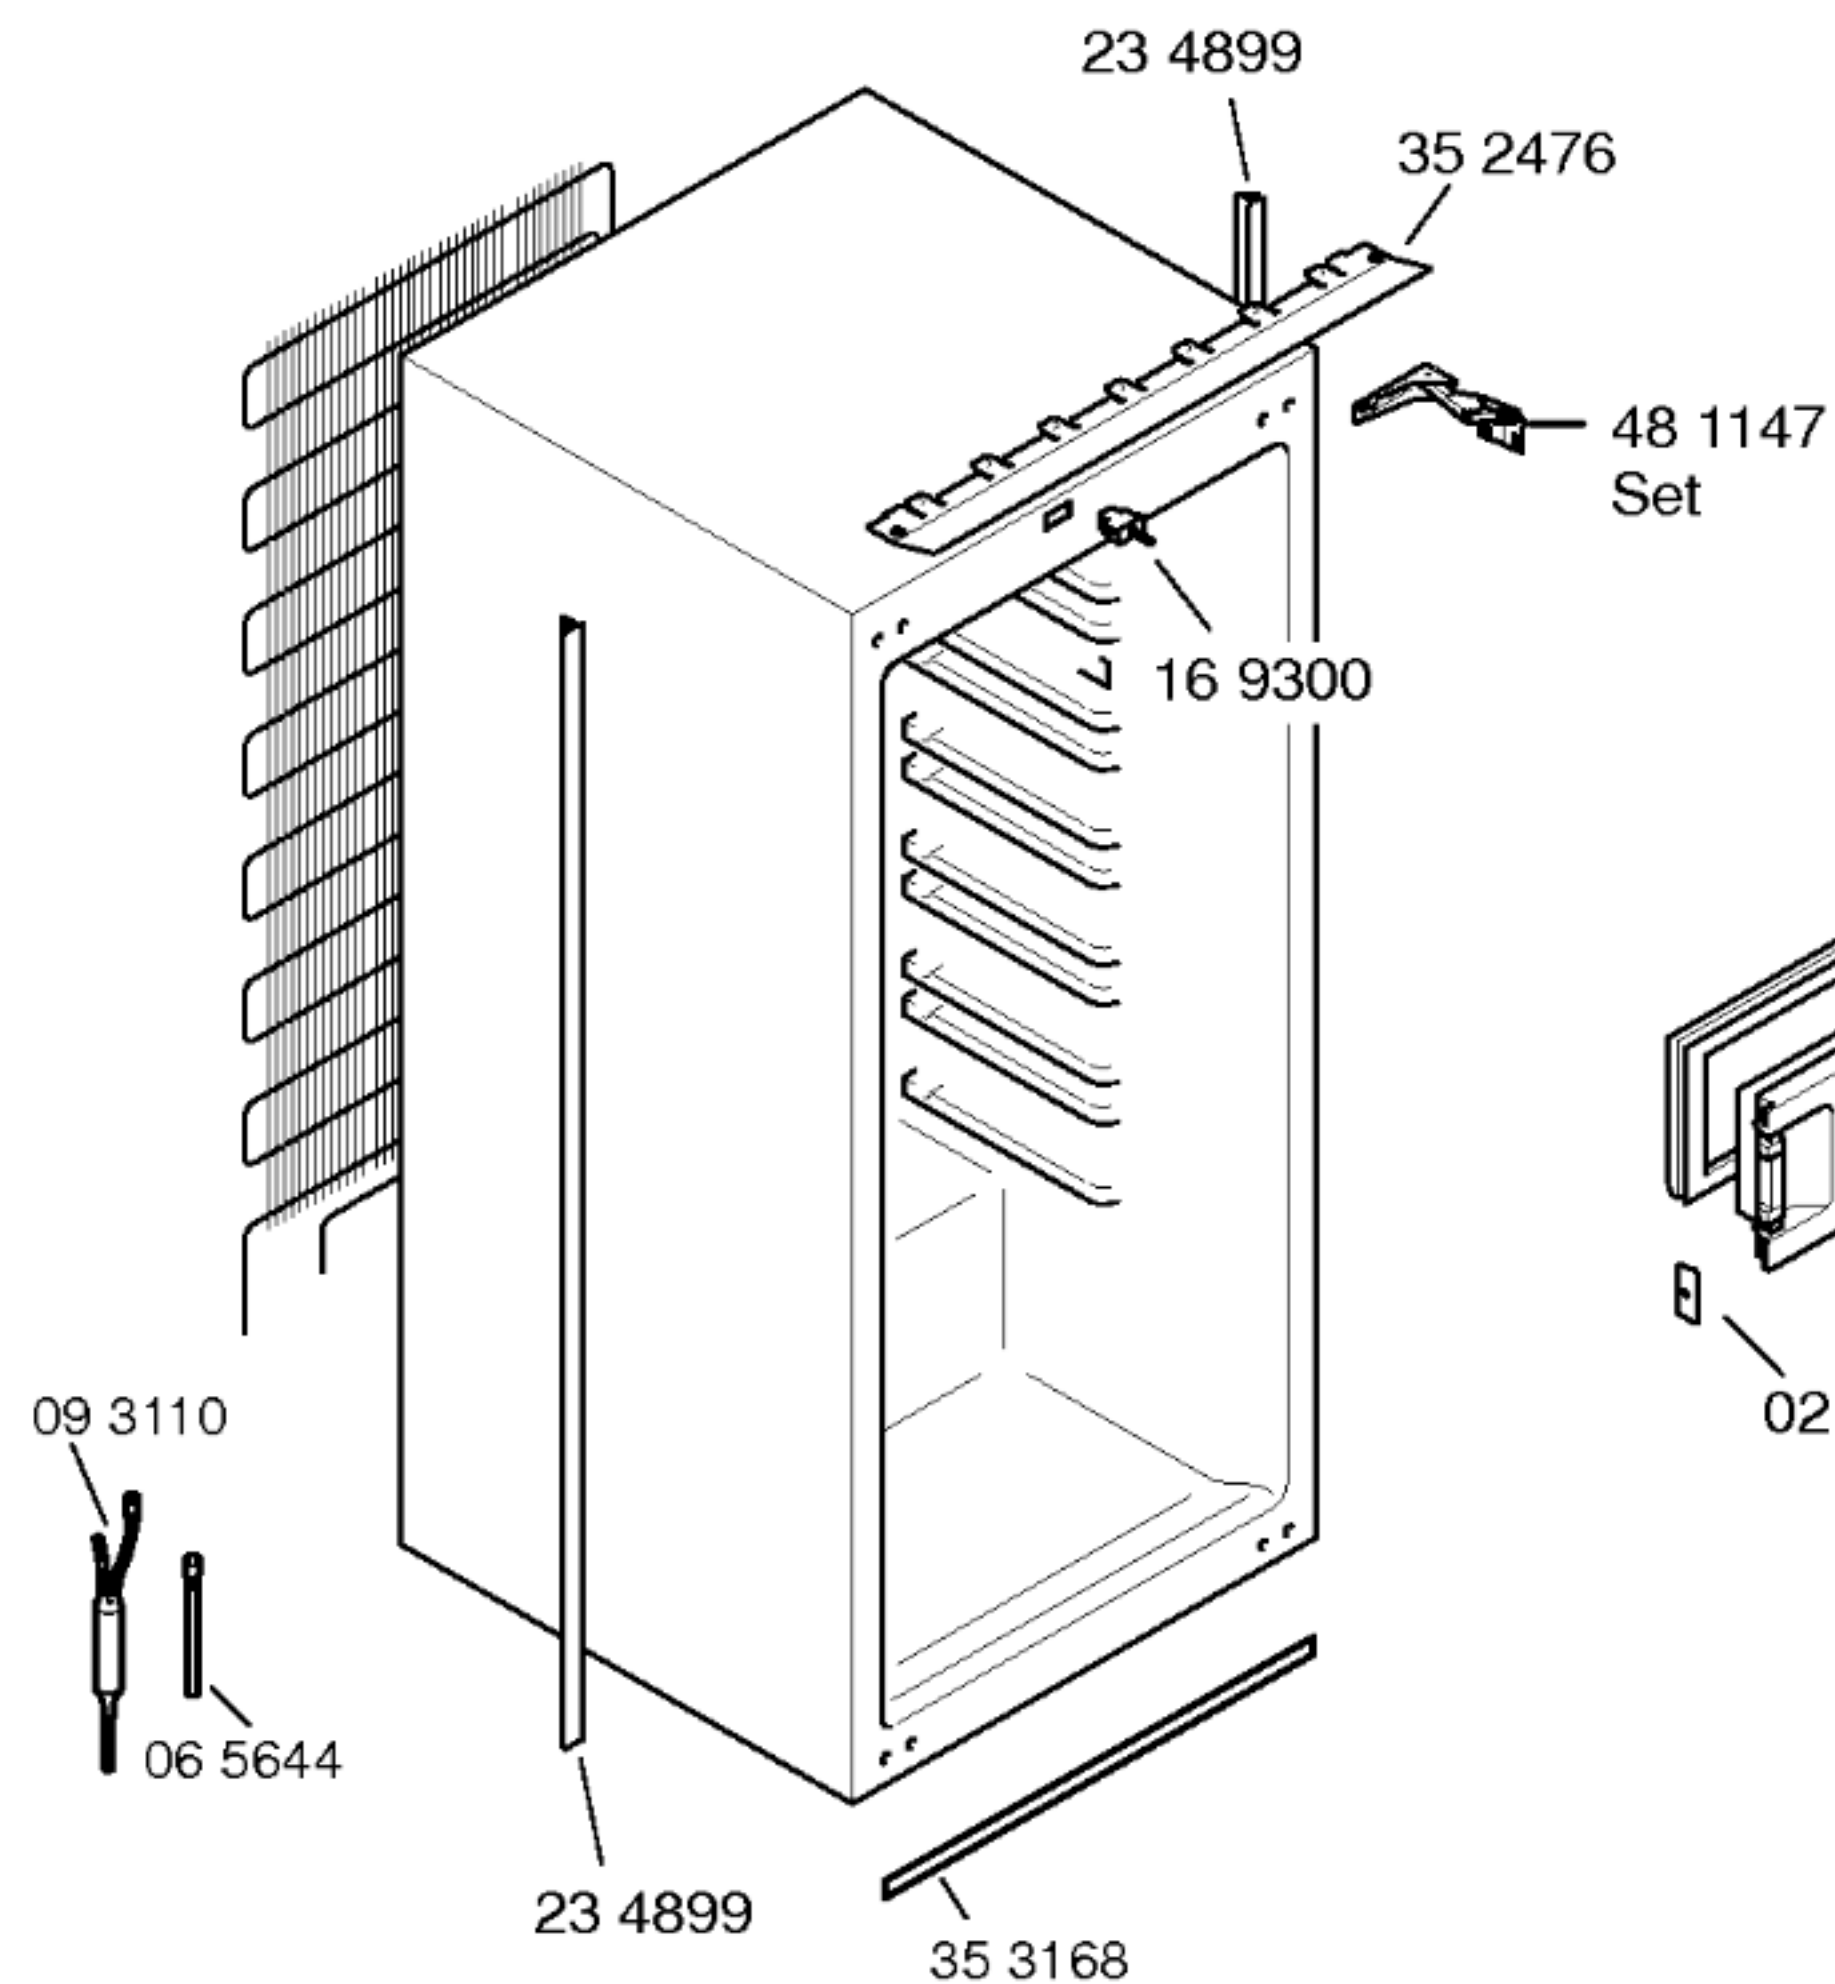


Gebrauchsanweisung
52 8708
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
48 1531

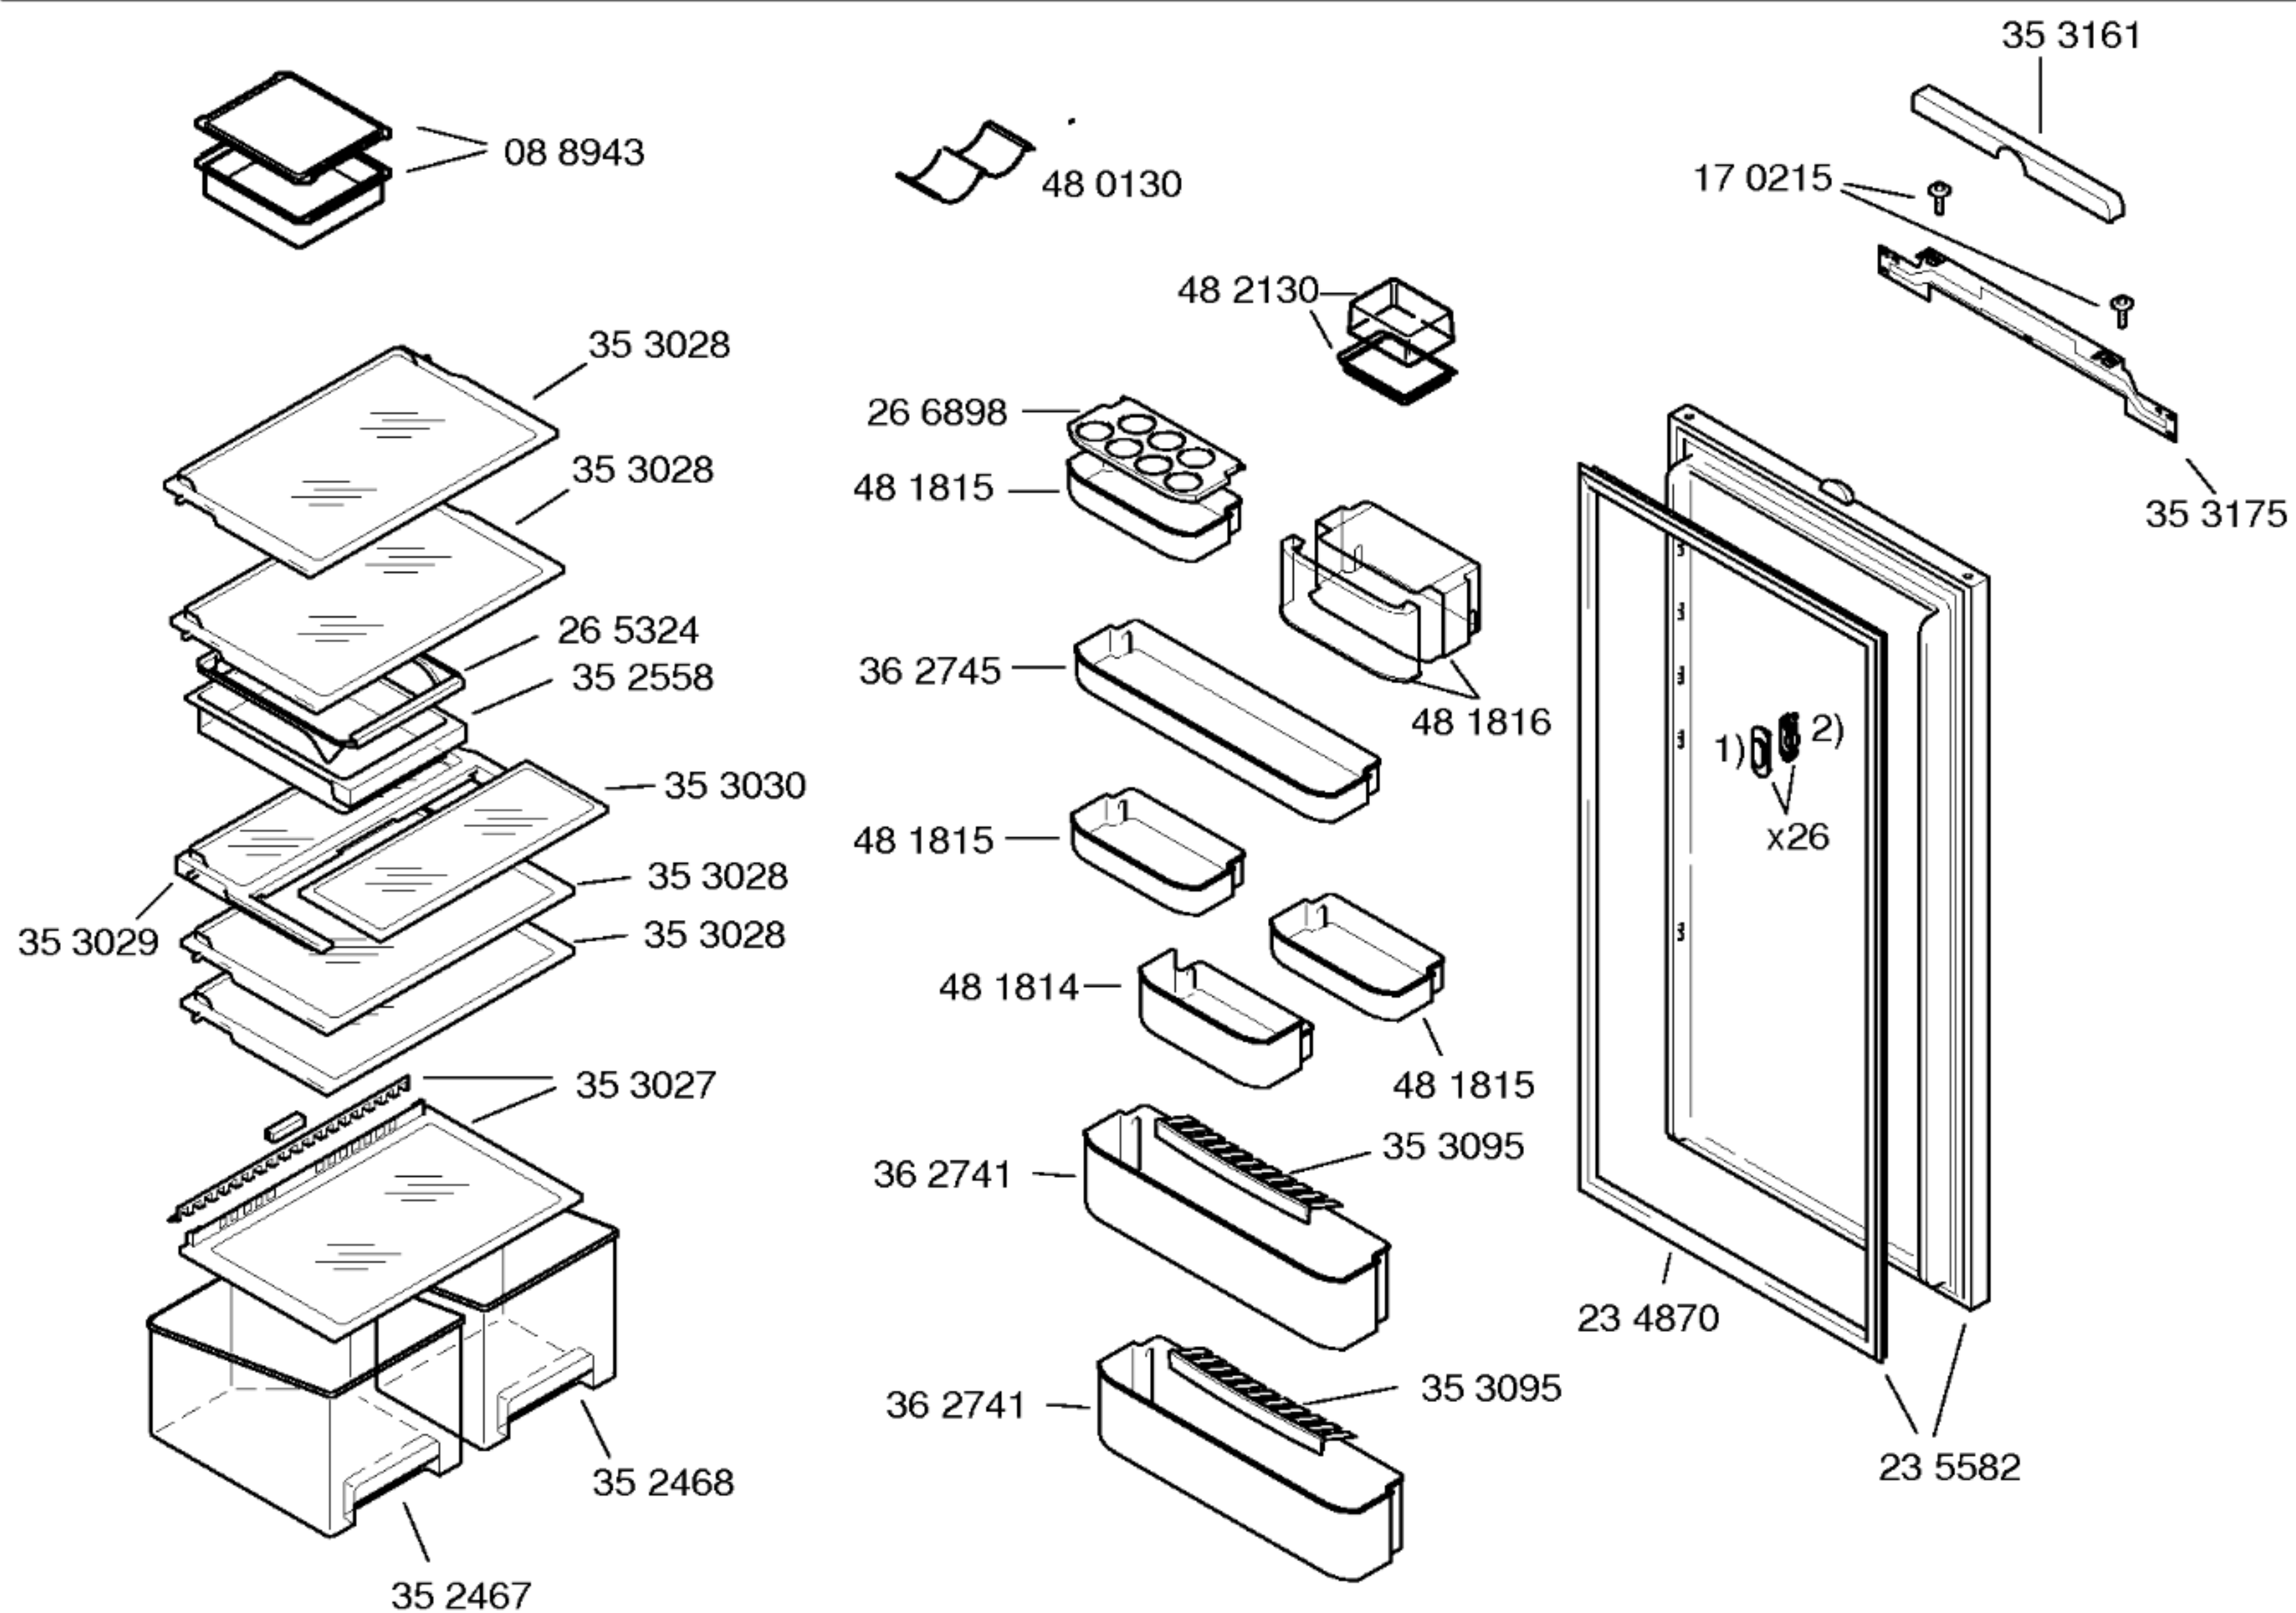

1) 17 3039
2) 17 3038

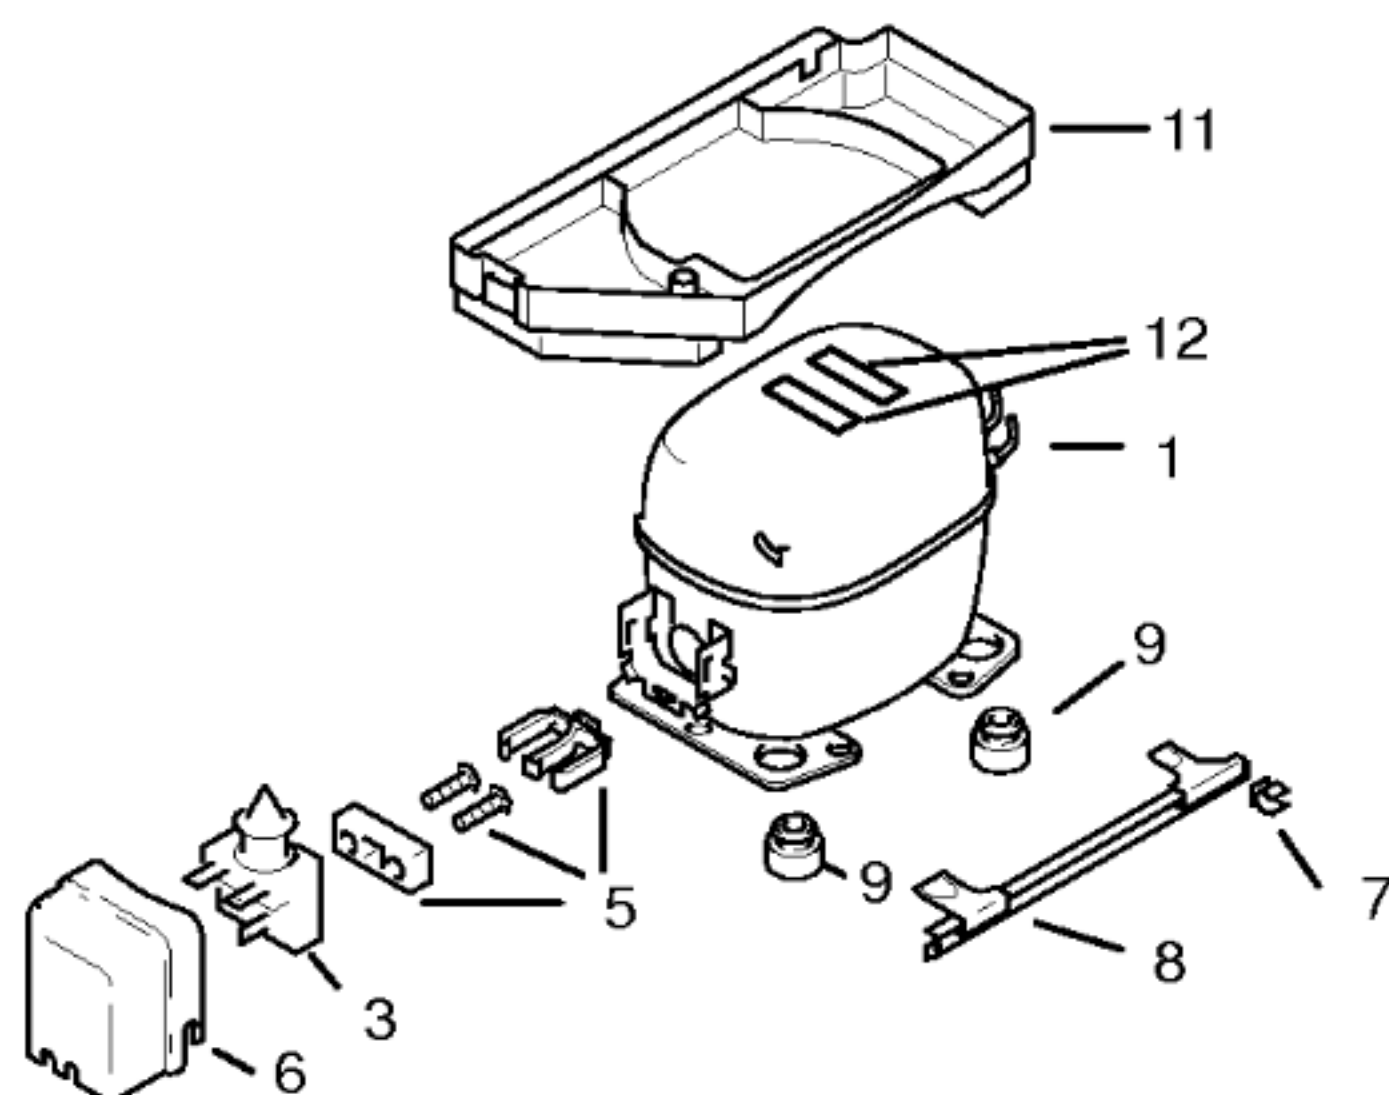

	V01	V02	
Pos.	Danfoss TLY7KK2	Aspera BPK 1084Y	
1	14 2059	14 2101	
2			
3	15 1055	18 0819	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10			
11	26 4878	36 5099	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLY7KK2		BPK 1084Y
Förderleistung/Delivery/Débit	l/h	1168		1201
Anlaufstrom/Starting current/Cour de démarrage	A	5,7		3,6
Widerstand/Resistance/Résistance	Ha/main/prin	27,1		29,6
	Hi/aux	27,2		39,1
Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt		warm
Schaltwerte/Switching values	"warm"	+5,2		+5,2
Valeurs de commutation	"kalt"	-32,0		-15,
	"alarm"	0		
Füllmenge/Fill.quantity/Charge		R600a		*
Anschlußwert/Conn.load/Puiss. connectée		W	71	79
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	W			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	W			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	W			
Spannung/Voltage/Tension	V			

* siehe Typenschild