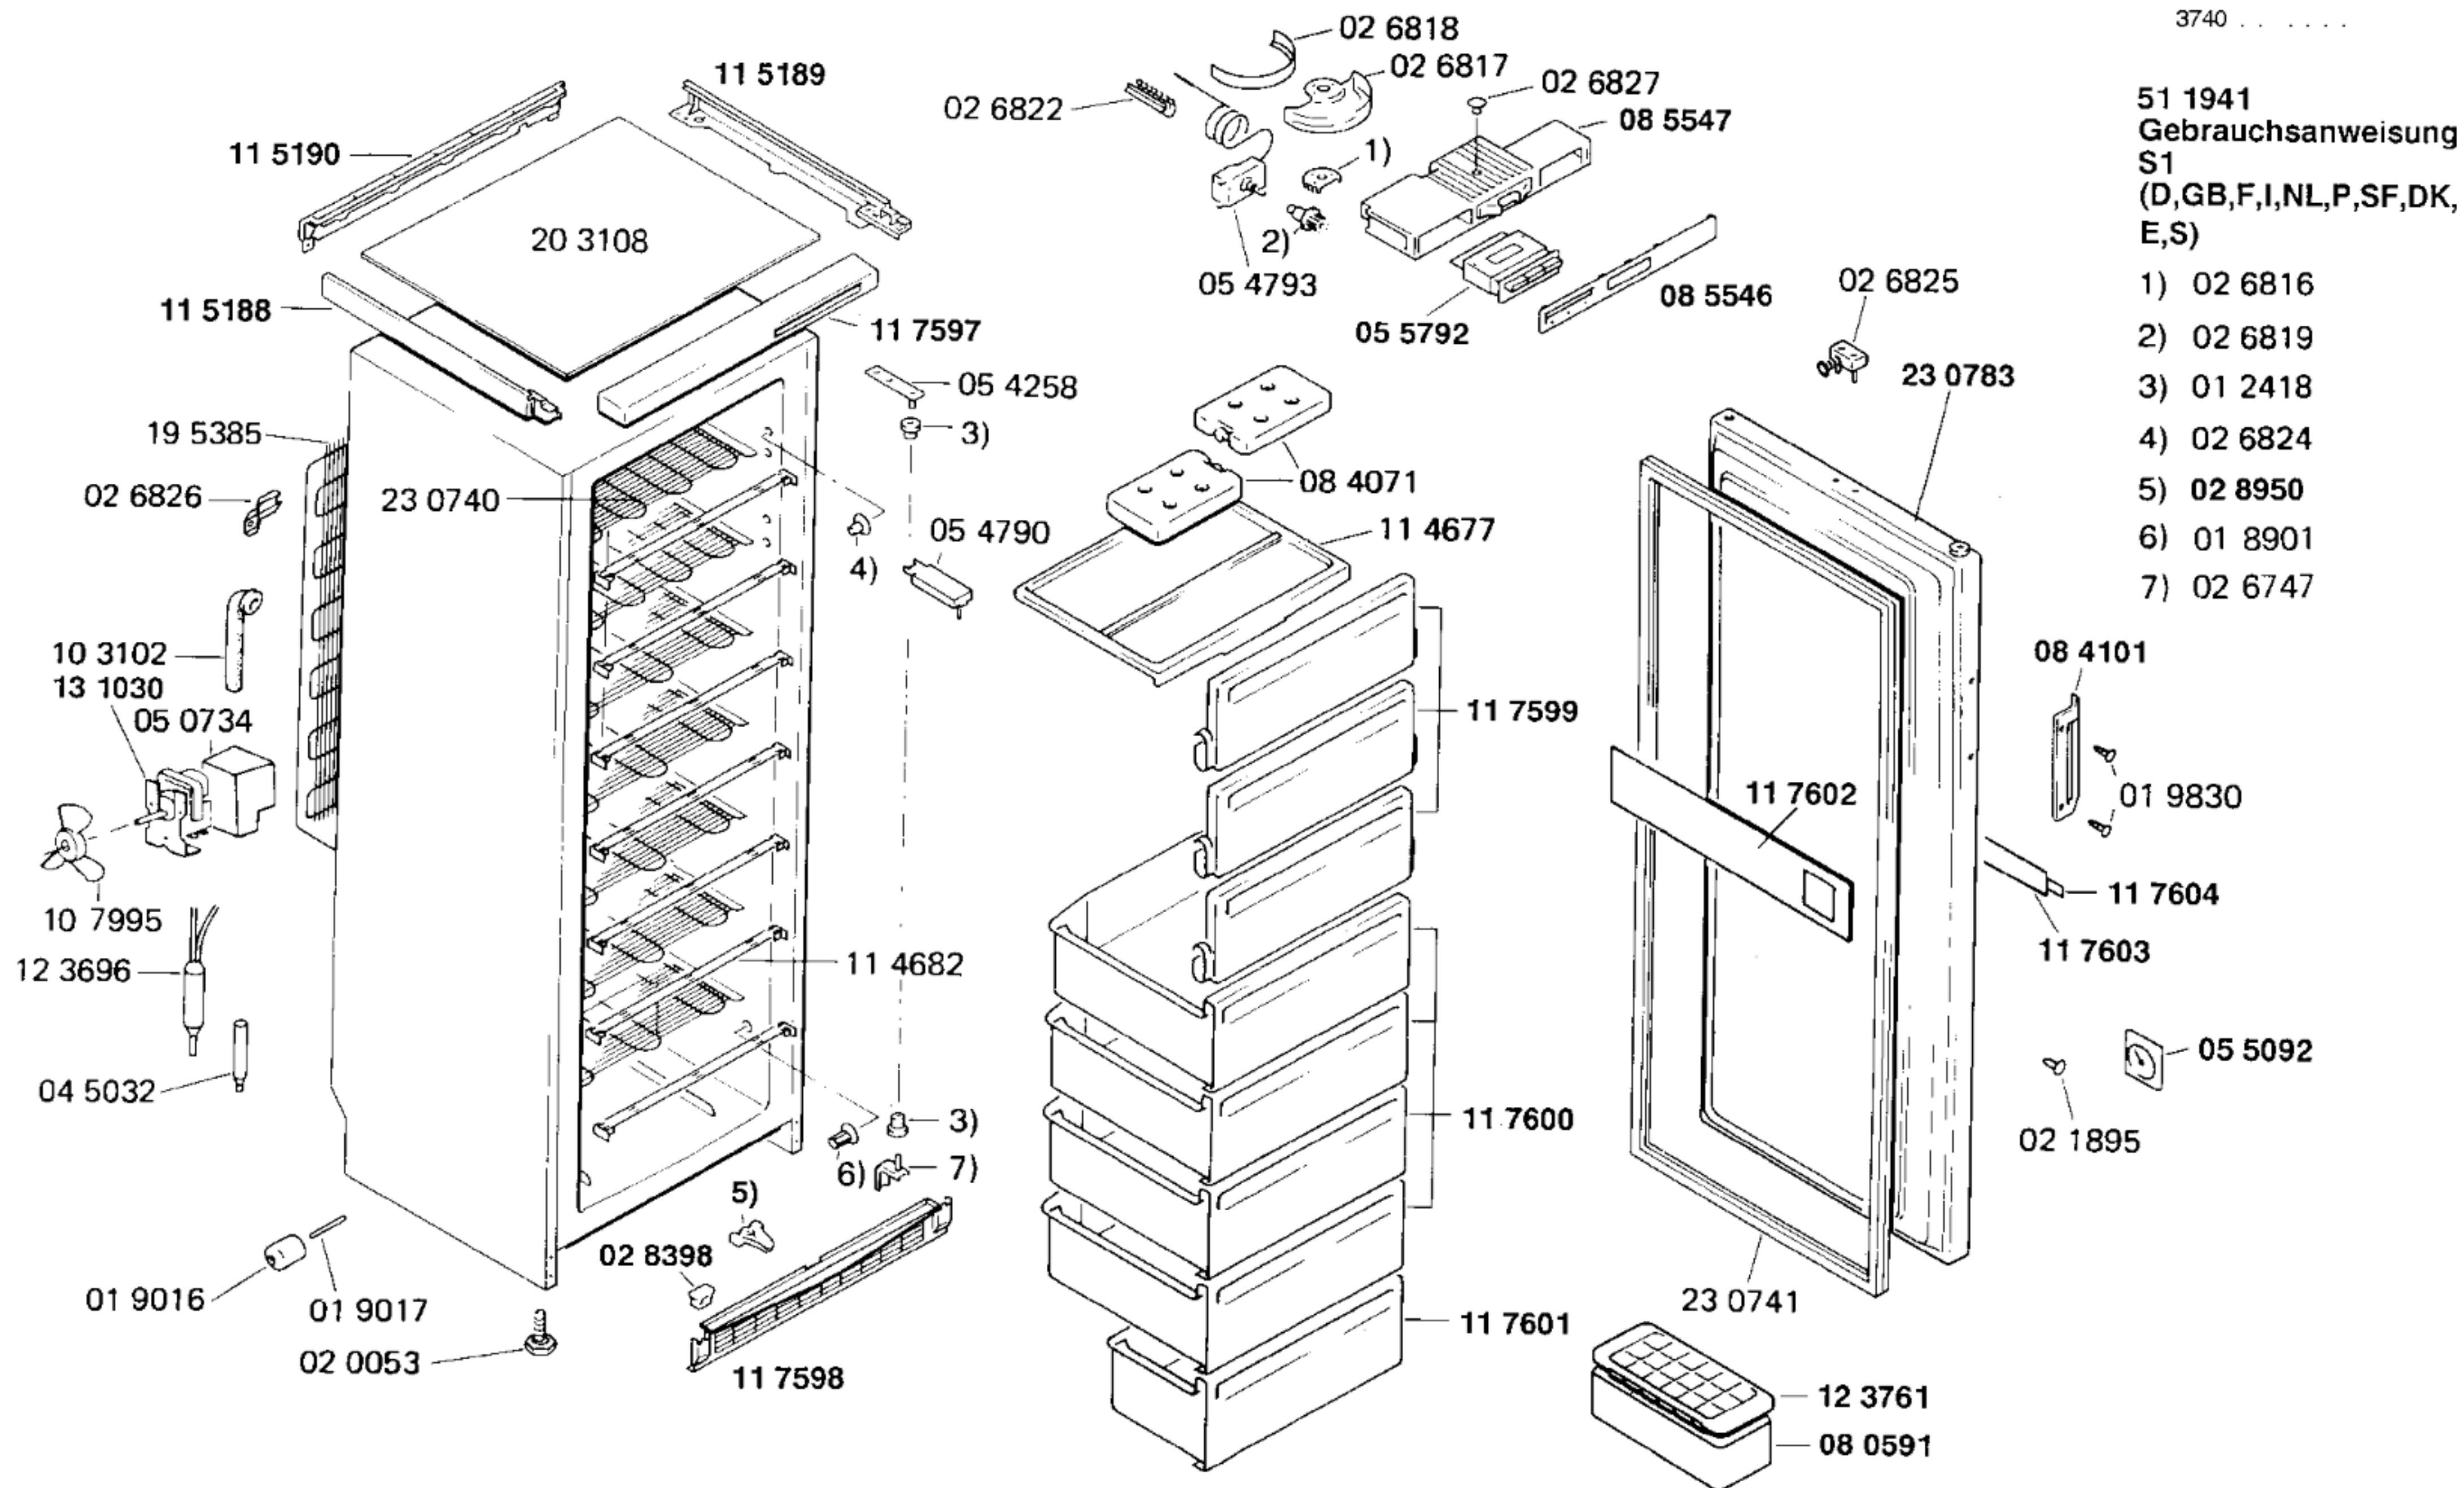



**BOSCH**

GSD 3631S/00-S1

GEFRIERGERÄTE
Gefrierschränke, StandIdent - Nummern - Konstante
3740

51 1941
Gebrauchsanweisung
S1
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 01 2418
- 4) 02 6824
- 5) 02 8950
- 6) 01 8901
- 7) 02 6747

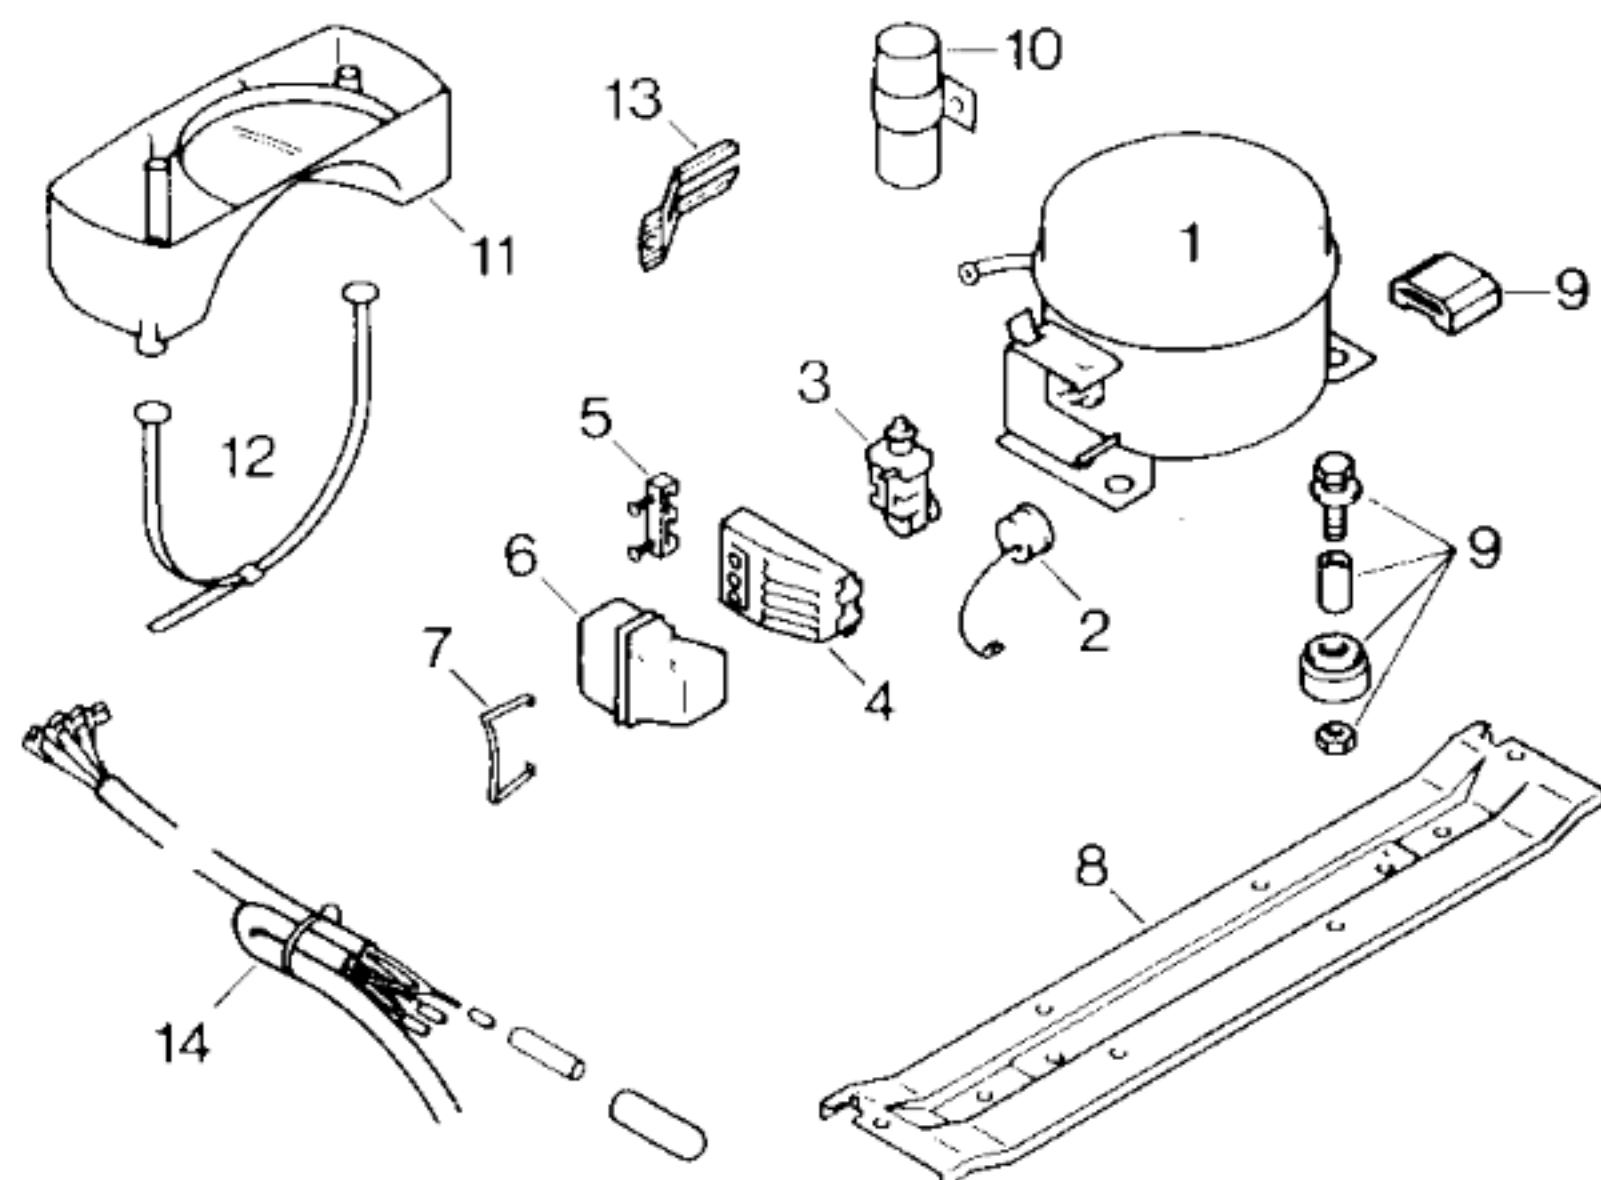Ident – Nummern – Konstante
3740

Pos.	Danfoss	
1	14 0427	
2		
3	02 0108	
4		
5	02 1361	
6	05 1413	
7		
8		
9	05 0166	
10		
11		
12		
13		
14		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss			
Typ/Type	FR 10 A			
Förderleistung/Delivery/Débit	l/h	1629		
Anlaufstrom/Starting current/Cour. de démarrage	A	11,4		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	10,7		
	Hi/aux Ω	13,0		
Temp.-Regler/Thermostat	Danfoss			
Typ/Type	077 B 2054			
Reglerstellung/Position	kalt warm			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	- 24 - 16		
Valeurs de commutation	„aus“	- 34 - 24		
	(„abtauen“ od.) „alarm“	- 19 - 12		
Füllmenge/Fill.quantity/Charge	R12	g	220	
Anschlußwert/Conn.load/Puiss. connectée	W	190		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω	190		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			