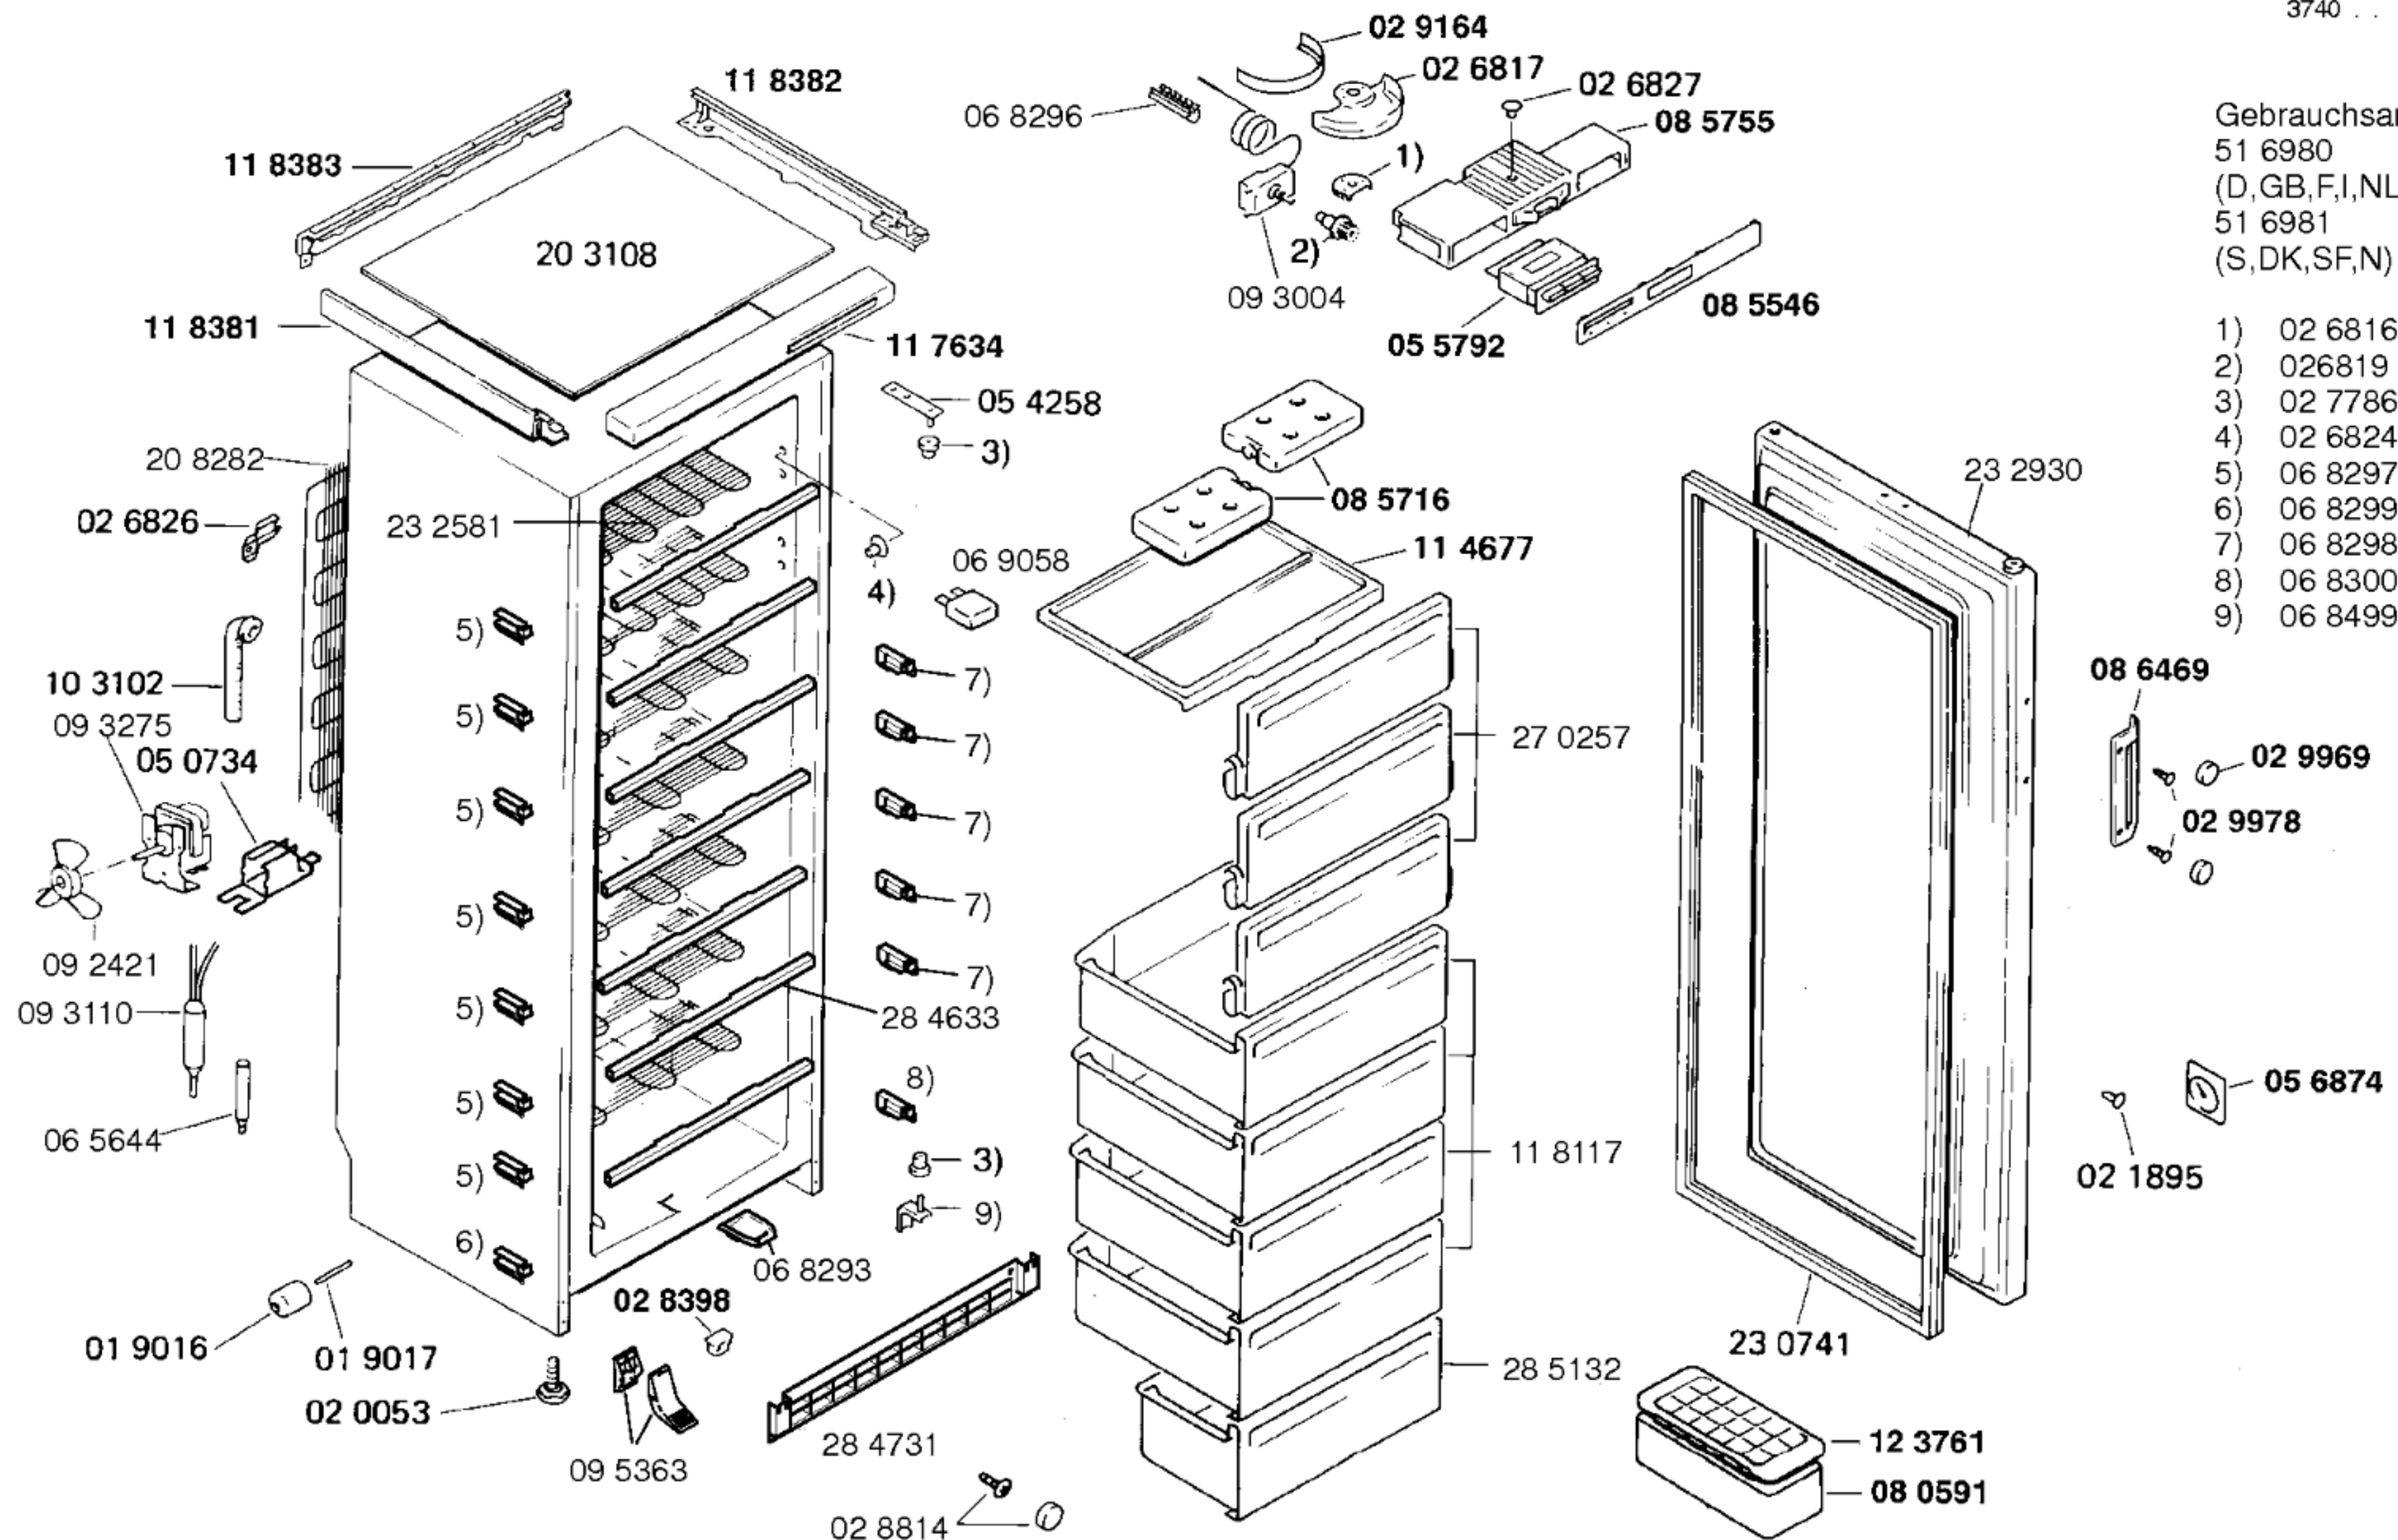



**BOSCH**

GSD 3515SD/01

GEFRIERGERÄTE
Gefrierschränke, StandIdent – Nummern – Konstante
3740

Gebrauchsanweisungen
51 6980
(D,GB,F,I,NL,P,E)
51 6981
(S,DK,SF,N)

- 1) 02 6816
- 2) 026819
- 3) 02 7786
- 4) 02 6824
- 5) 06 8297
- 6) 06 8299
- 7) 06 8298
- 8) 06 8300
- 9) 06 8499

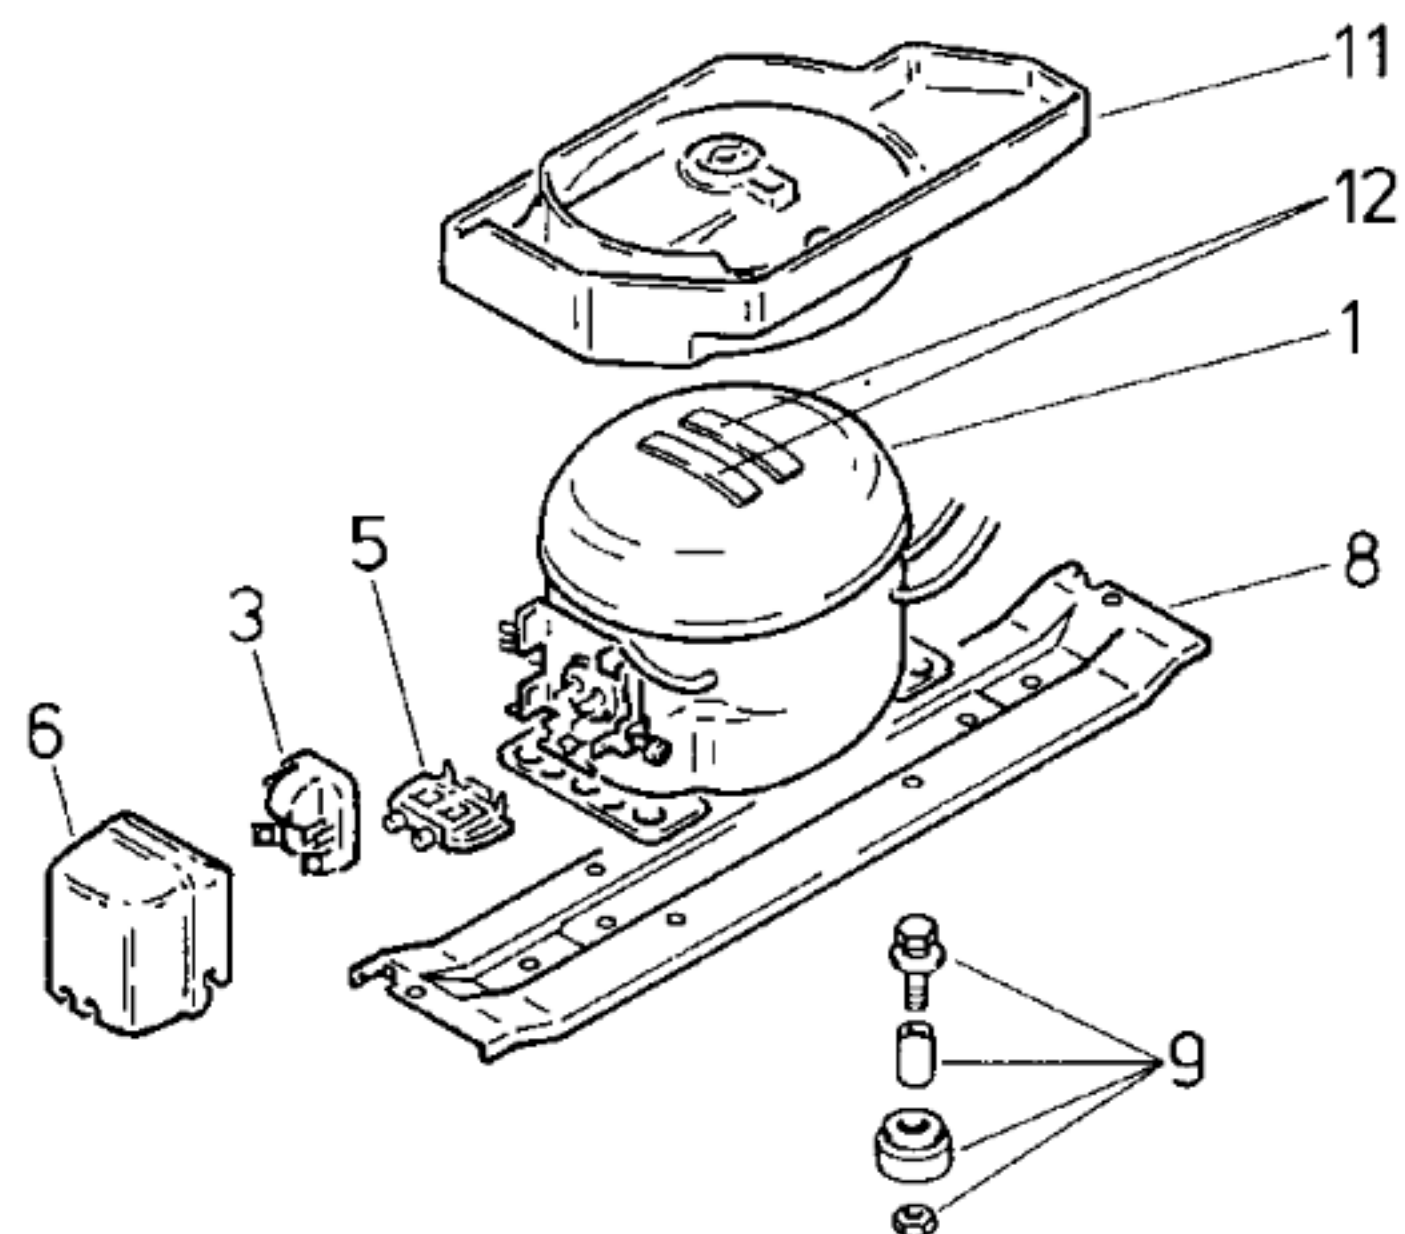Ident – Nummern – Konstante
3740

Pos.			
	Danfoss		
	NLE9F		
1	14 1257		
2			
3	06 8290		
4			
5	06 8292		
6	06 8291		
7			
8	11 1567		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE9F		
Förderleistung/Delivery/Débit		l/h	1503	
Anlaufstrom/Starting current/Cour de démarrage		A	10,5	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	13,0	
		Hi/aux Ω	17,6	
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077B2157		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-22 -14	
Valeurs de commutation		„aus“	-32 -22	
		(„abtauen“ od.) „alarm“	-17,5 -10	
Füllmenge/Fill.quantity/Charge		R134a g	200	
Anschlußwert/Conn.load/Puiss. connectée		W	190	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	190	
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		