



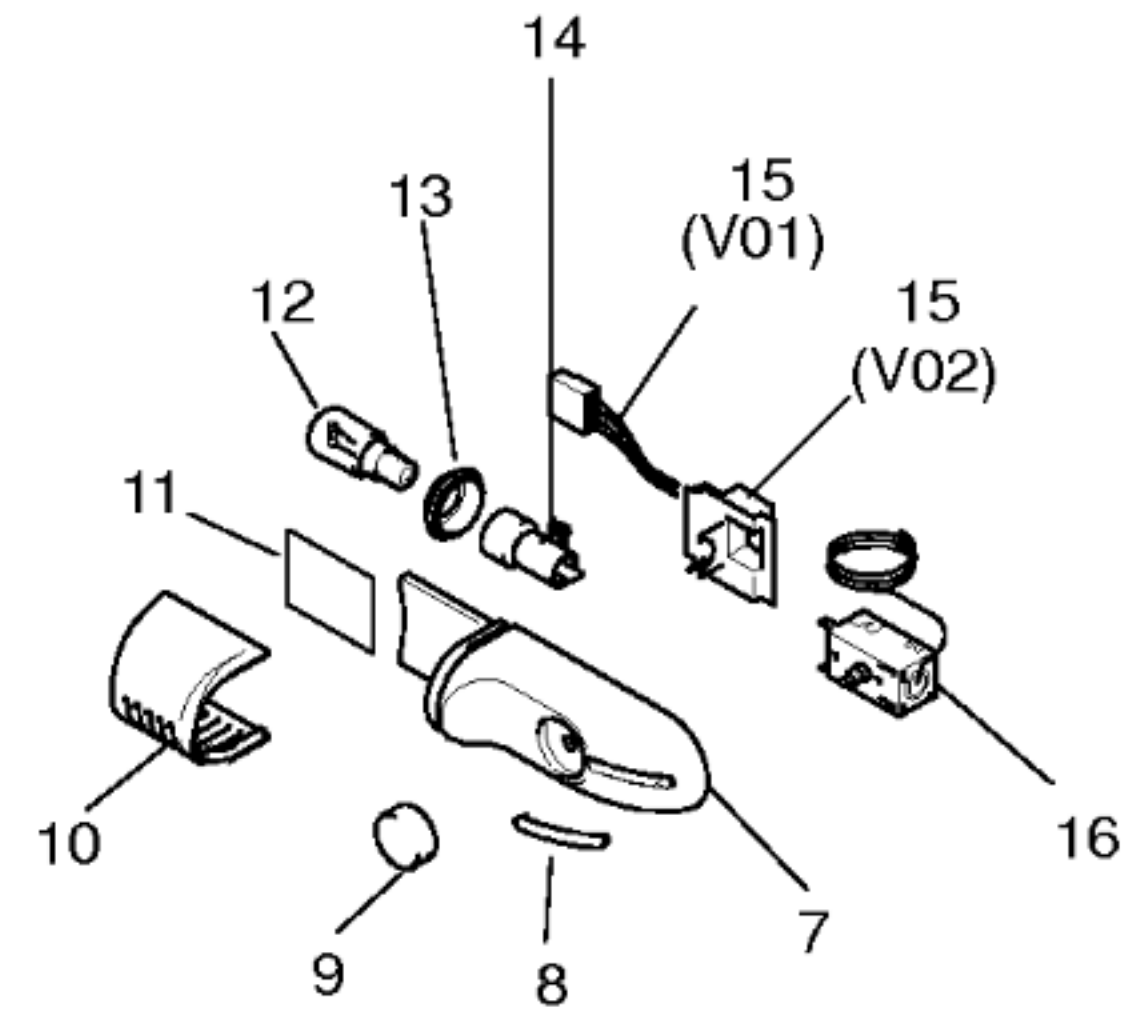


22

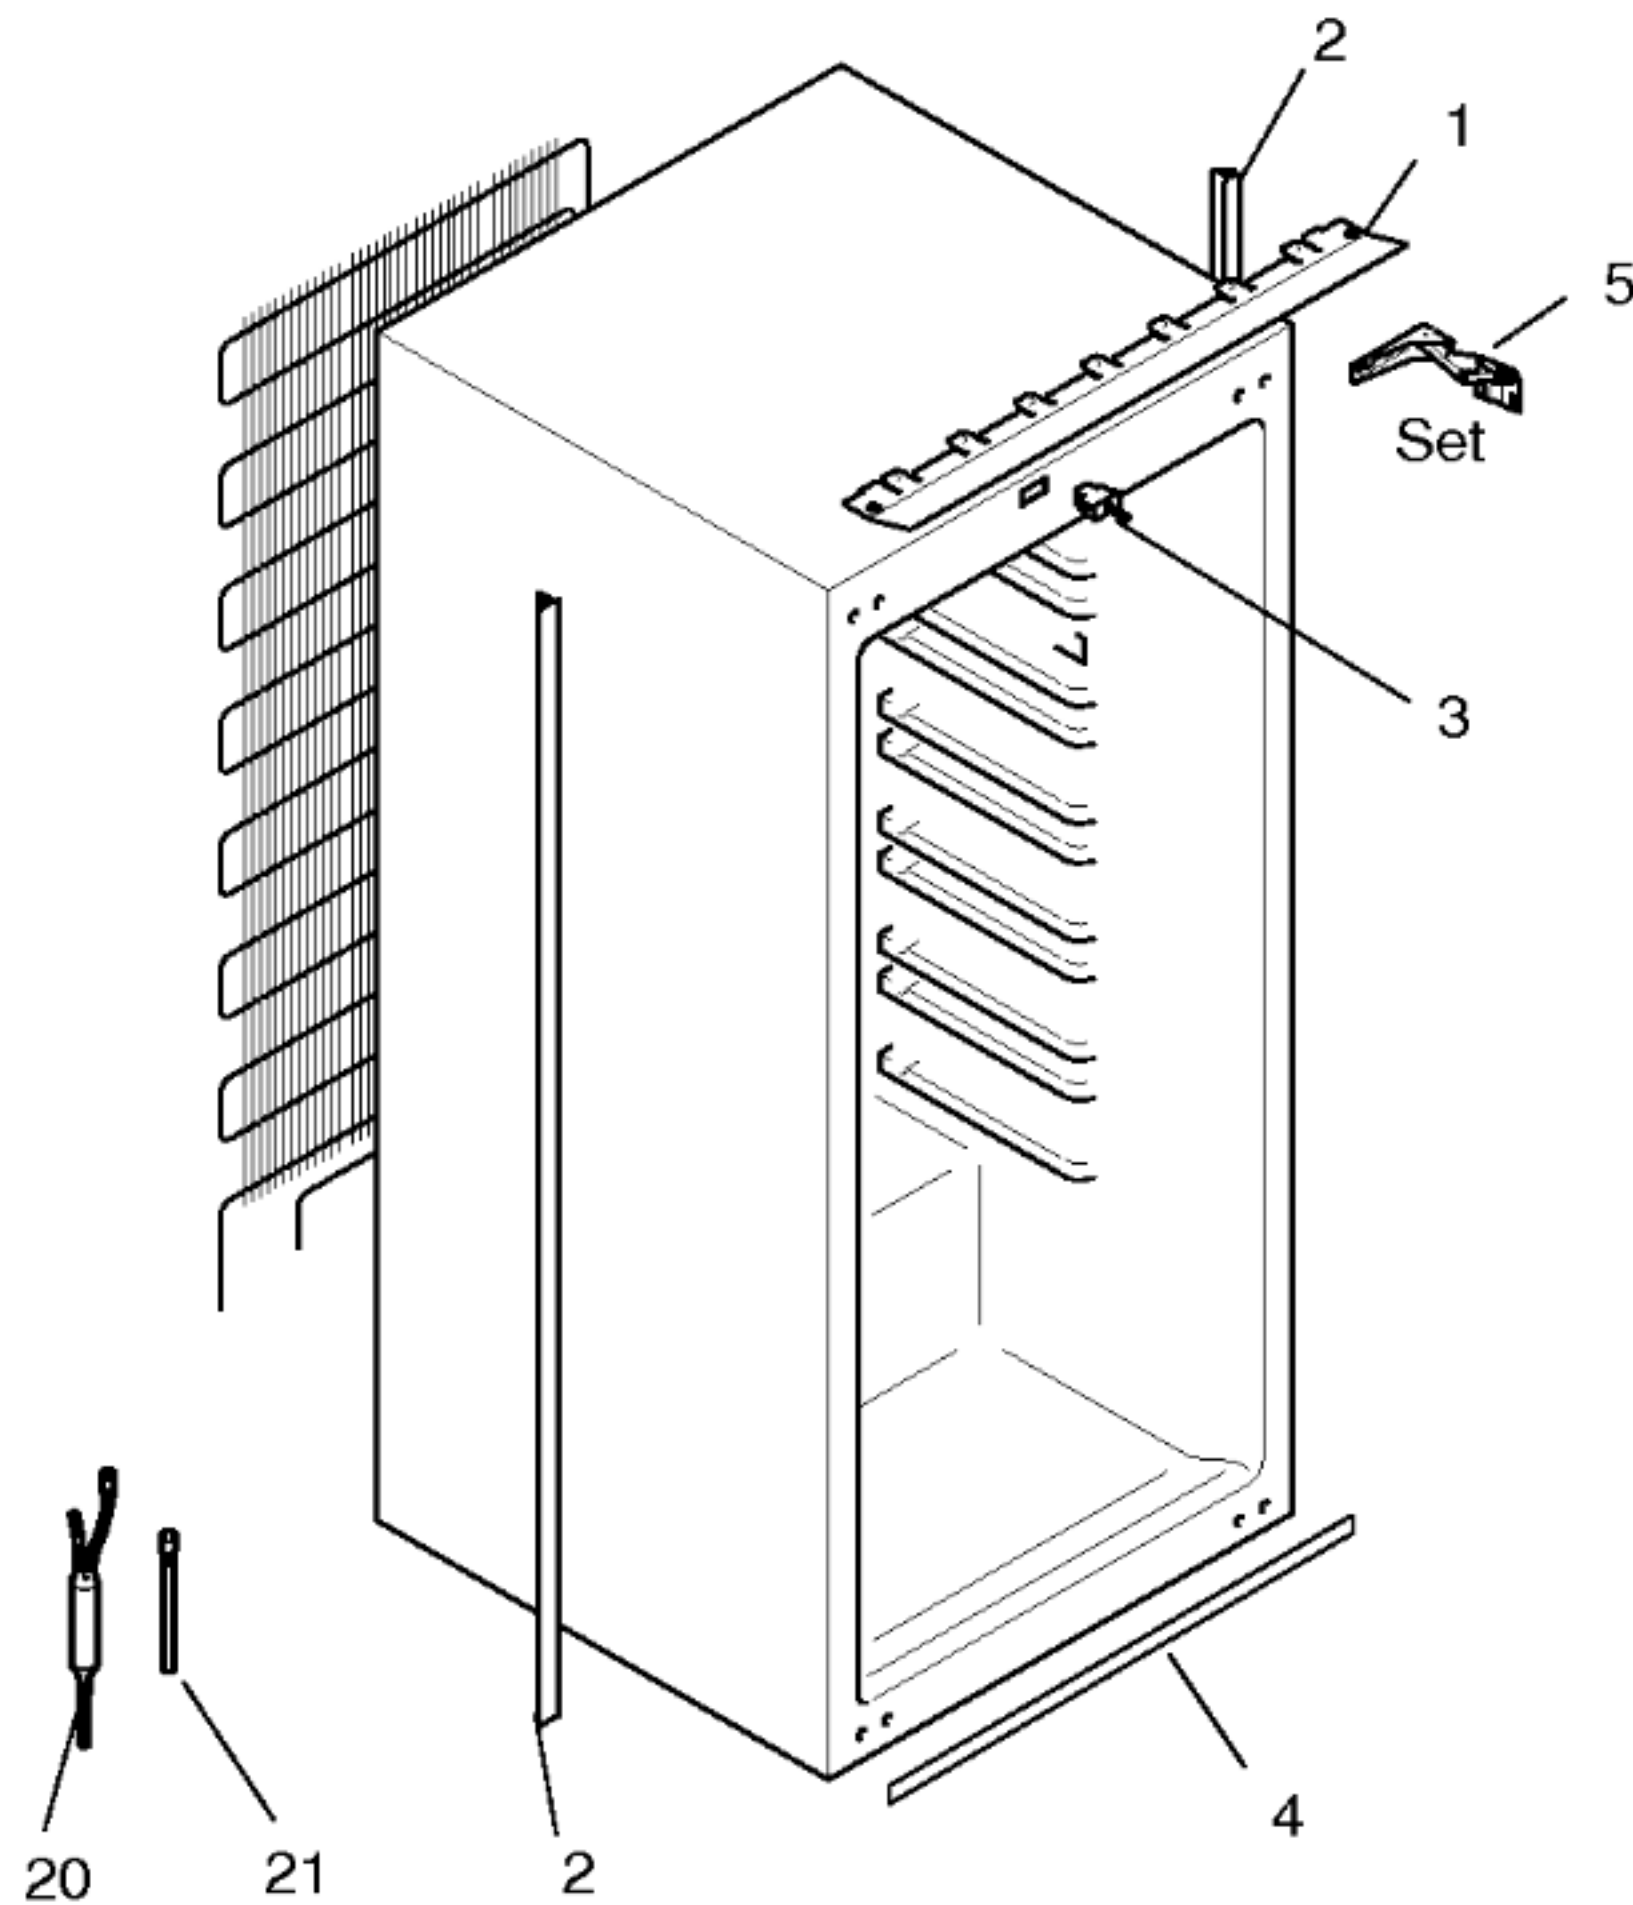


Gebrauchsanweisung
52 2691

Montage-/Aufstellanl.
58 8057

Beistellsatz
49 1368

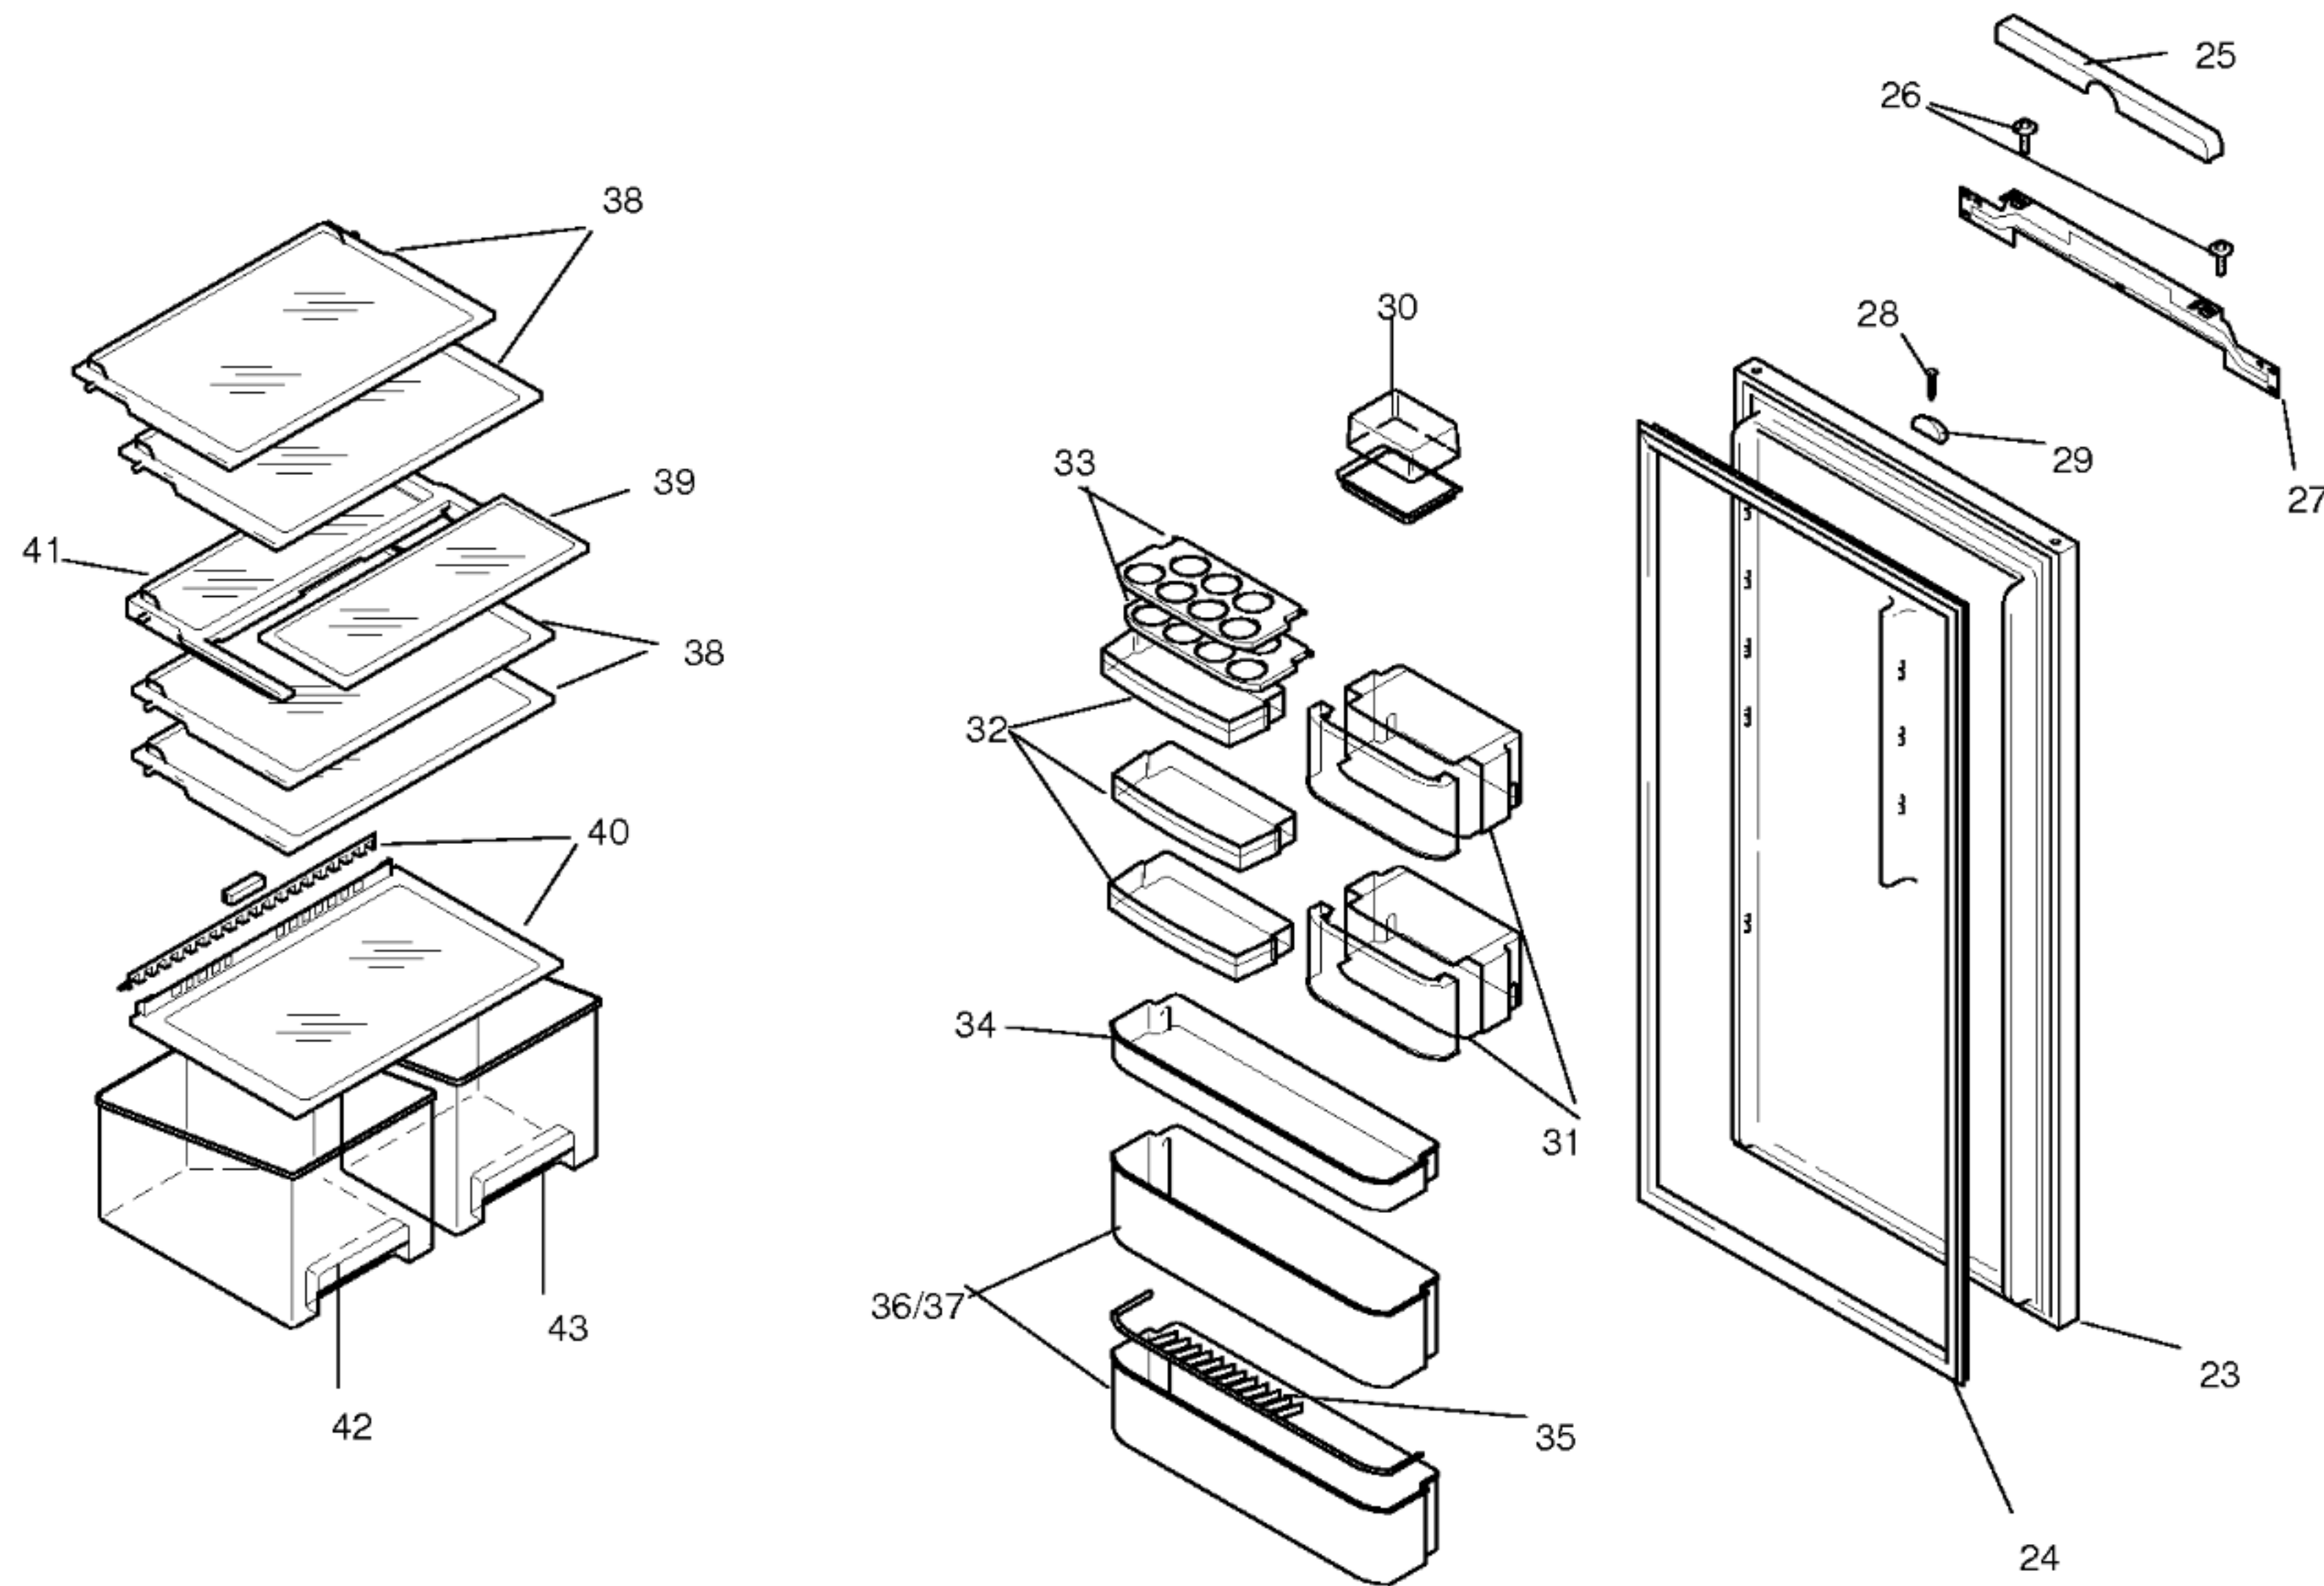

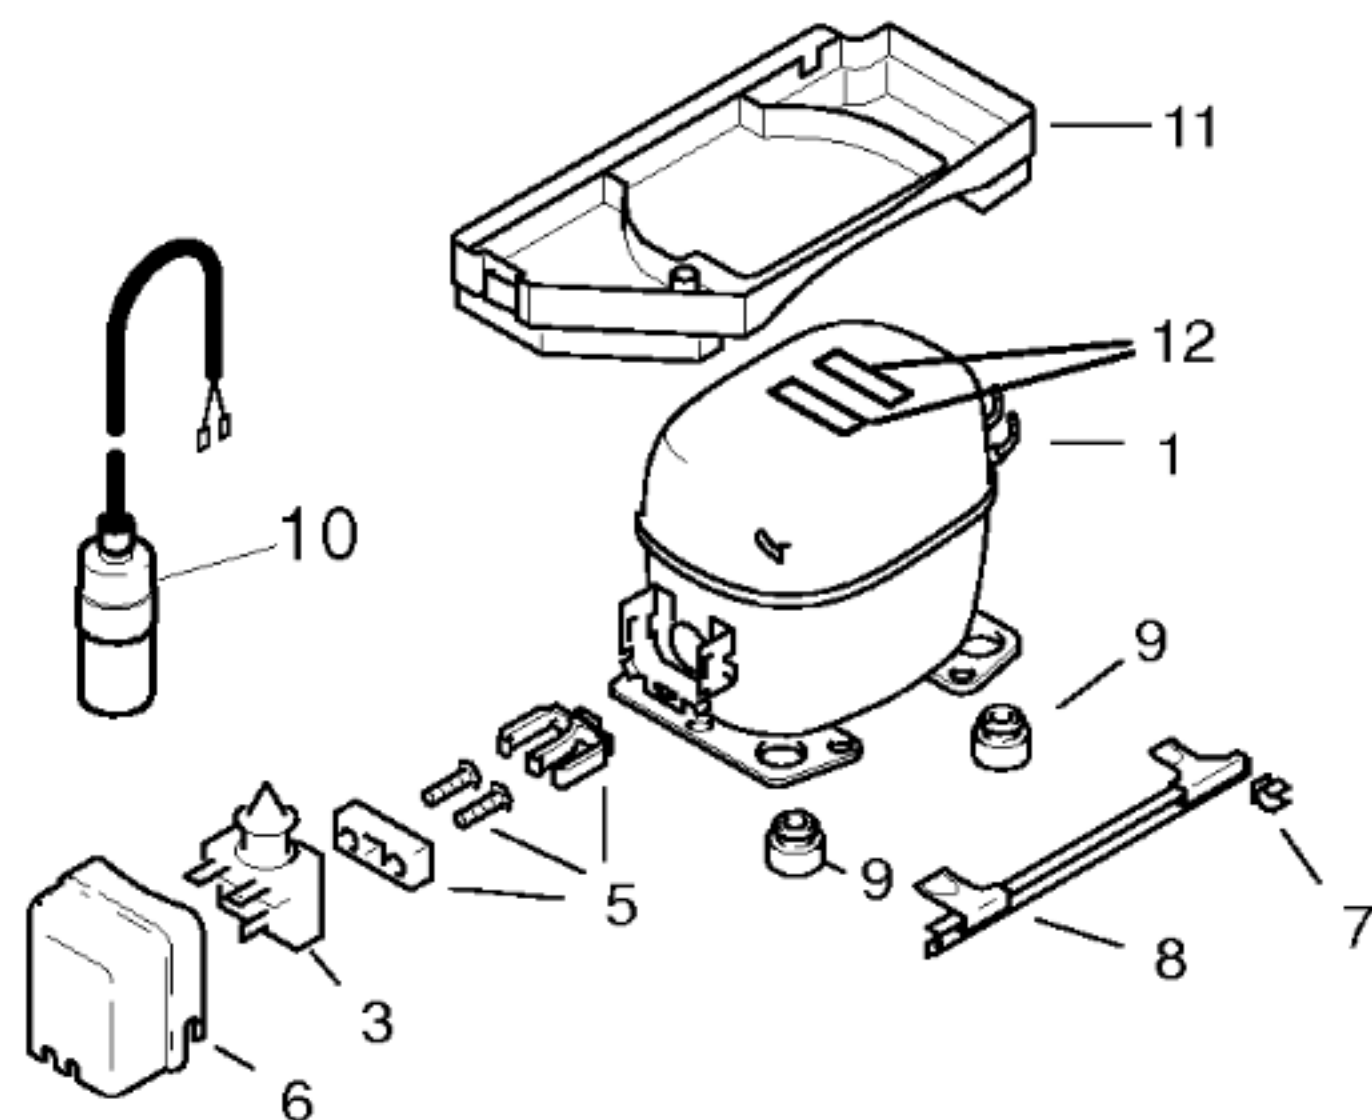

	V01	V02	
Pos.	Danfoss TLY4K	Aspera BPK1046Y	
1	44	44	
2			
3	45	45	
4			
5	46	46	
6	47	47	
7	48	48	
8	49	49	
9	50	50	
10	51		
11	52	52	
12	53	53	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLY4K		BPK1046Y
Förderleistung/Delivery/Débit		l/h	698	612
Anlaufstrom/Starting current/Cour de démarrage		A	5,9	3,2
Widerstand/Resistance/Résistance Ha/main/prin		W	59,0	60,9
Hi/aux		W	49,0	44,9
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt		warm
Schaltwerte/Switching values		"warm"	+5,0	+5,0
Valeurs de commutation		"kalt"	-25,0	-10,0
Füllmenge/Fill.quantity/Charge		R600a	+	
Anschlußwert/Conn.load/Puiss. connectée		W	45	44
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		W		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		W		
Spannung/Voltage/Tension		V		