


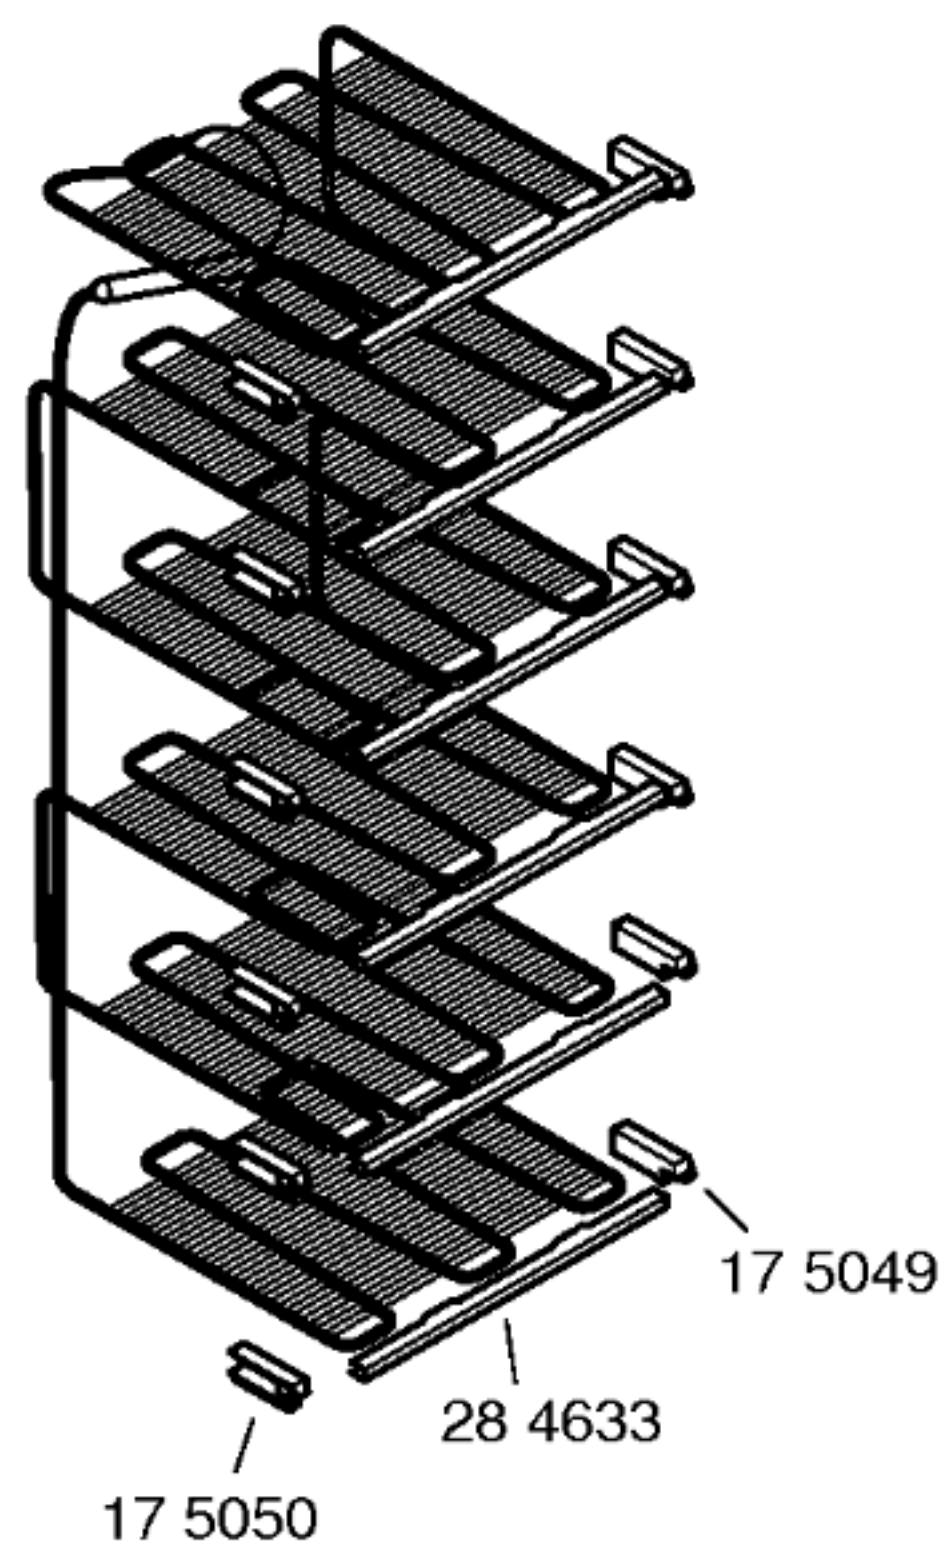
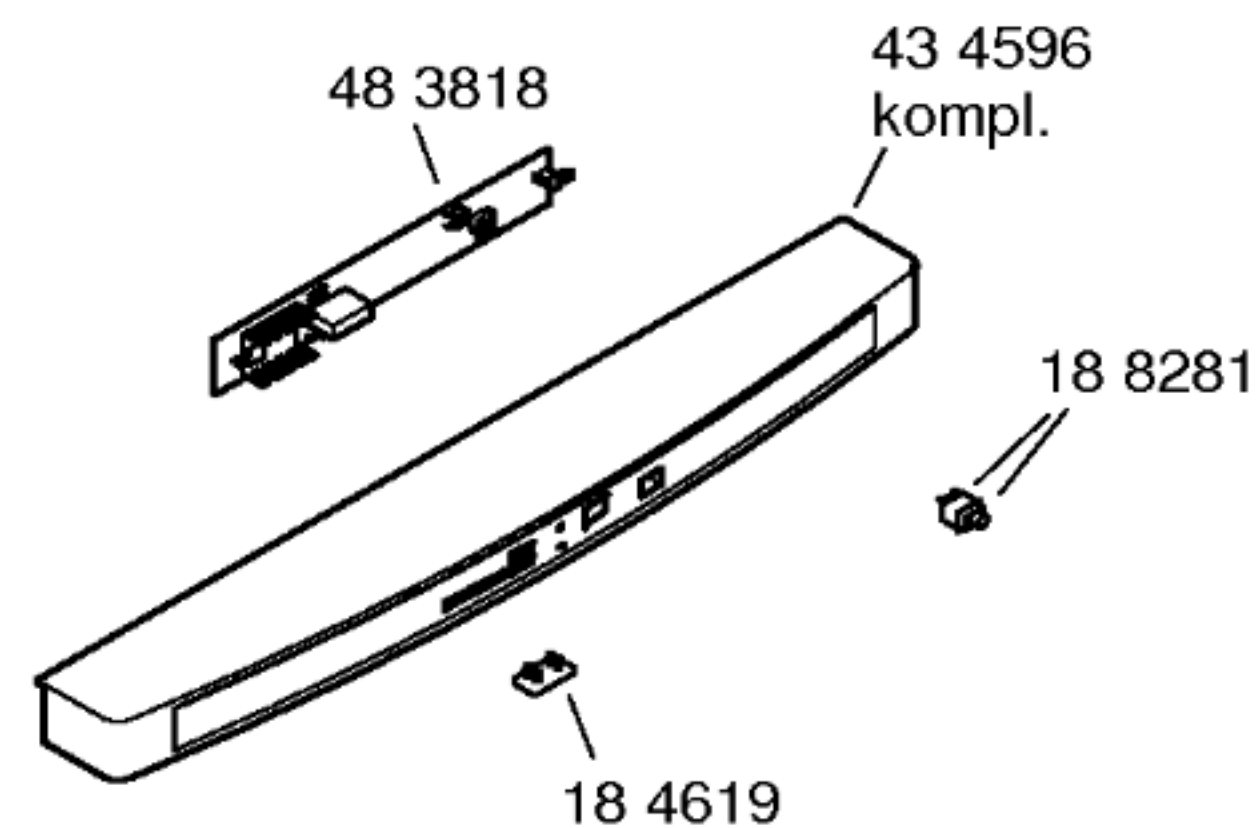


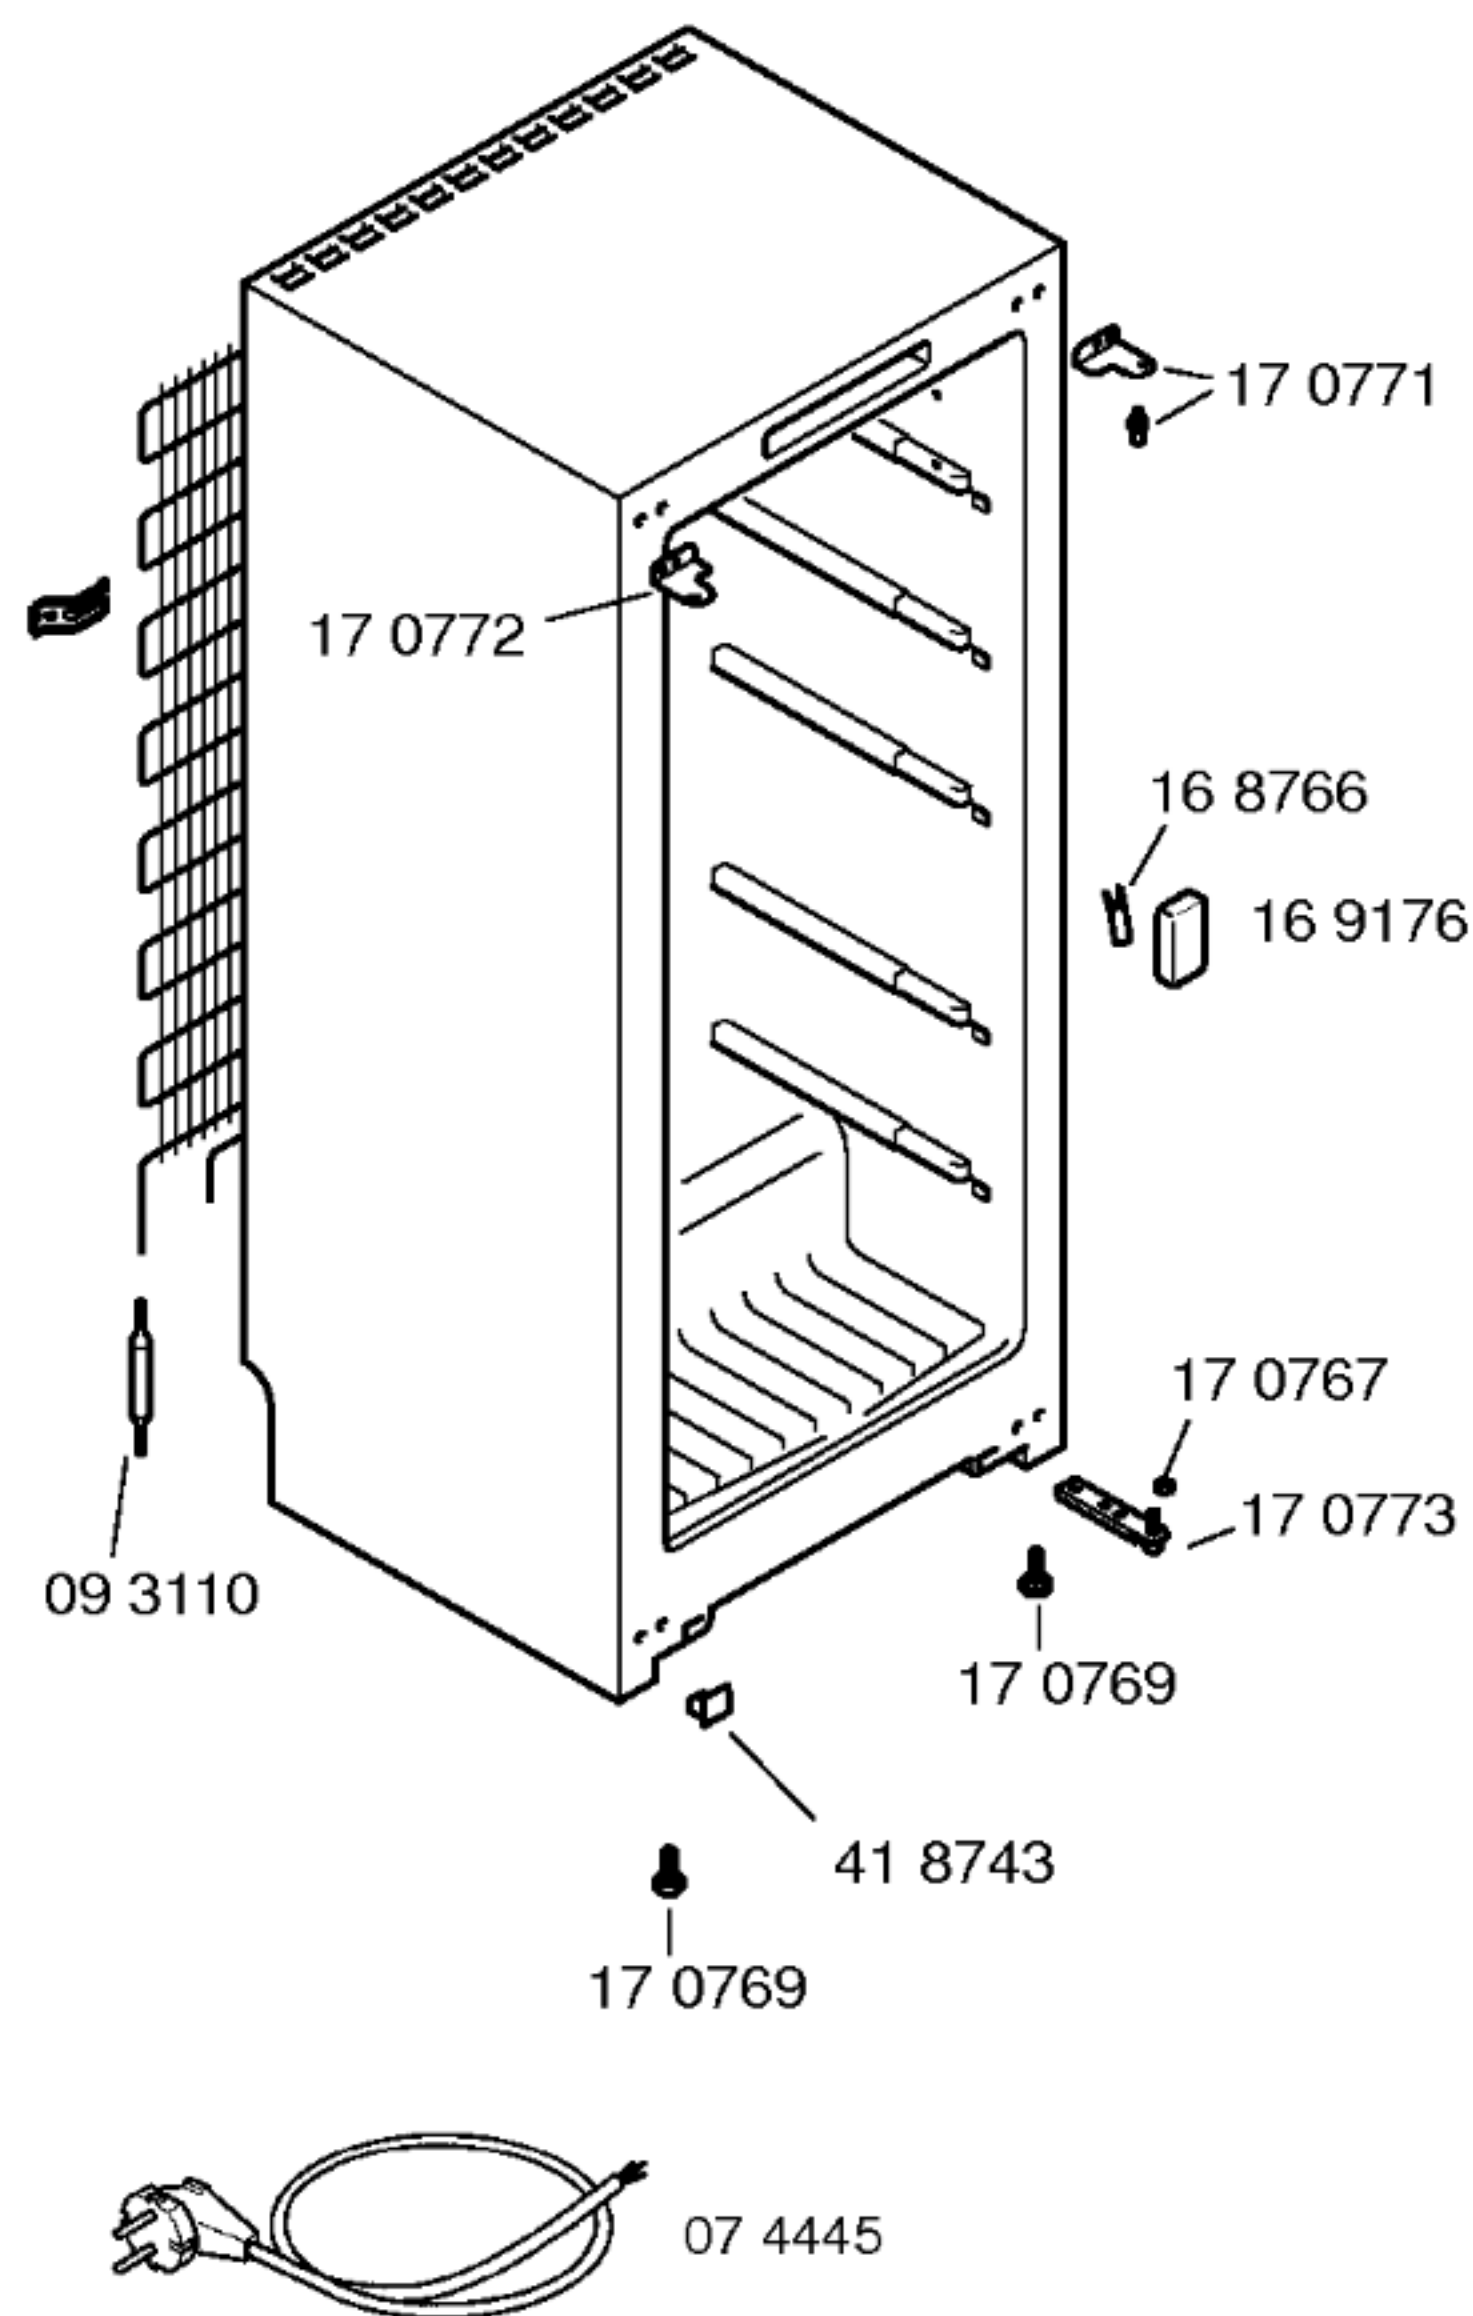

Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6511
(de,en,fr,it,nl)
58 6709
(da,no,fi,se,es,pt)

Montageanleitung
58 0241
Beistellsatz
26 5627

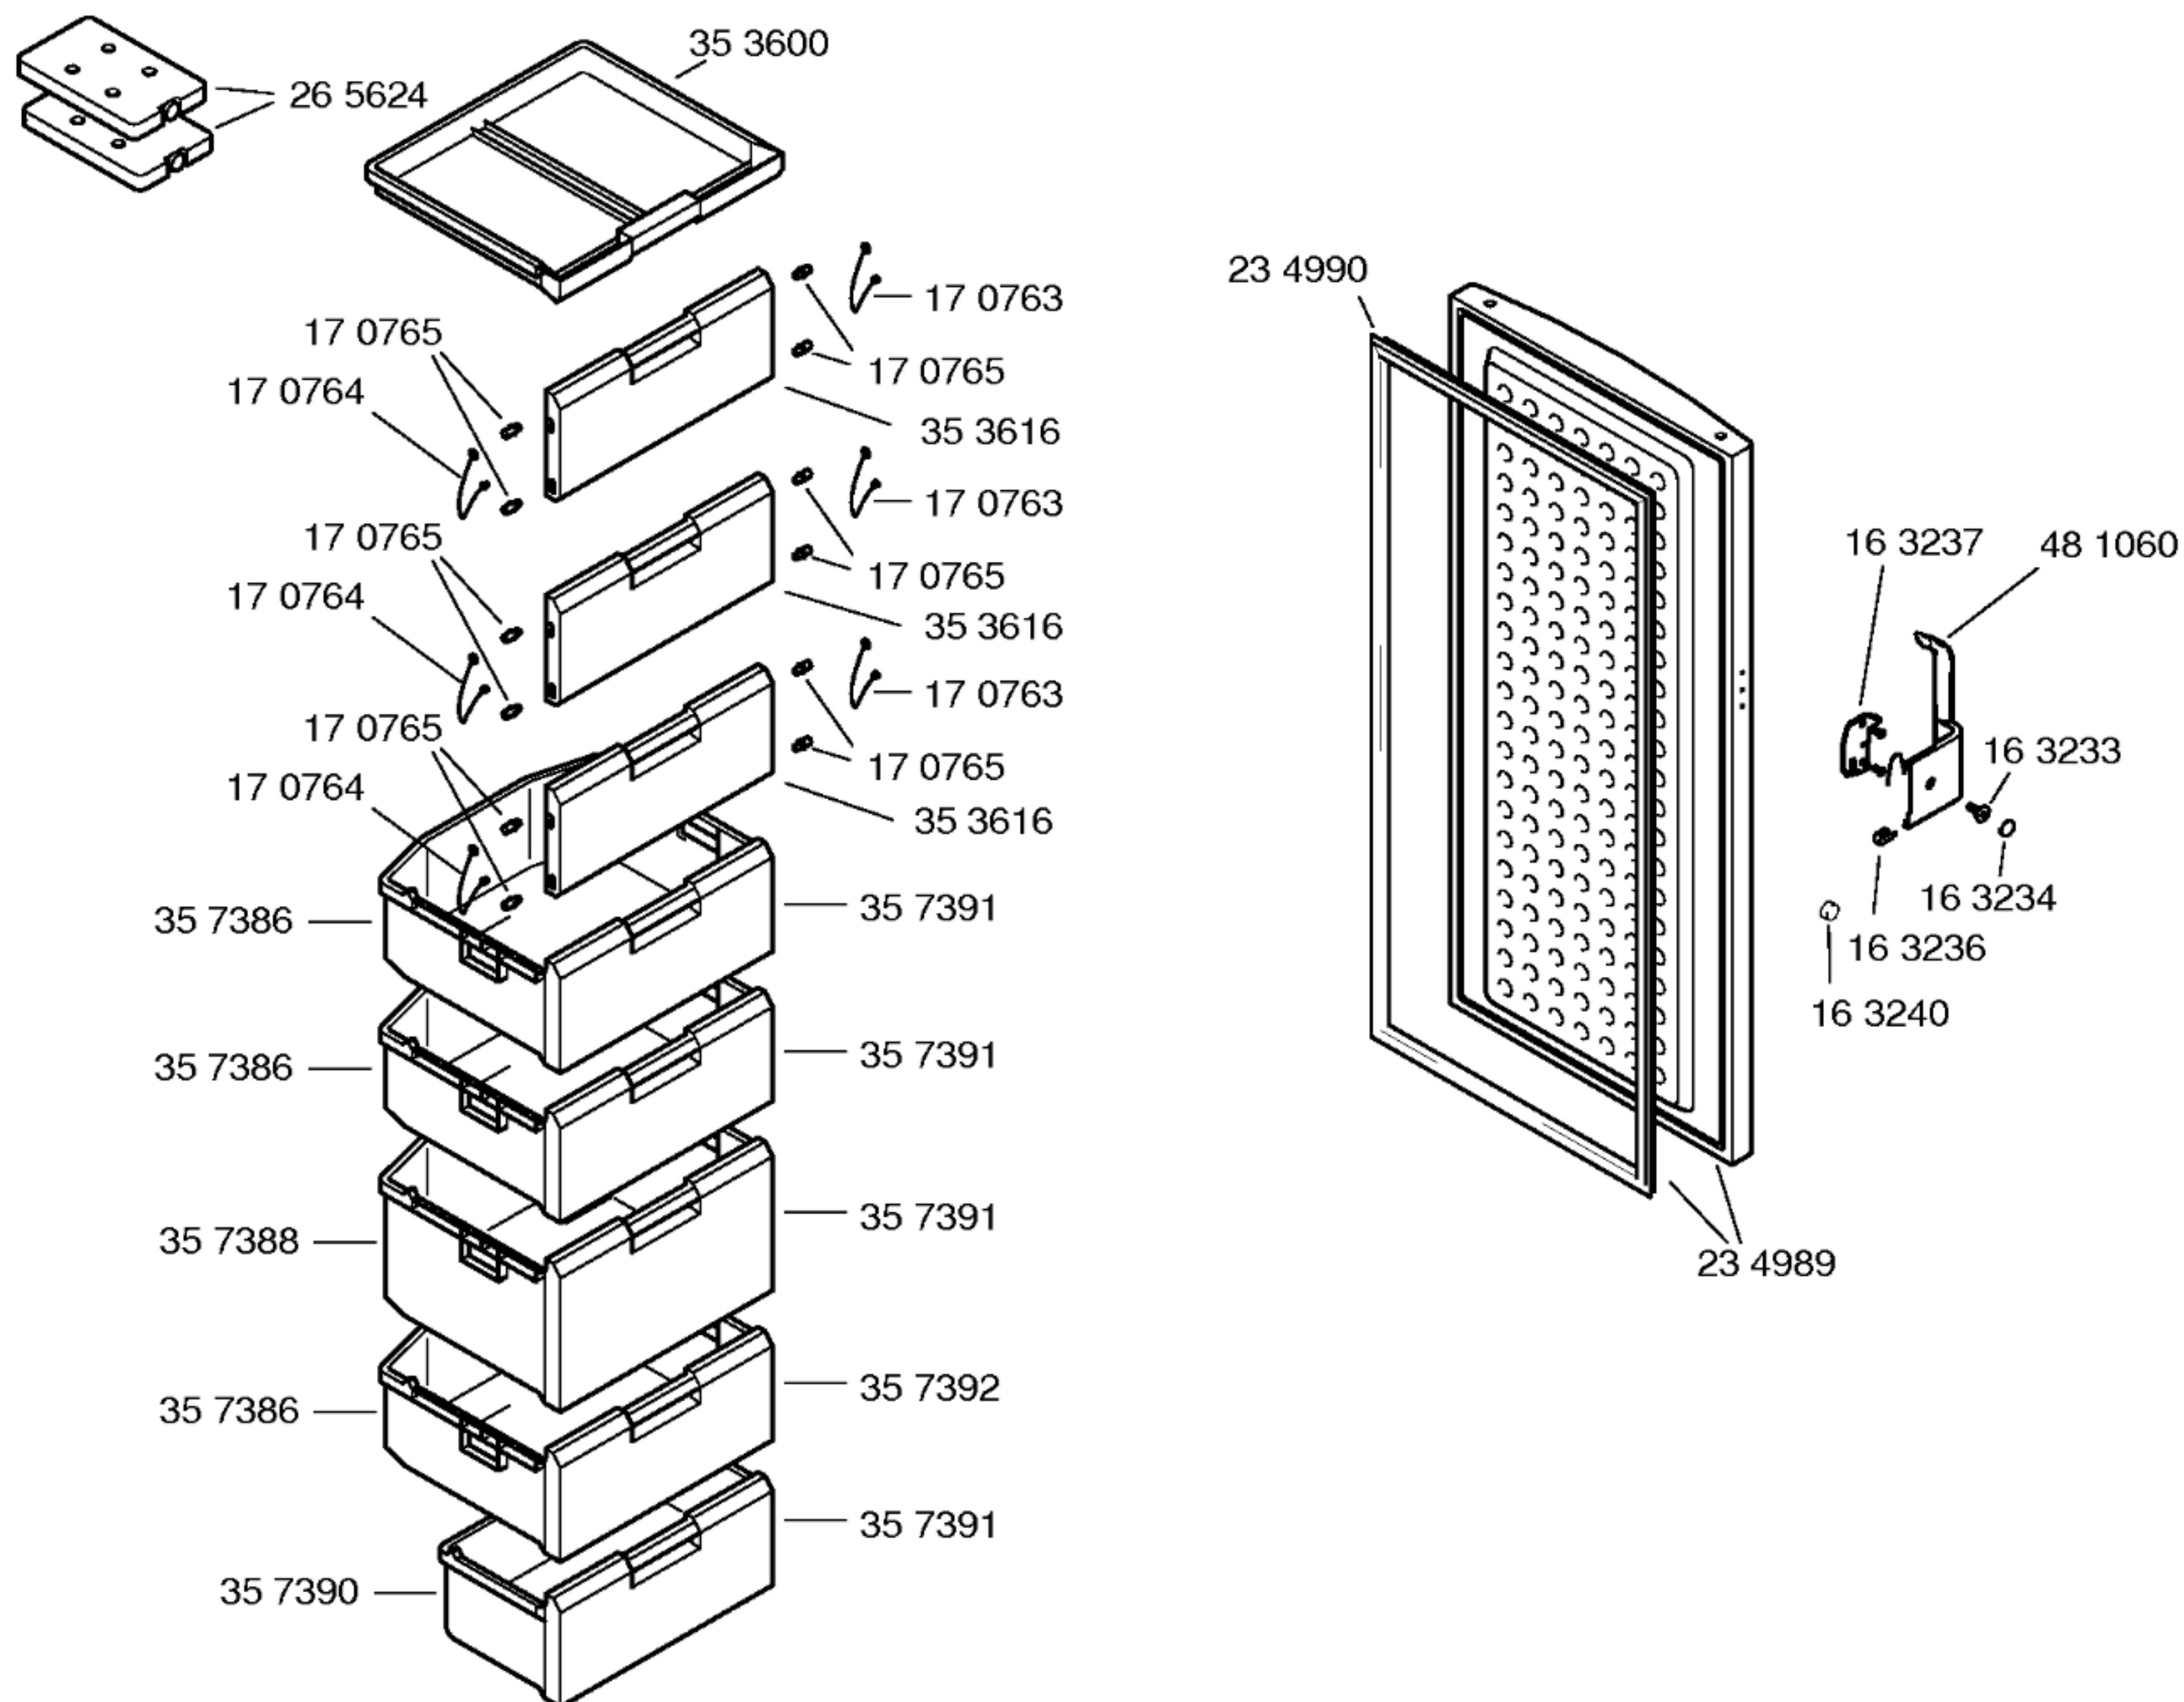

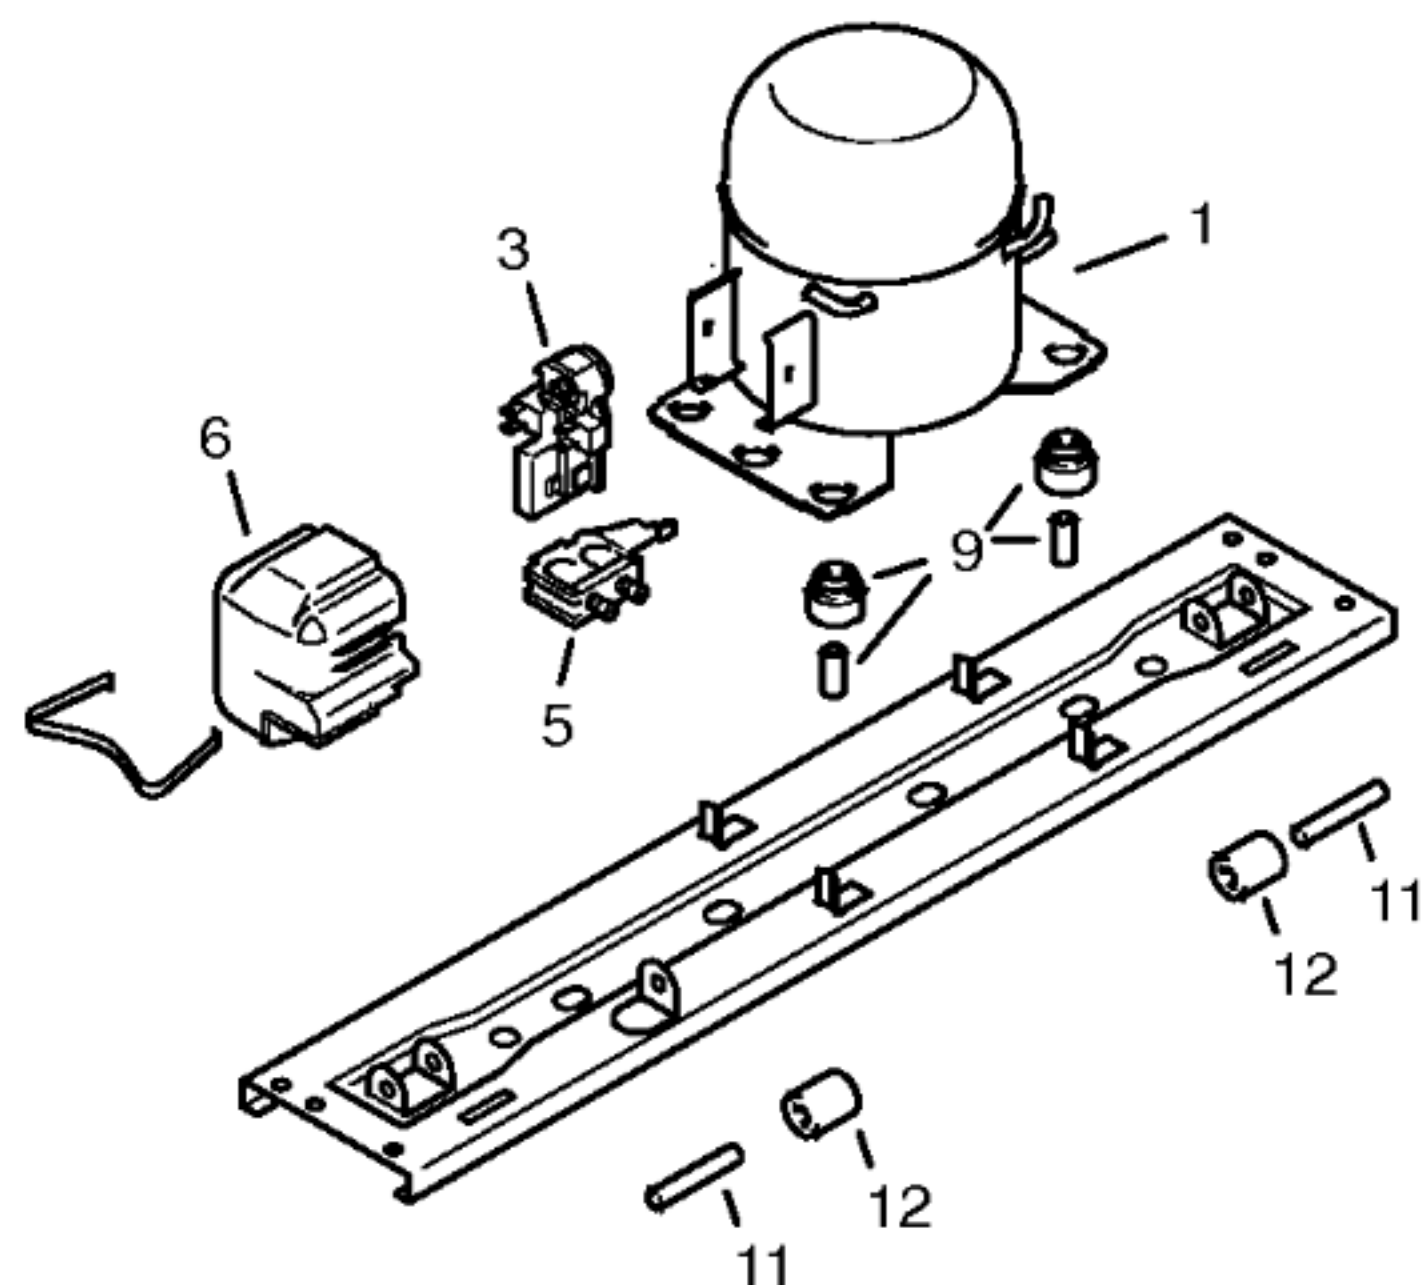

Pos.	V01		
	Matsushita		
	DG 125 E		
1	14 2305		
2			
3	18 7351		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Matsushita			
Typ/Type		DG 125 E			
Förderleistung/Delivery/Débit		l/h	2246		
Anlaufstrom/Starting current/Cour de démarrage		A	9,3		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	12,1	
		Hi/aux	Ω	13,8	
Temp.–Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values		"warm"			
Valeurs de commutation		"kalt"			
		"alarm"			
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	136		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
NTC–Fühler / Sensor		°C	kΩ	°C	kΩ
		+10	9,95 ± 0,18	–18	43,31 ± 1,10
		+5	12,70 ± 0,18	–22	54,66 ± 1,59
		0	16,33 ± 0,16	–26	69,42 ± 2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			