

**BOSCH**

GSL1100GB/41-V01
 GSL1198/41-V02
 GSL1100GB/42-V03
 GSL1198/42-V04

GSL1100GB/43-V05
 GSL1100GB/44-V06
 GSL1198/43-V07
 GSL1198/44-V08


KÜHL-, GEFRIERGERÄTE
 Gefrierschränke, Stand

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisung
 51 7970
 (D,GB,F,I,NL,SF)

Montageanweisung
 26 1542
 (D,GB,F,I,NL,S,SF,E,
 P,DK,N)

1) 01 9829

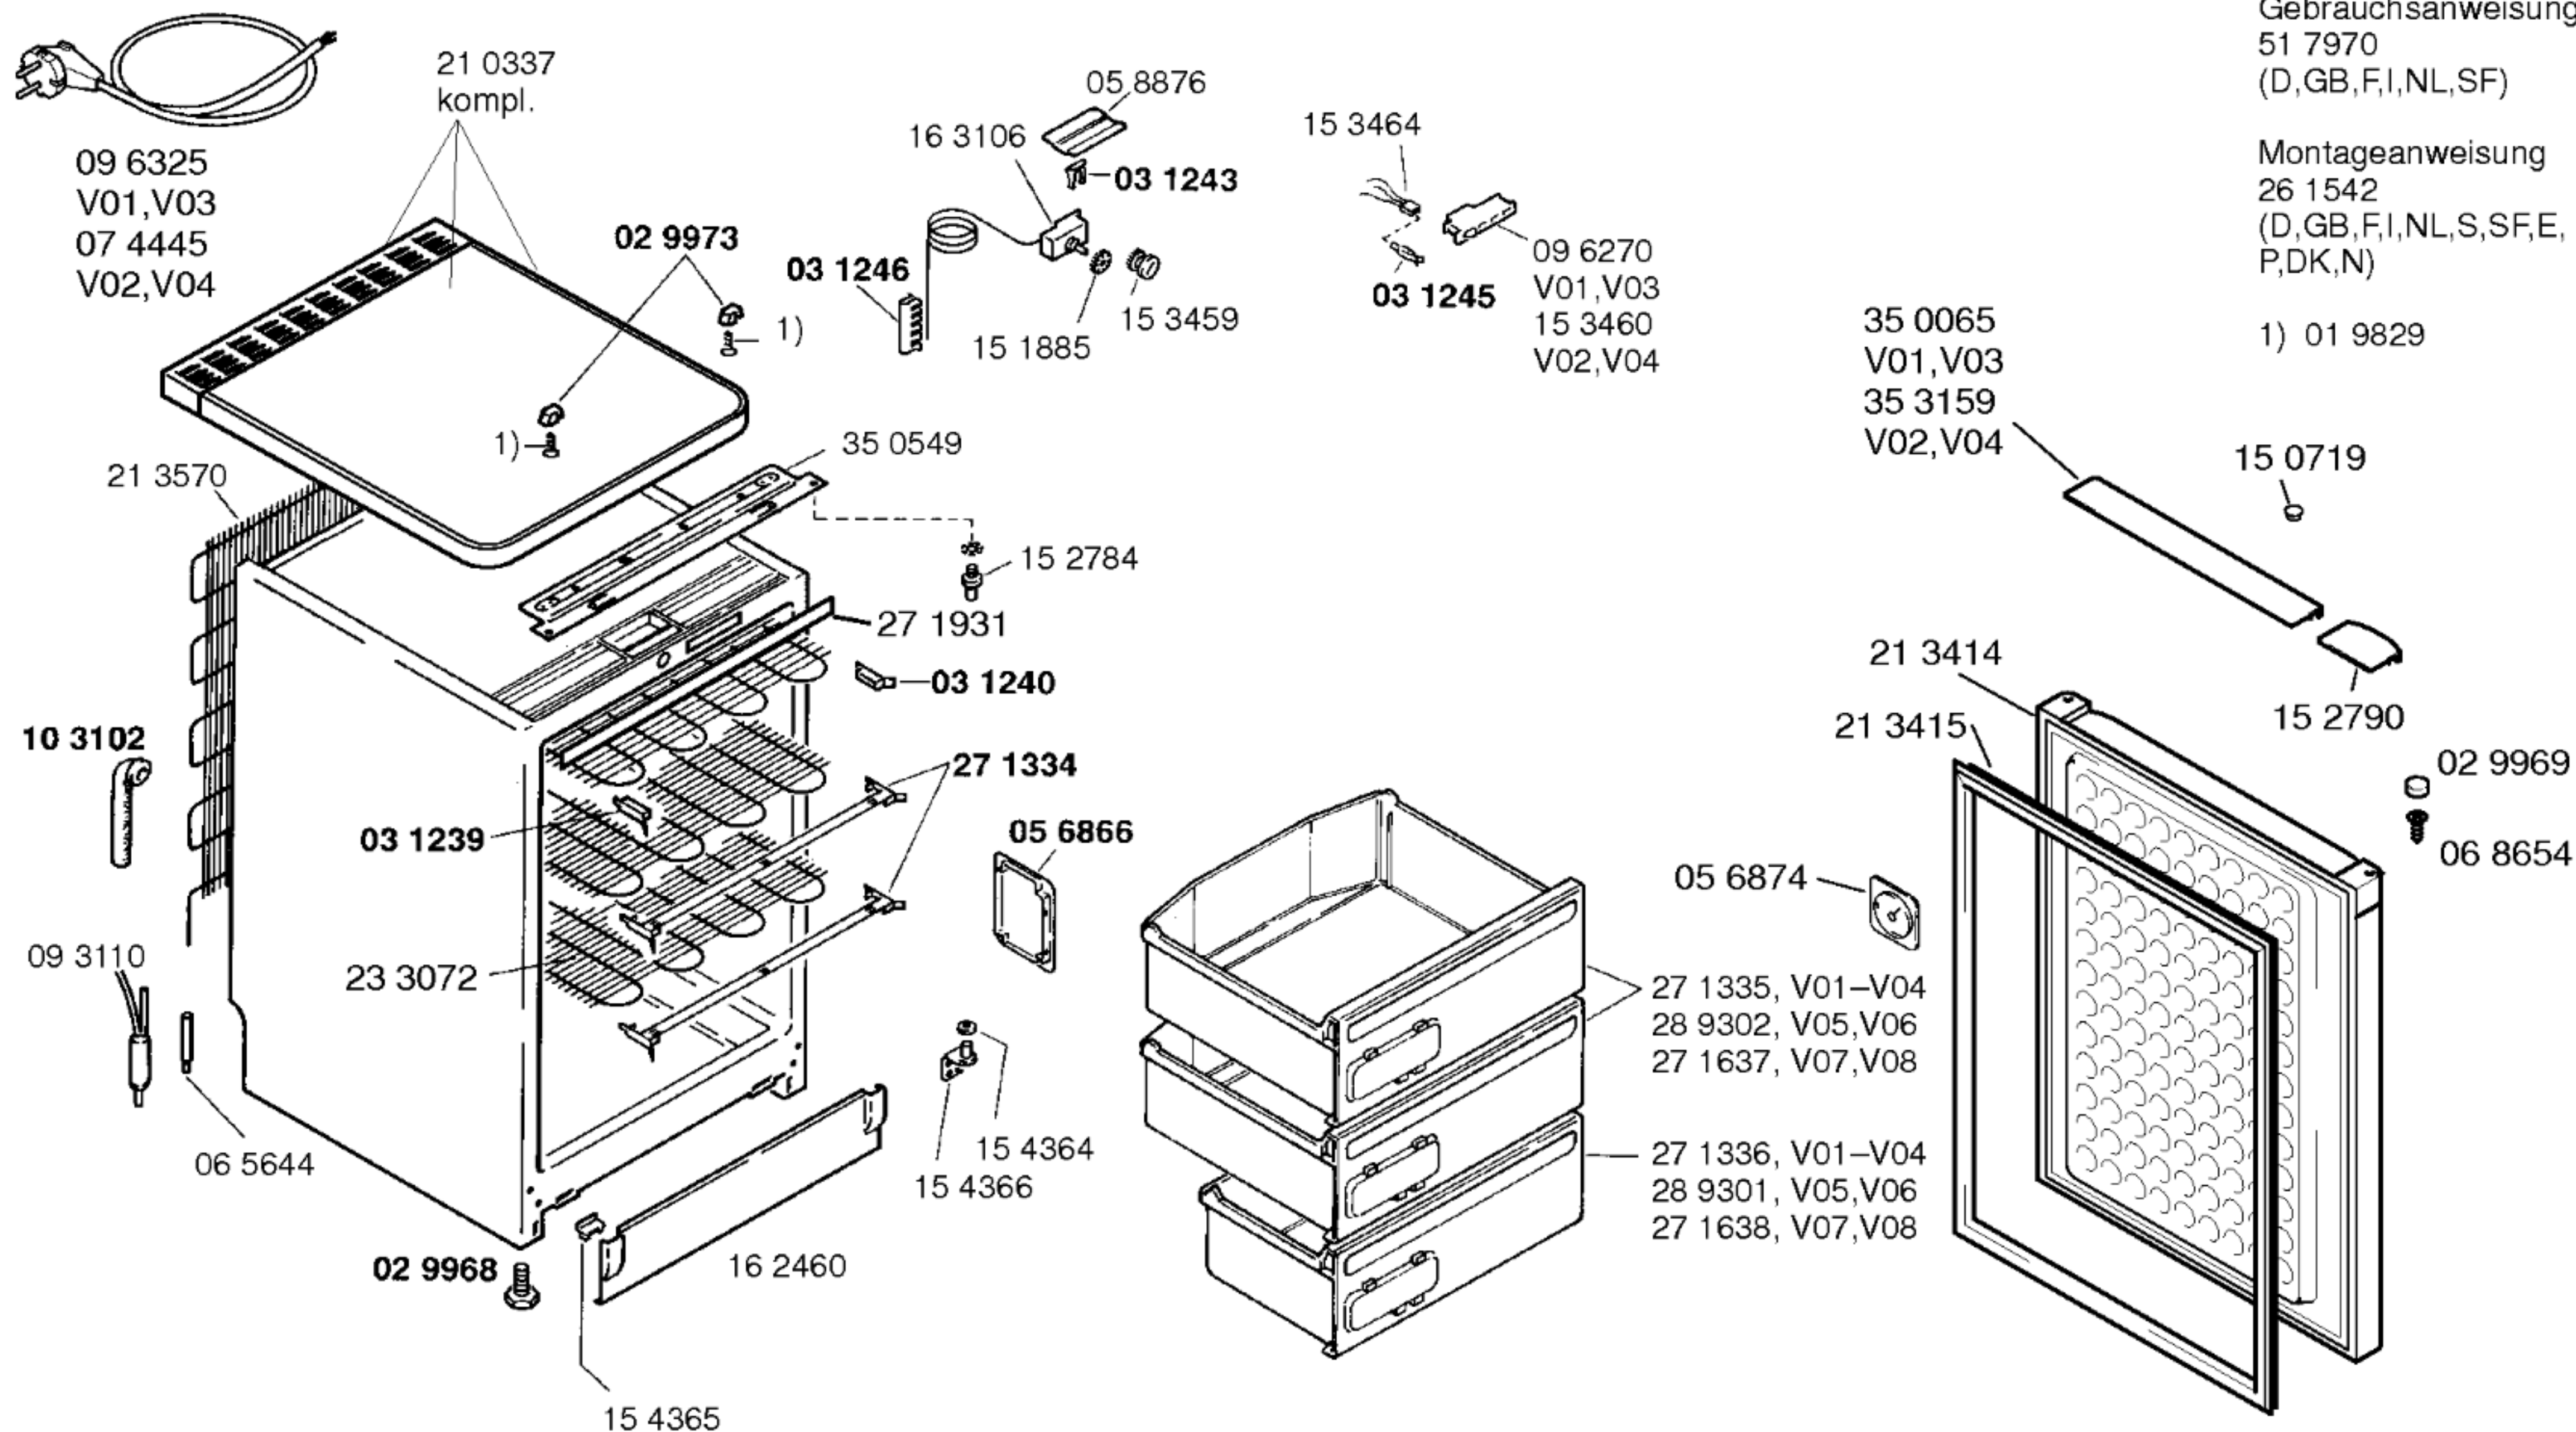


**BOSCH**

GSL1100GB/41-V01
 GSL1198/41-V02
 GSL1100GB/42-V03
 GSL1198/42-V04

GSL1100GB/43-V05
 GSL1100GB/44-V06
 GSL1198/43-V07
 GSL1198/44-V08

KÜHL-, GEFRIERGERÄTE
 Gefrierschränke, Stand

Mat. – Nr. – Konstante
 3740

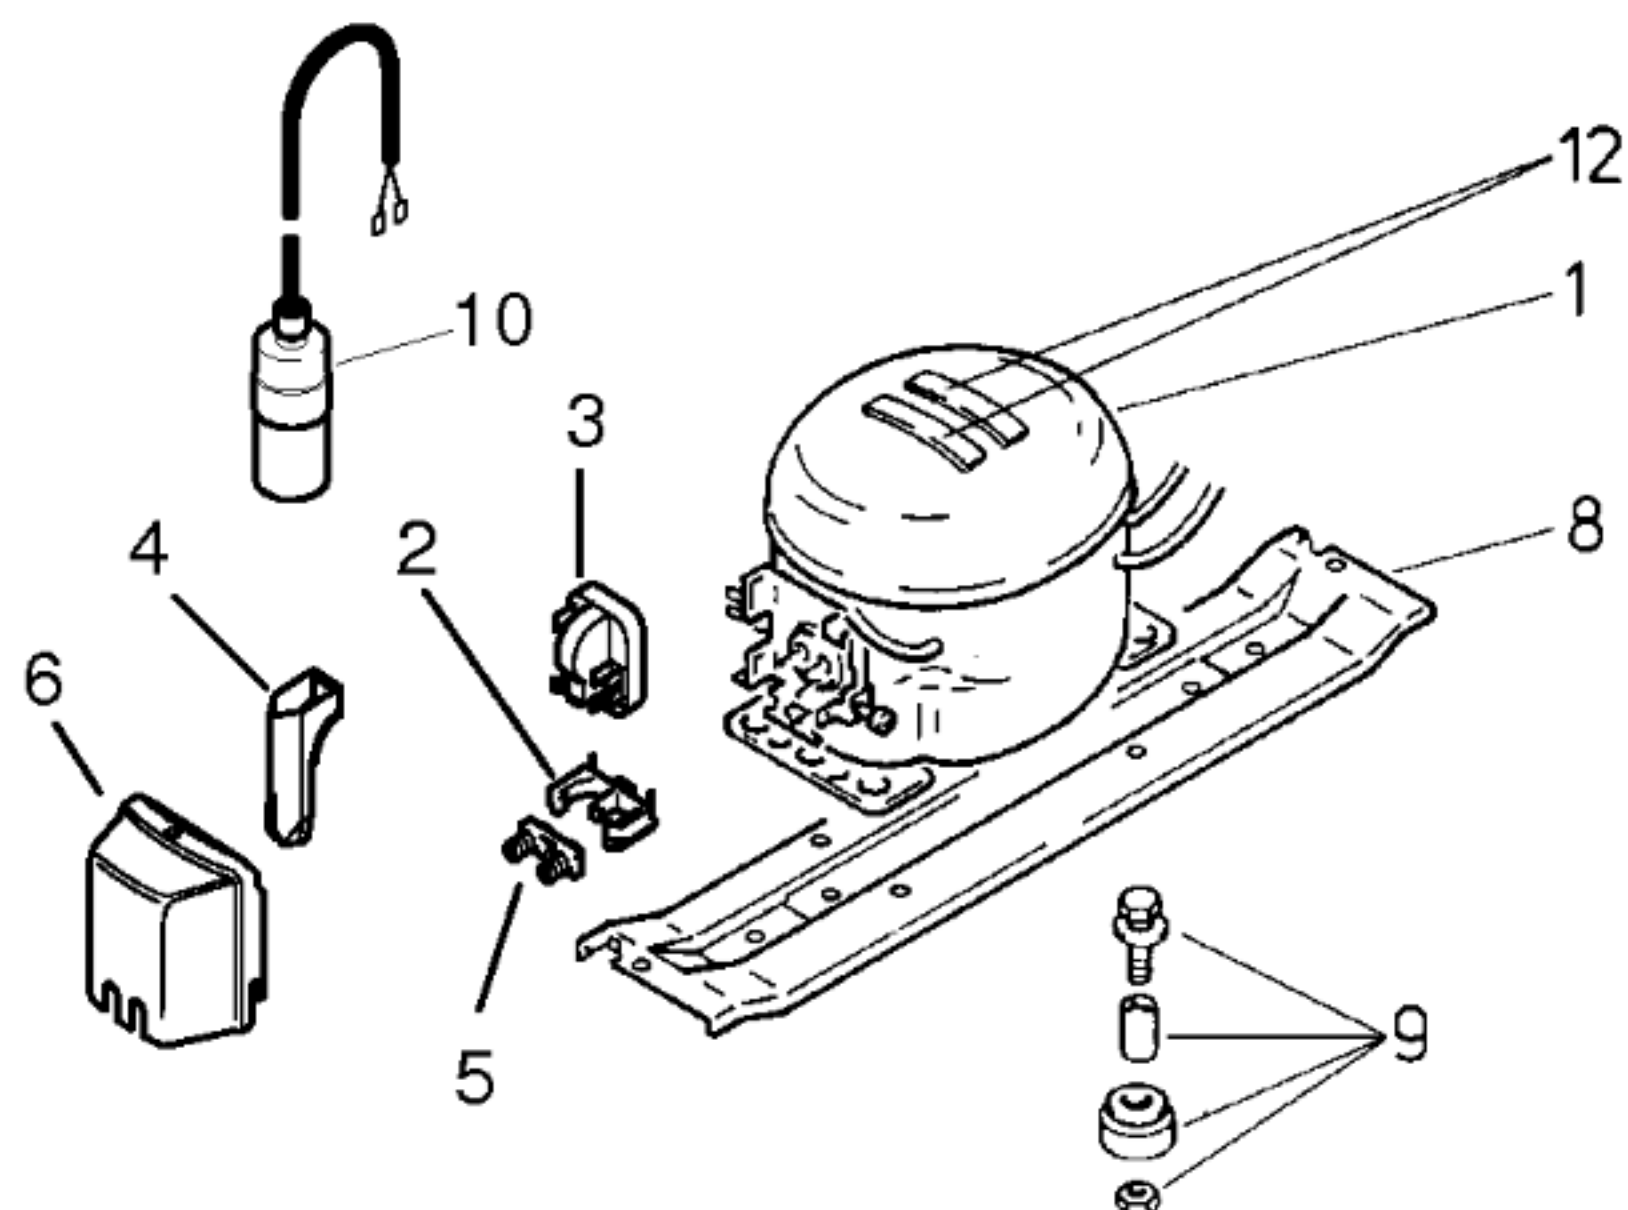

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLY 6 K		EMT 32 CLP
Förderleistung/Delivery/Débit	l/h	1026		1073
Anlaufstrom/Starting current/Cour de démarrage	A			3,5
Widerstand/Resistance/Résistance	Ha/main/prin. Ω			28,4
	Hi/aux Ω			24,7
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		WAR		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25	-17	
Valeurs de commutation	„aus“	-33	-23	
(„abtauen“ od.)	„alarm“	-19,5	-13	
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	78	68	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild

	V01,V03,V05,V07	V02,V04,V06,V08	
Pos.	Danfoss	Aspera	
	TLY 6 K	EMT 32 CLP	
1	14 1680	14 1838	
2	15 1053		
3	96 0676	17 0880	
4	96 0680		
5	15 0760	17 0882	
6	96 0677	17 0881	
7			
8	27 1375	27 1375	
9	05 0166	05 0166	
10	05 9467		
11			
12			