

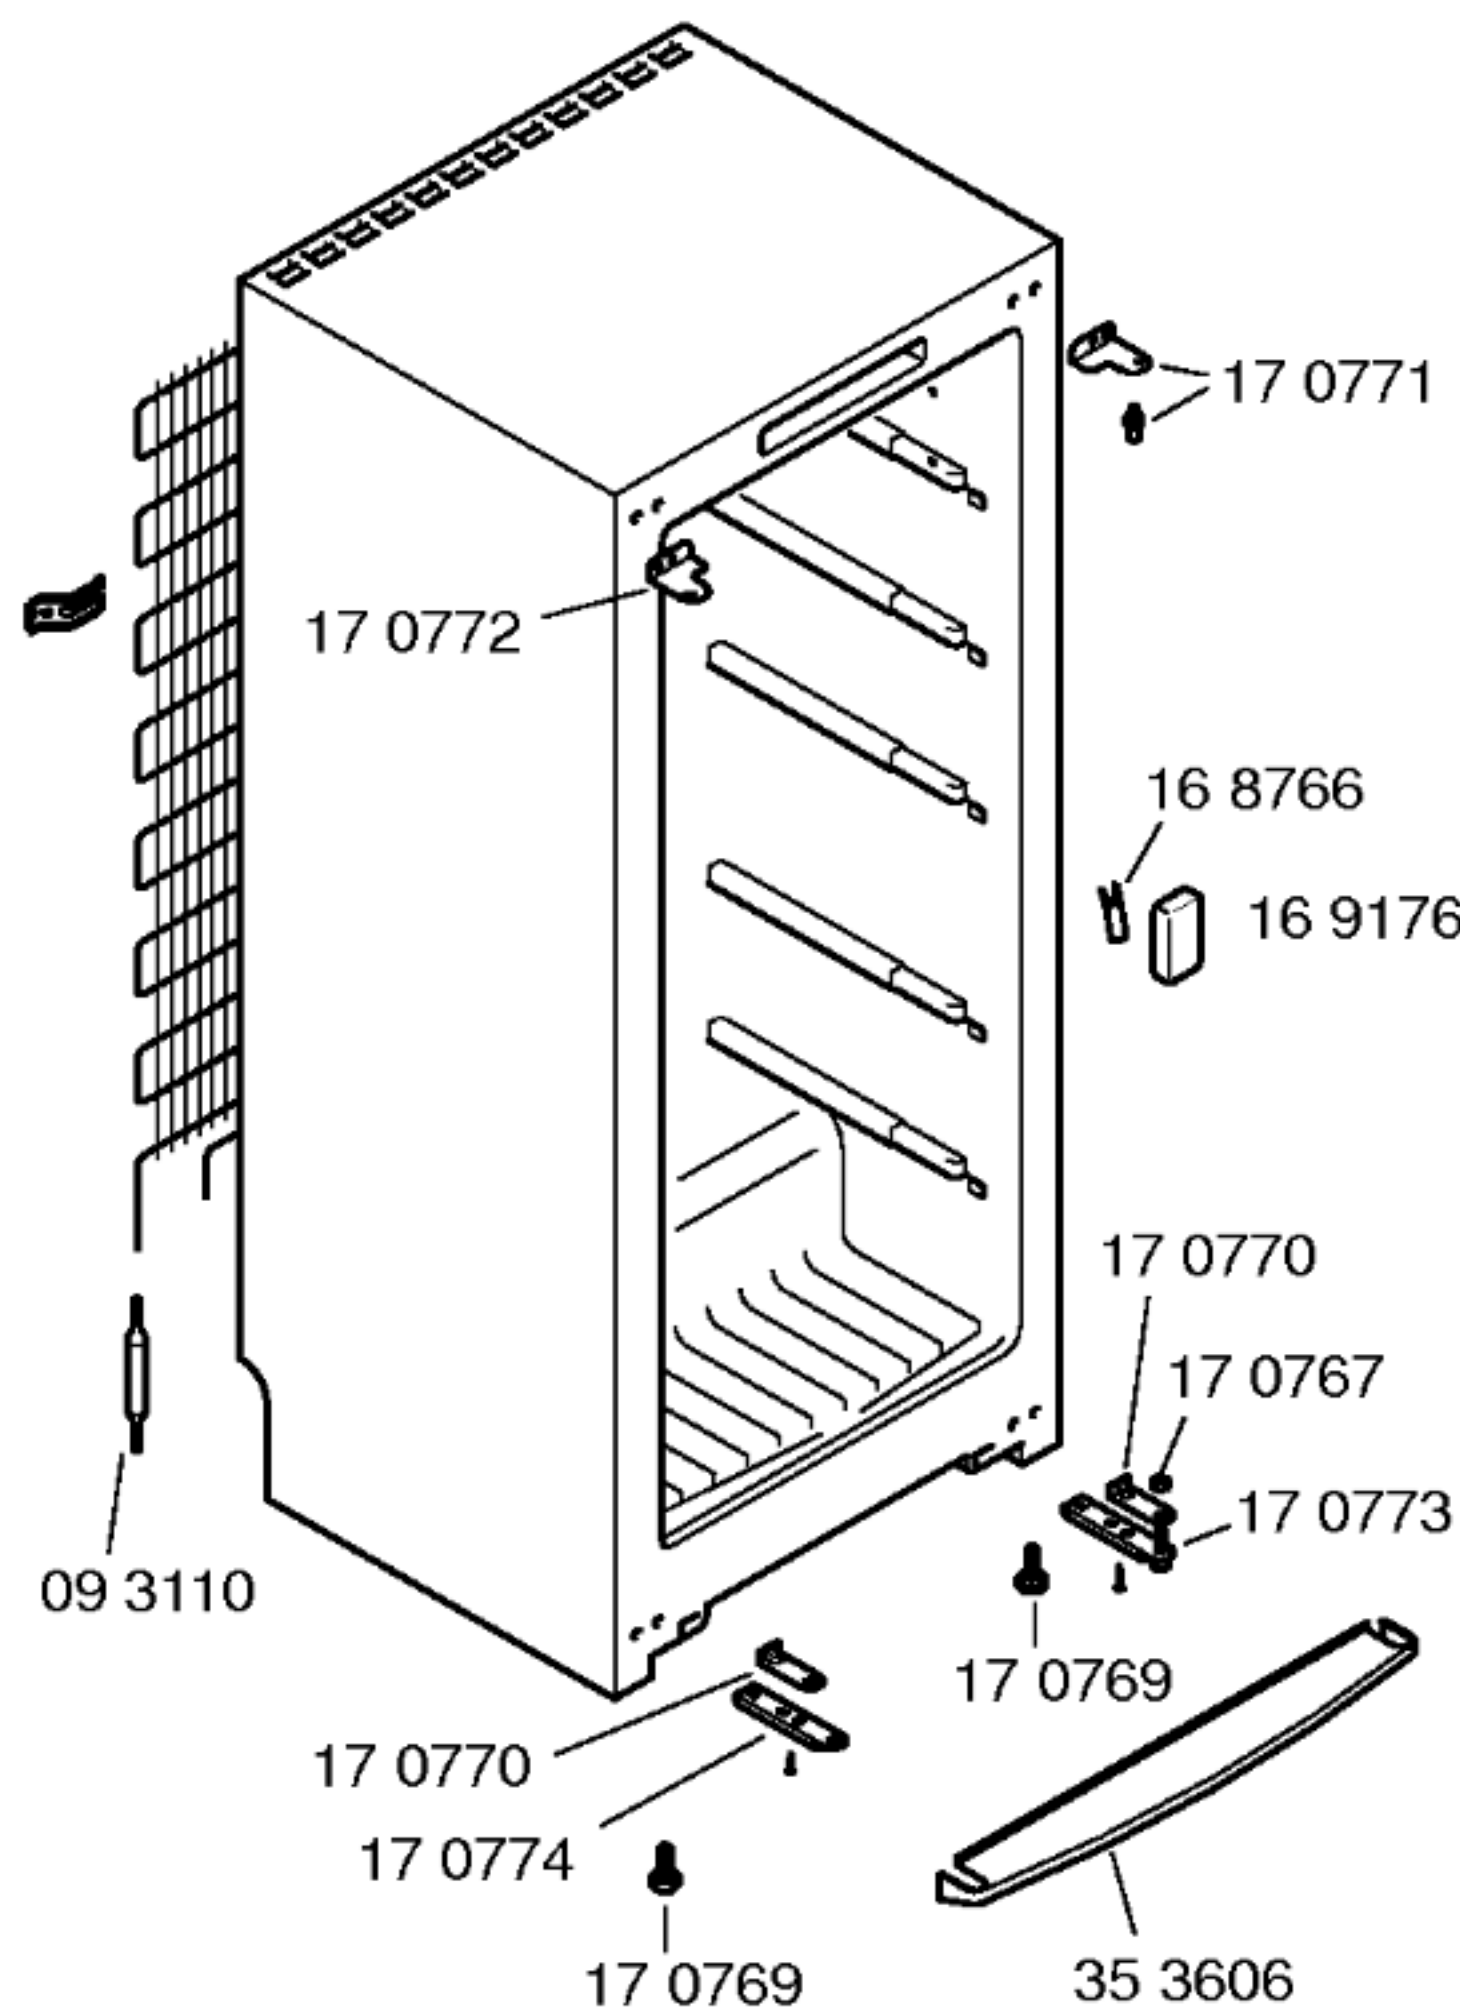


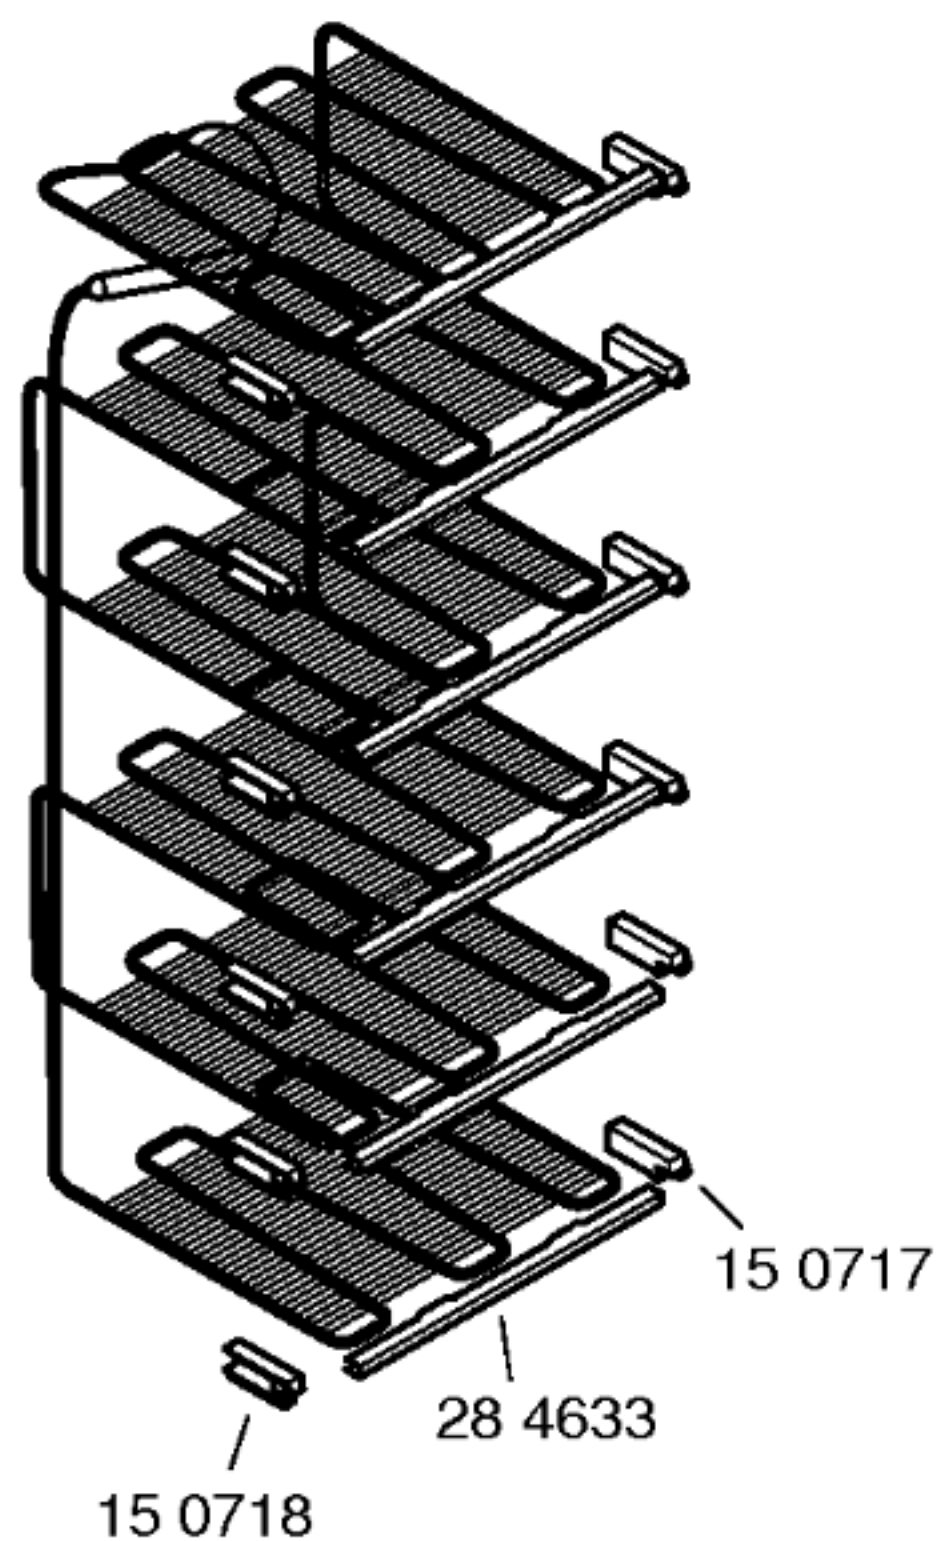

07 4445  
V01,V03,V05  
09 6572  
V02,V04,V06

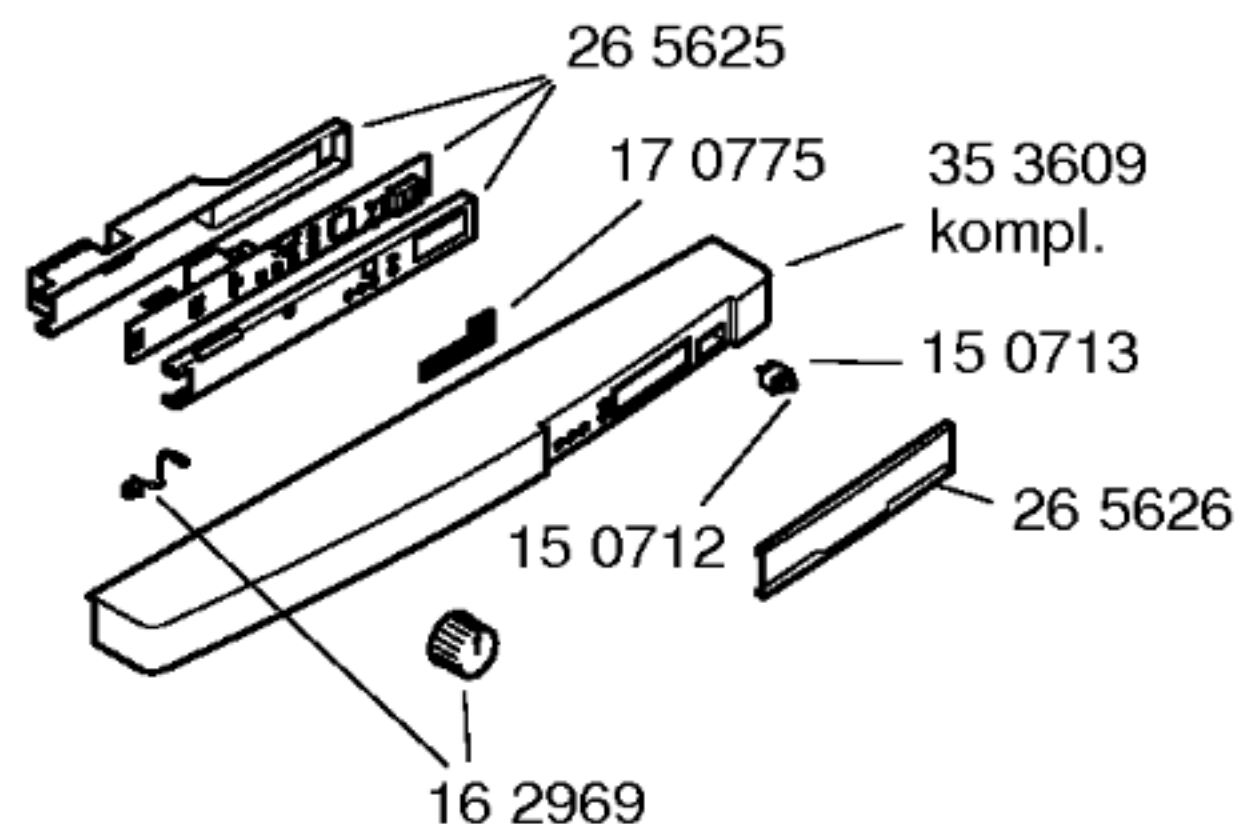


Mat. – Nr. – Konstante  
3740 . . . . .


Gebrauchsanweisung  
52 2769  
(D,GB,F,I,NL)

Montageanleitung  
52 2772  
(D,GB,F,I,NL,DK,N,SF,  
SE,TR)

Beistellsatz  
26 5629

Side by Side  
Beistellsatz zu KSR/KSK  
48 1044

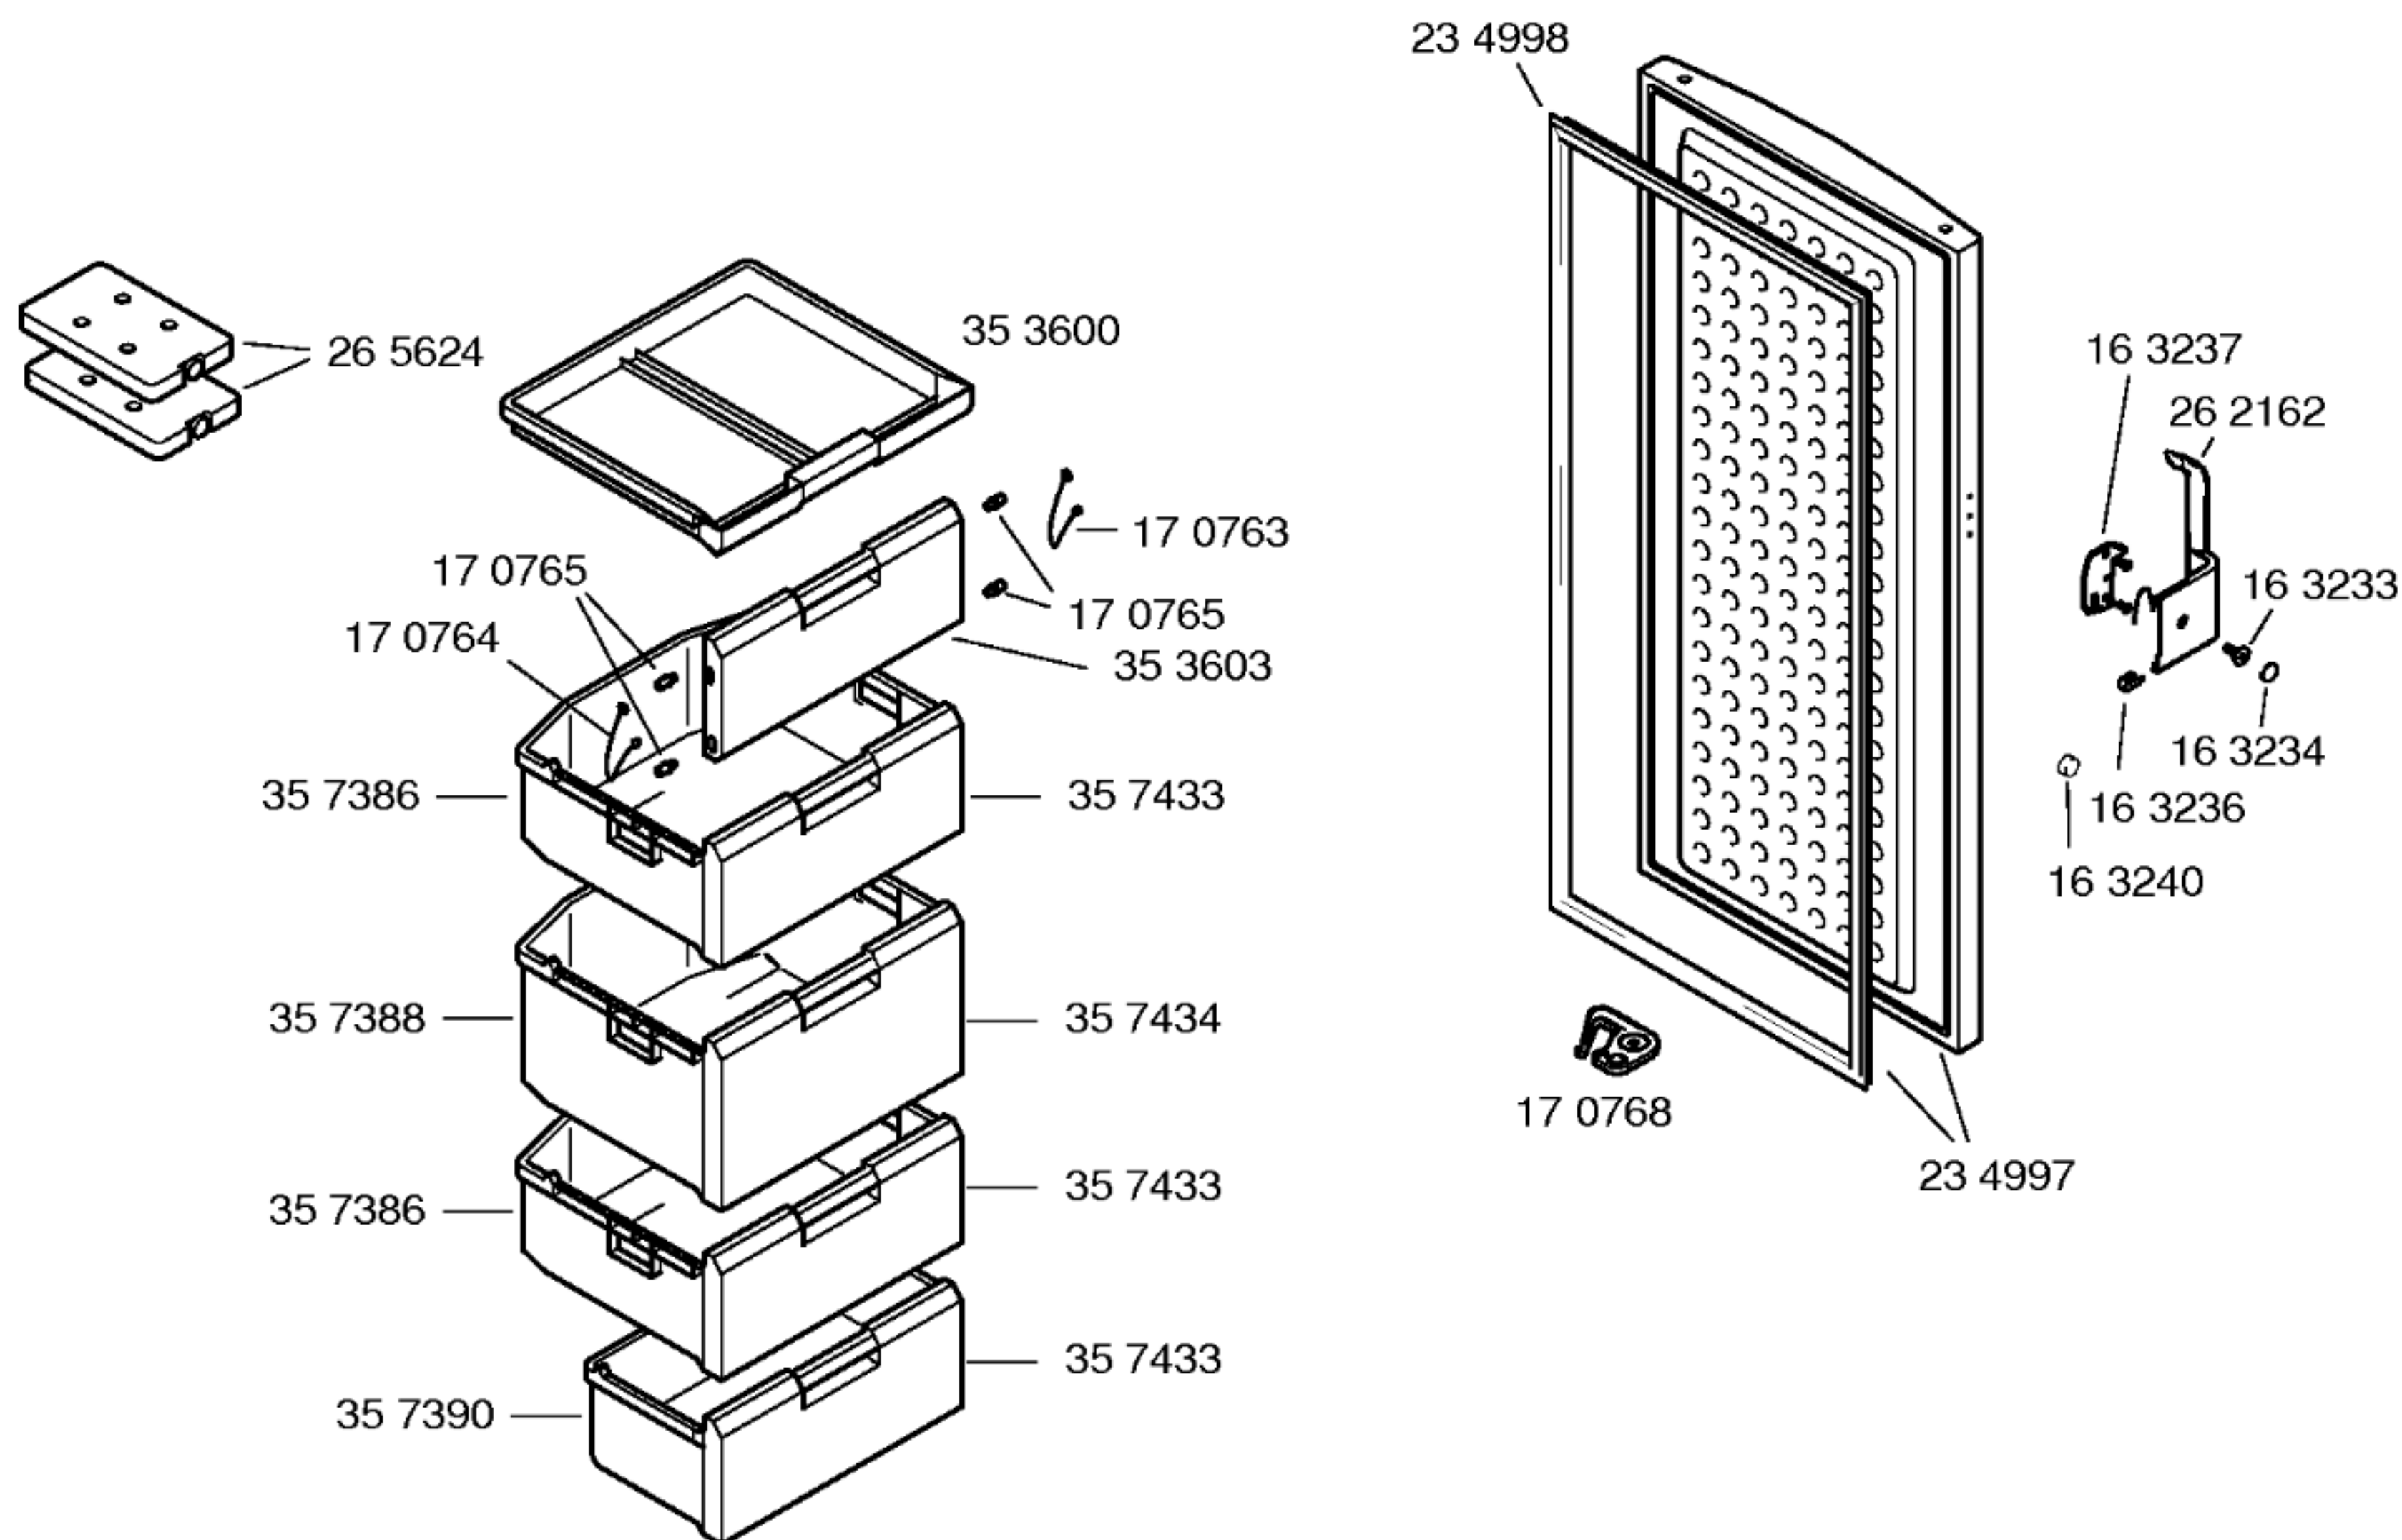

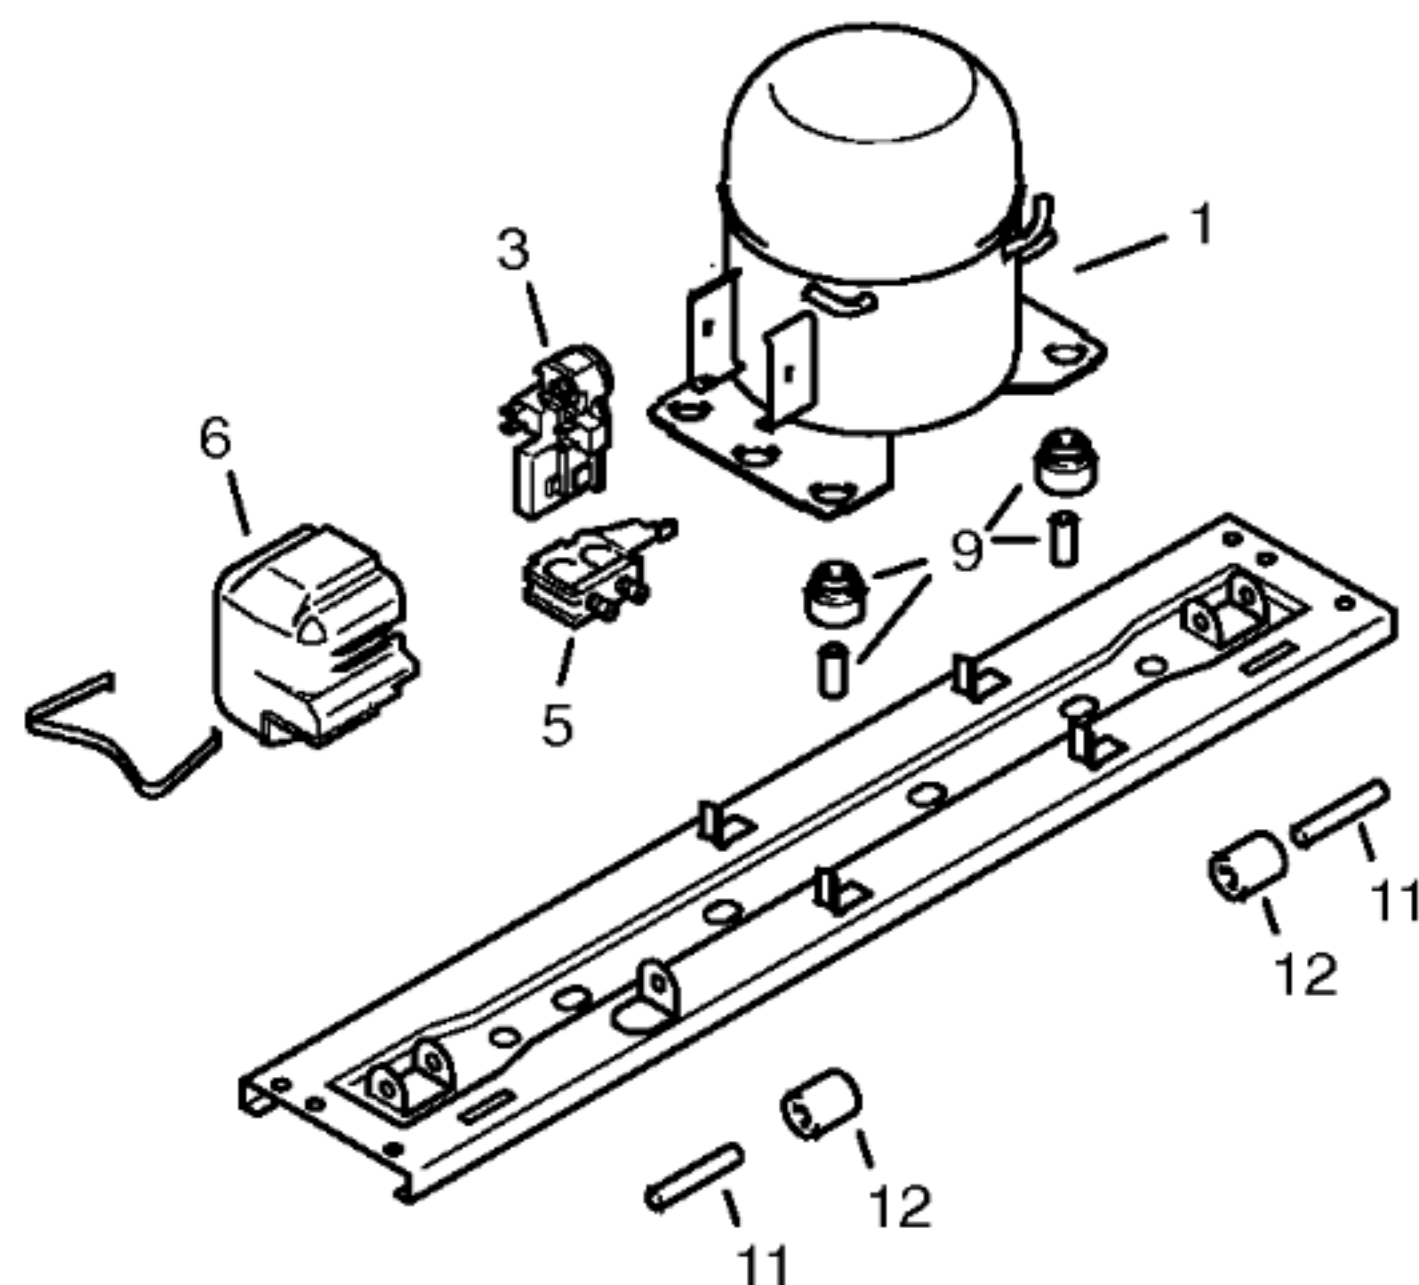

|      | V01,V02  | V03,V04    | V05,V06 |
|------|----------|------------|---------|
| Pos. | Aspera   | Matsushita | Danfoss |
|      | NBK1114Y | DC 110 E   | NLE11K  |
| 1    | 14 1784  | 14 1946    | 14 1750 |
| 2    |          |            |         |
| 3    | 16 9517  | 17 2671    | 15 1055 |
| 4    |          |            |         |
| 5    | 16 8903  | 16 2549    | 15 0760 |
| 6    | 16 8902  | 16 6782    | 15 1072 |
| 7    |          |            |         |
| 8    | 21 4604  | 21 4604    | 21 4604 |
| 9    | 05 0166  | 05 0166    | 05 0166 |
| 10   |          |            |         |
| 11   | 01 9017  | 01 9017    | 01 9017 |
| 12   | 01 9016  | 01 9016    | 01 9016 |

# TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                |            |            |         |
|------------------------------------------------|------------|------------|---------|
| Verdichter/Compressor/Compresseur              | Aspera     | Matsushita | Danfoss |
| Typ/Type                                       | NBK 1114 Y | DC 110 E   | NLE11K  |
| Förderleistung/Delivery/Débit                  | l/h        | 1954       | 2074    |
| Anlaufstrom/Starting current/Cour de démarrage | A          | 8,6        | 10,9    |
| Widerstand/Resistance/Résistance Ha/main/prin  | Ω          | 14,2       | 12,7    |
| Hi/aux                                         | Ω          | 12,8       | 18,0    |

|                              |         |  |  |
|------------------------------|---------|--|--|
| Temp.-Regler/Thermostat      |         |  |  |
| Typ/Type                     |         |  |  |
| Regelstellung/Position       |         |  |  |
| Schaltwerte/Switching values | "warm"  |  |  |
| Valeurs de commutation       | "kalt"  |  |  |
|                              | "alarm" |  |  |

|                                |       |  |  |
|--------------------------------|-------|--|--|
| Füllmenge/Fill.quantity/Charge | R600a |  |  |
|--------------------------------|-------|--|--|

|                                         |   |    |     |     |
|-----------------------------------------|---|----|-----|-----|
| Anschlußwert/Conn.load/Puiss. connectée | W | 96 | 106 | 120 |
|-----------------------------------------|---|----|-----|-----|

|                                  |   |  |  |
|----------------------------------|---|--|--|
| Heizung/Heater/Chauffage         |   |  |  |
| Widerstand/Resistance/Résistance | Ω |  |  |
| Leistung/Power/Puissance         | W |  |  |

|                                  |   |  |  |
|----------------------------------|---|--|--|
| Ventilator/Blower/Ventilateur    |   |  |  |
| Widerstand/Resistance/Résistance | Ω |  |  |

|                     |     |             |     |             |
|---------------------|-----|-------------|-----|-------------|
| NTC-Fühler / Sensor | °C  | kΩ          | °C  | kΩ          |
|                     | +10 | 9,95 ±0,18  | -18 | 43,31 ±1,10 |
|                     | +5  | 12,70 ±0,18 | -22 | 54,66 ±1,59 |
|                     | 0   | 16,33 ±0,16 | -26 | 69,42 ±2,29 |

|                                          |   |  |  |
|------------------------------------------|---|--|--|
| Magnetventil/Magnetic valve/Electrovanne |   |  |  |
| Widerstand/Resistance/Résistance         | Ω |  |  |
| Spannung/Voltage/Tension                 | V |  |  |