



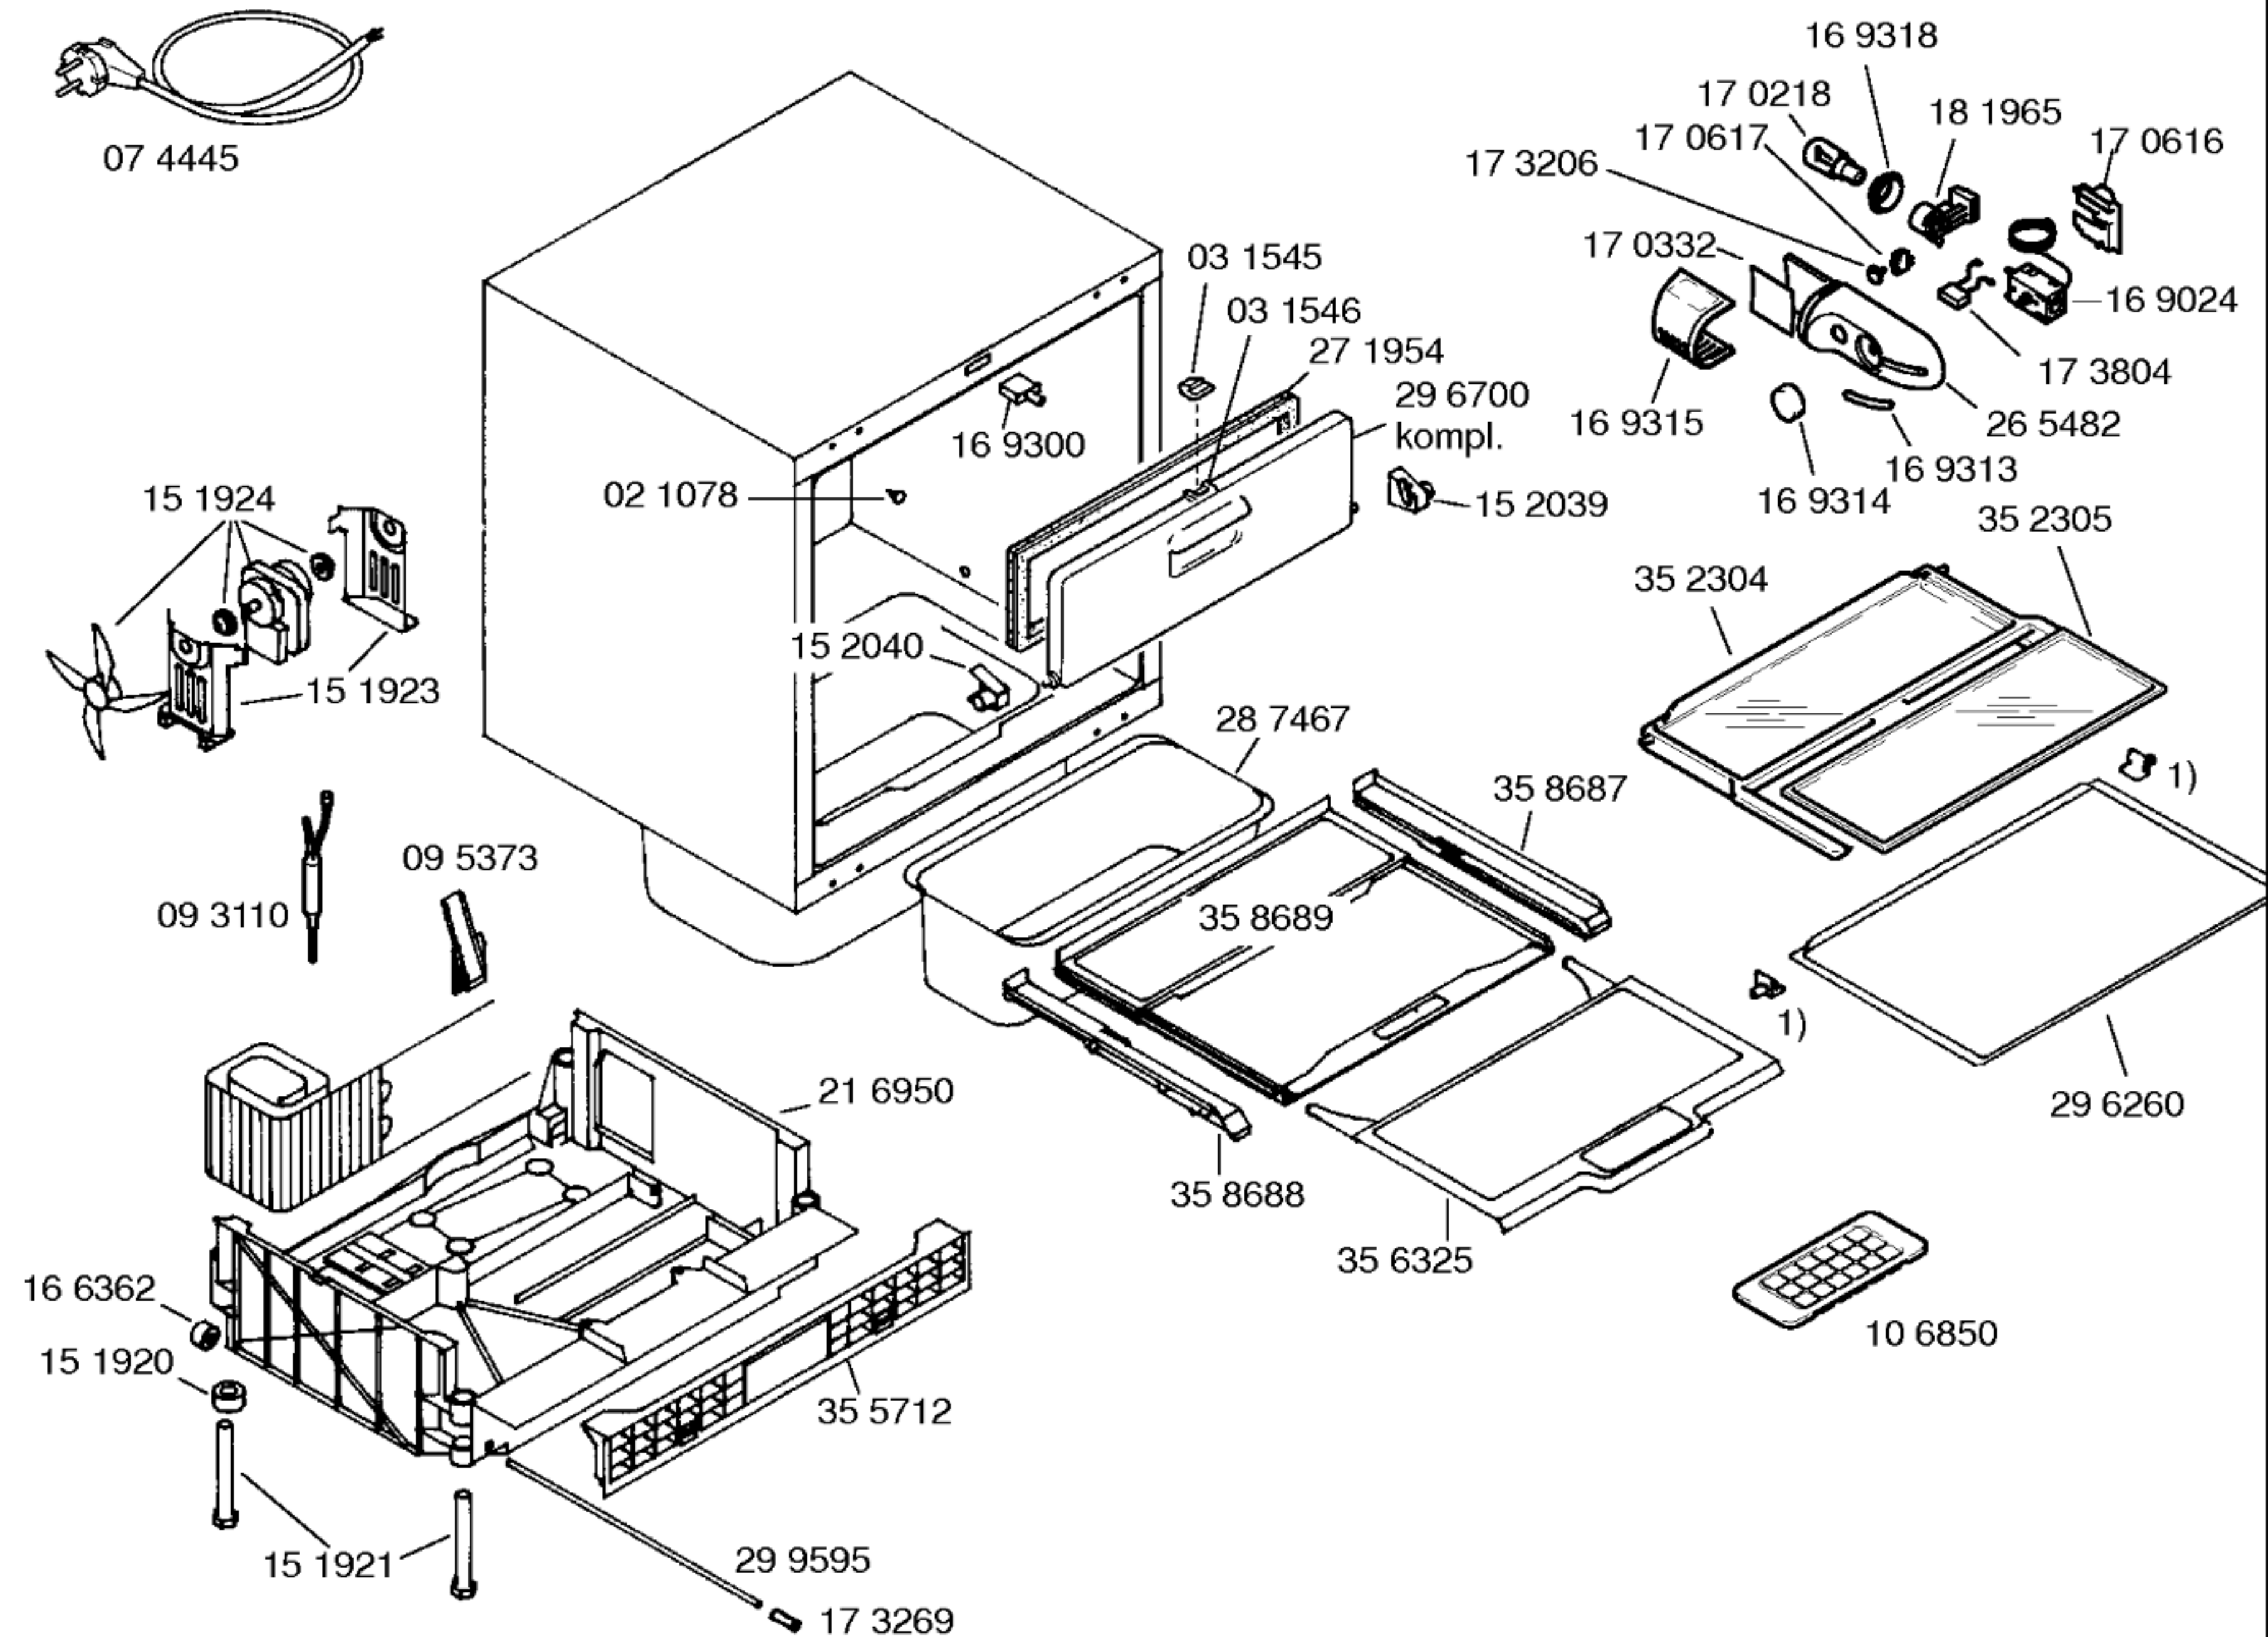


Gebrauchsanweisung
52 4046
Montageanleitung
52 6094

Beistellsatz
26 8429

1) 16 5789

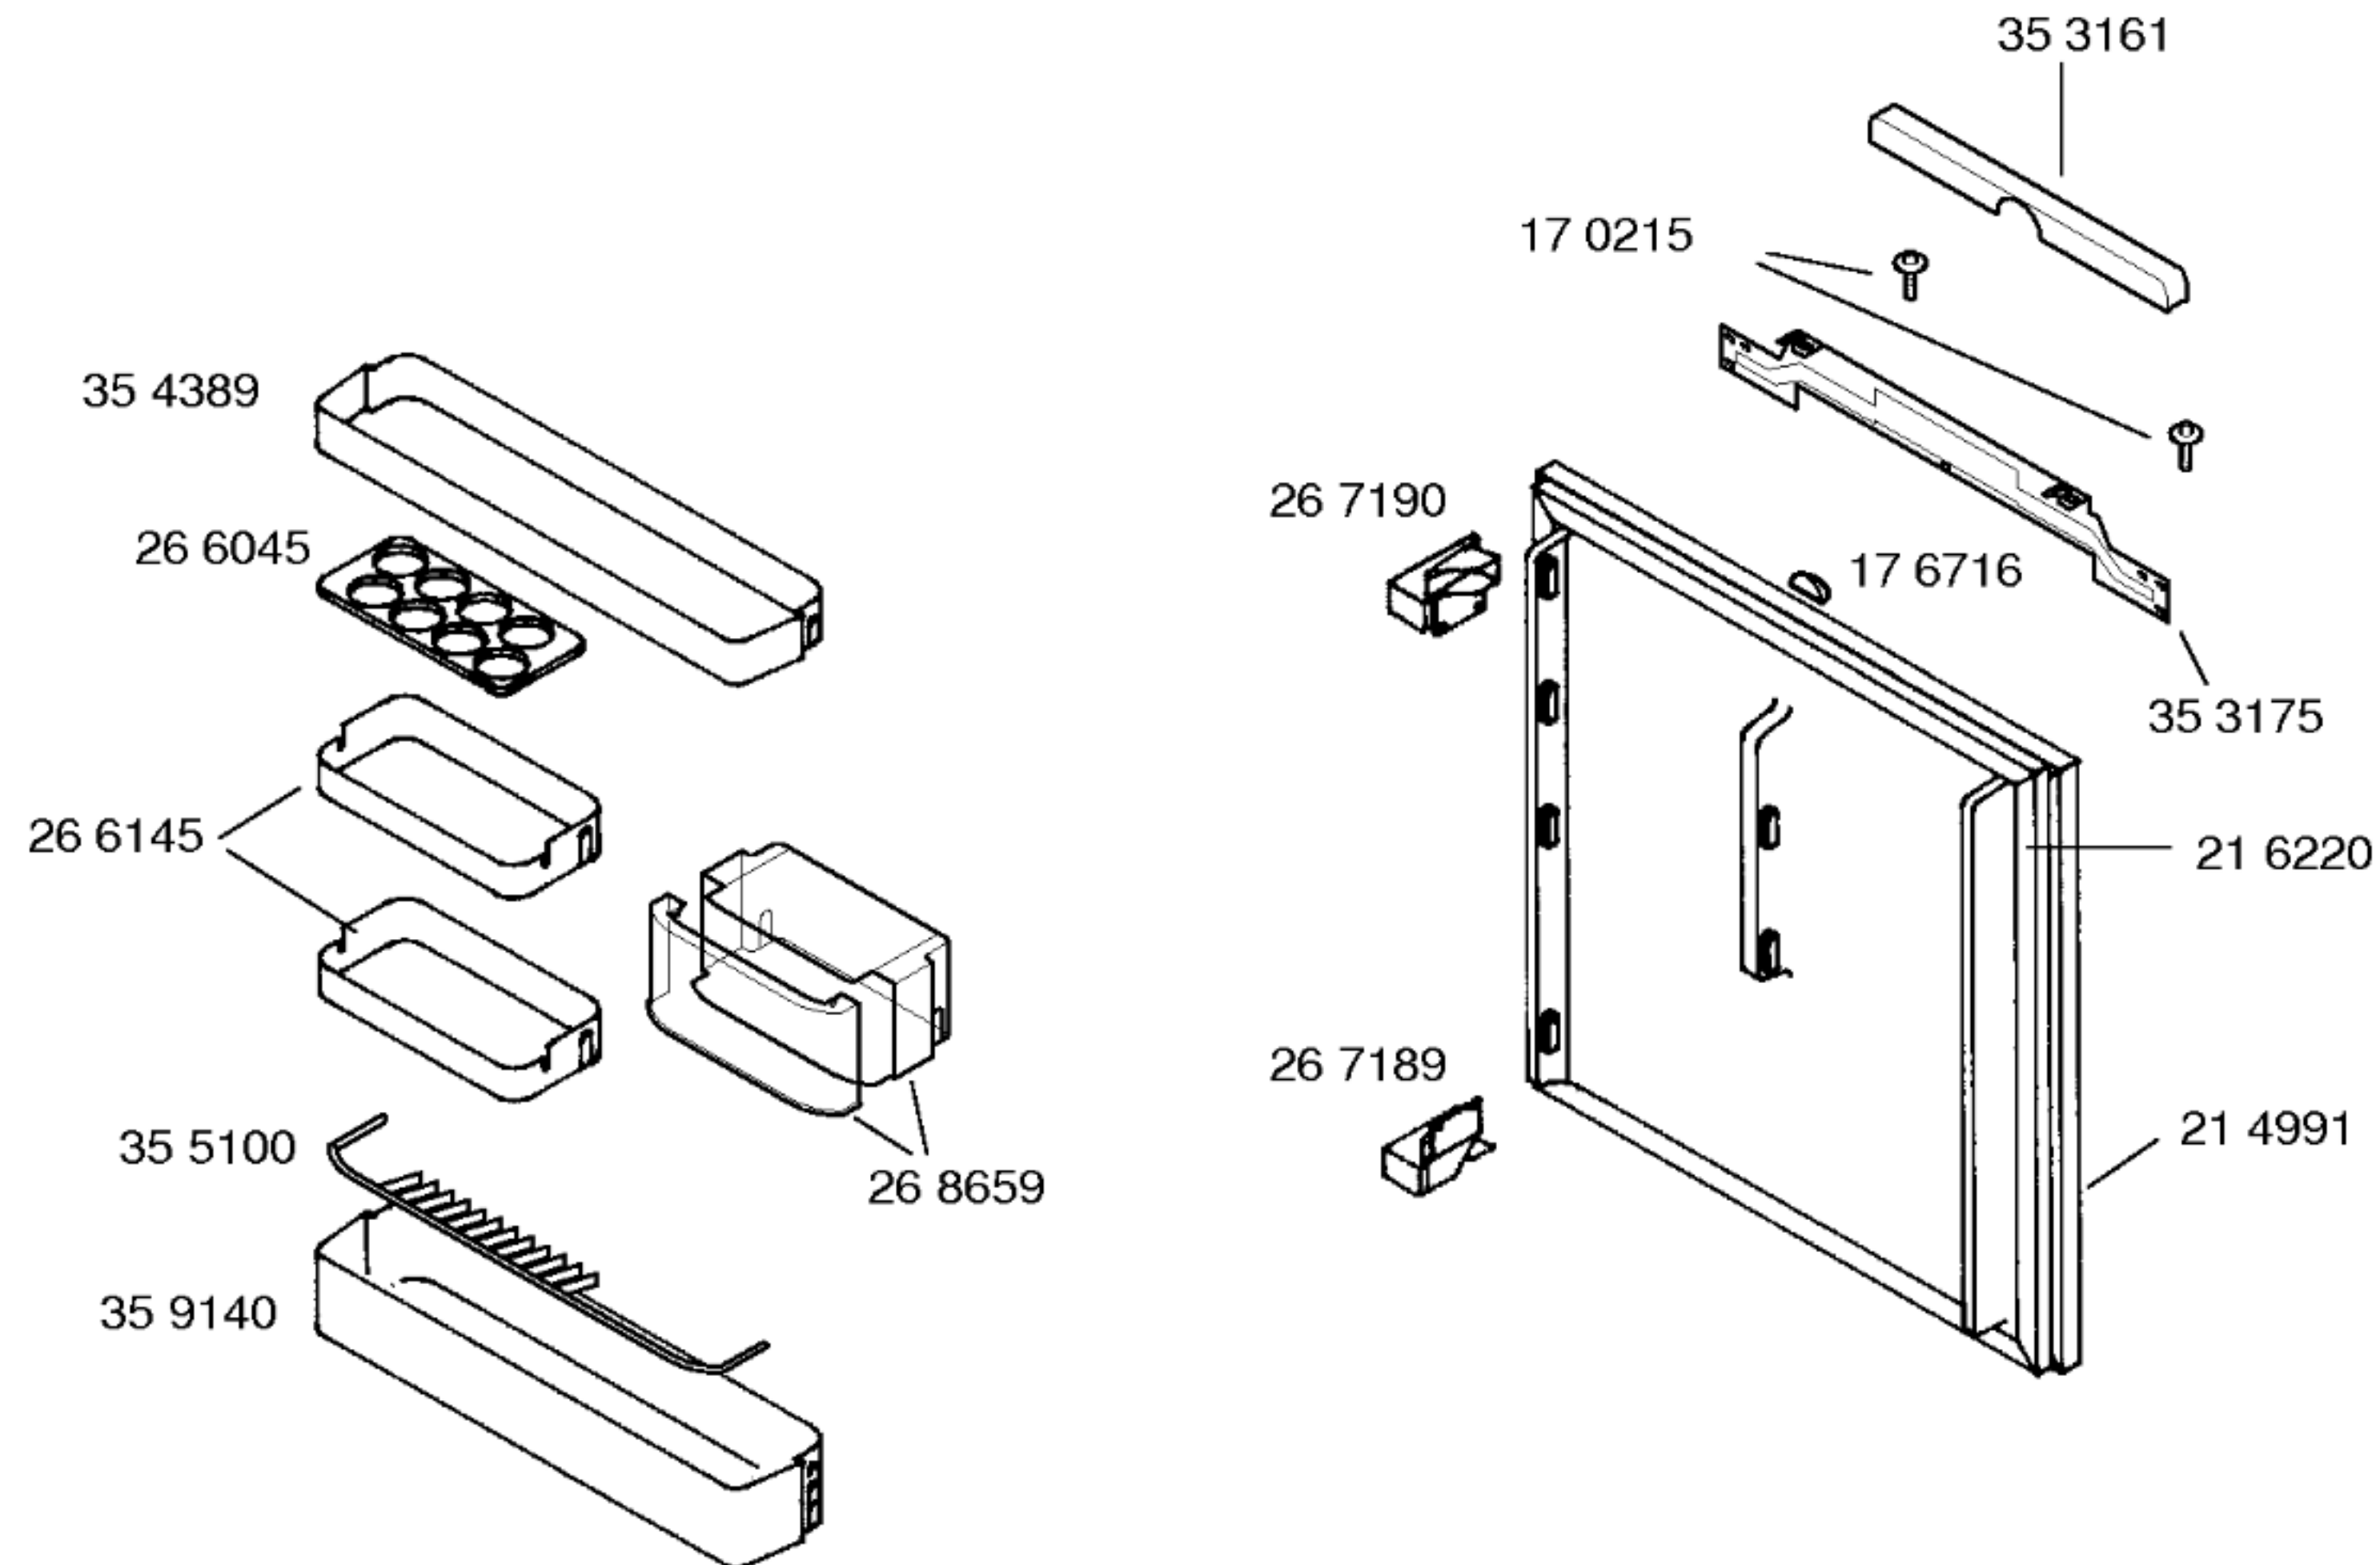

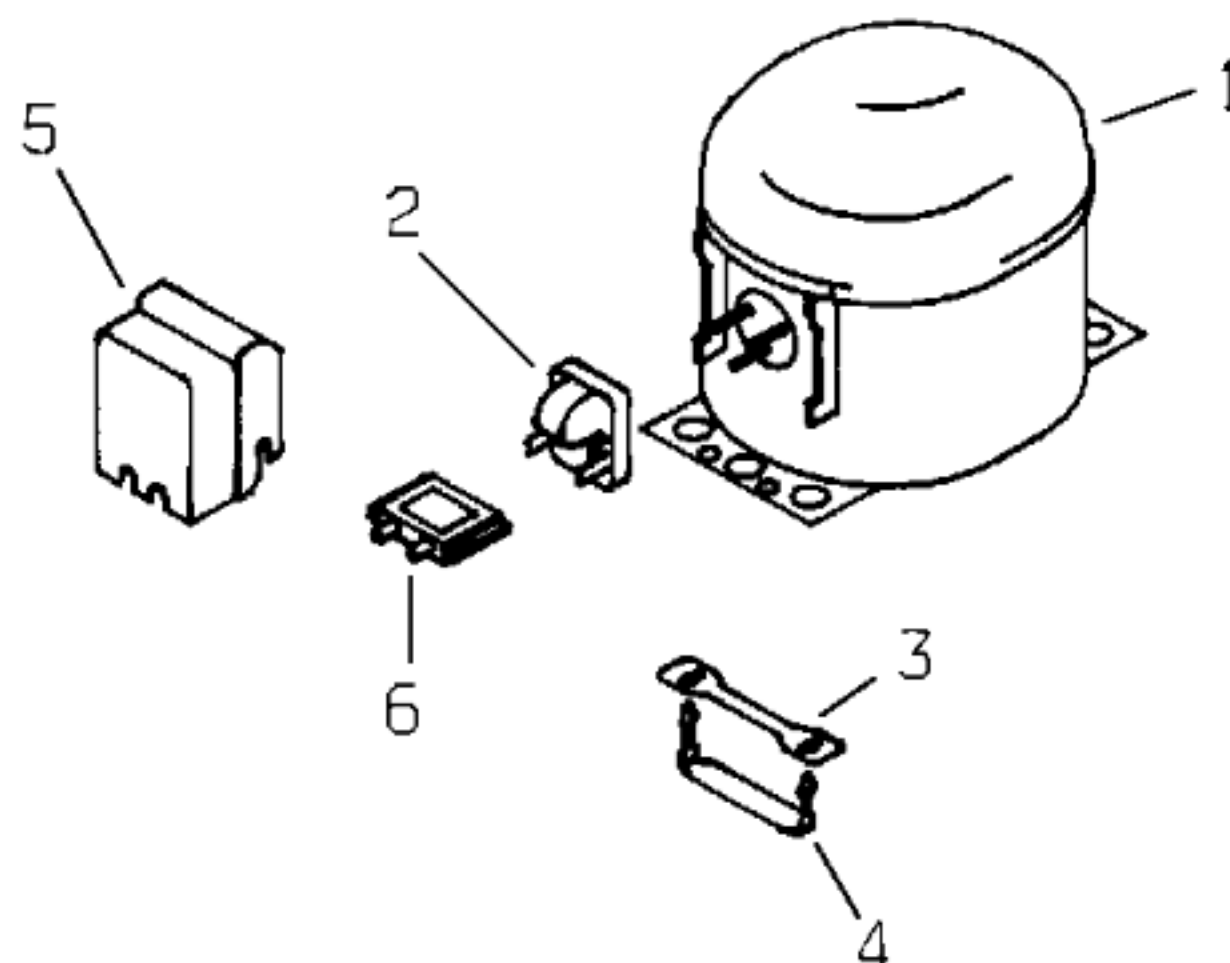

	V01	V02	
Pos.	Danfoss	Matsushita	
	TLES 7 KK2	ESS 60E	
1	14 1903	14 21 58	
2	15 1055	18 3589	
3	18 3656	18 3656	
4	18 3655	18 3655	
5	15 1072	15 1072	
6	15 0760	15 0760	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Matsushita
Typ/Type		TLES 7 KK2	ESS 60E
Förderleistung/Delivery/Débit	l/h	1168	1076
Anlaufstrom/Starting current/Cour de démarrage	A	7,5	5,6
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	30,6
	Hi/aux Ω	15,3	26,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5	+5
Valeurs de commutation	„aus“	-28	-17
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	75	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild