


**BOSCH**

KTL1570/01-V01
KTL1570CH/01-V02
KTL1570SD/01-V03
KTL1570/02-V04

KÜHL-,GEFRIERGERÄTE
Kühlschränke, Tisch

Ident – Nummern – Konstante
3740

Gebrauchsanweisung
51 5686
(D,GB,I,F,E,NL)

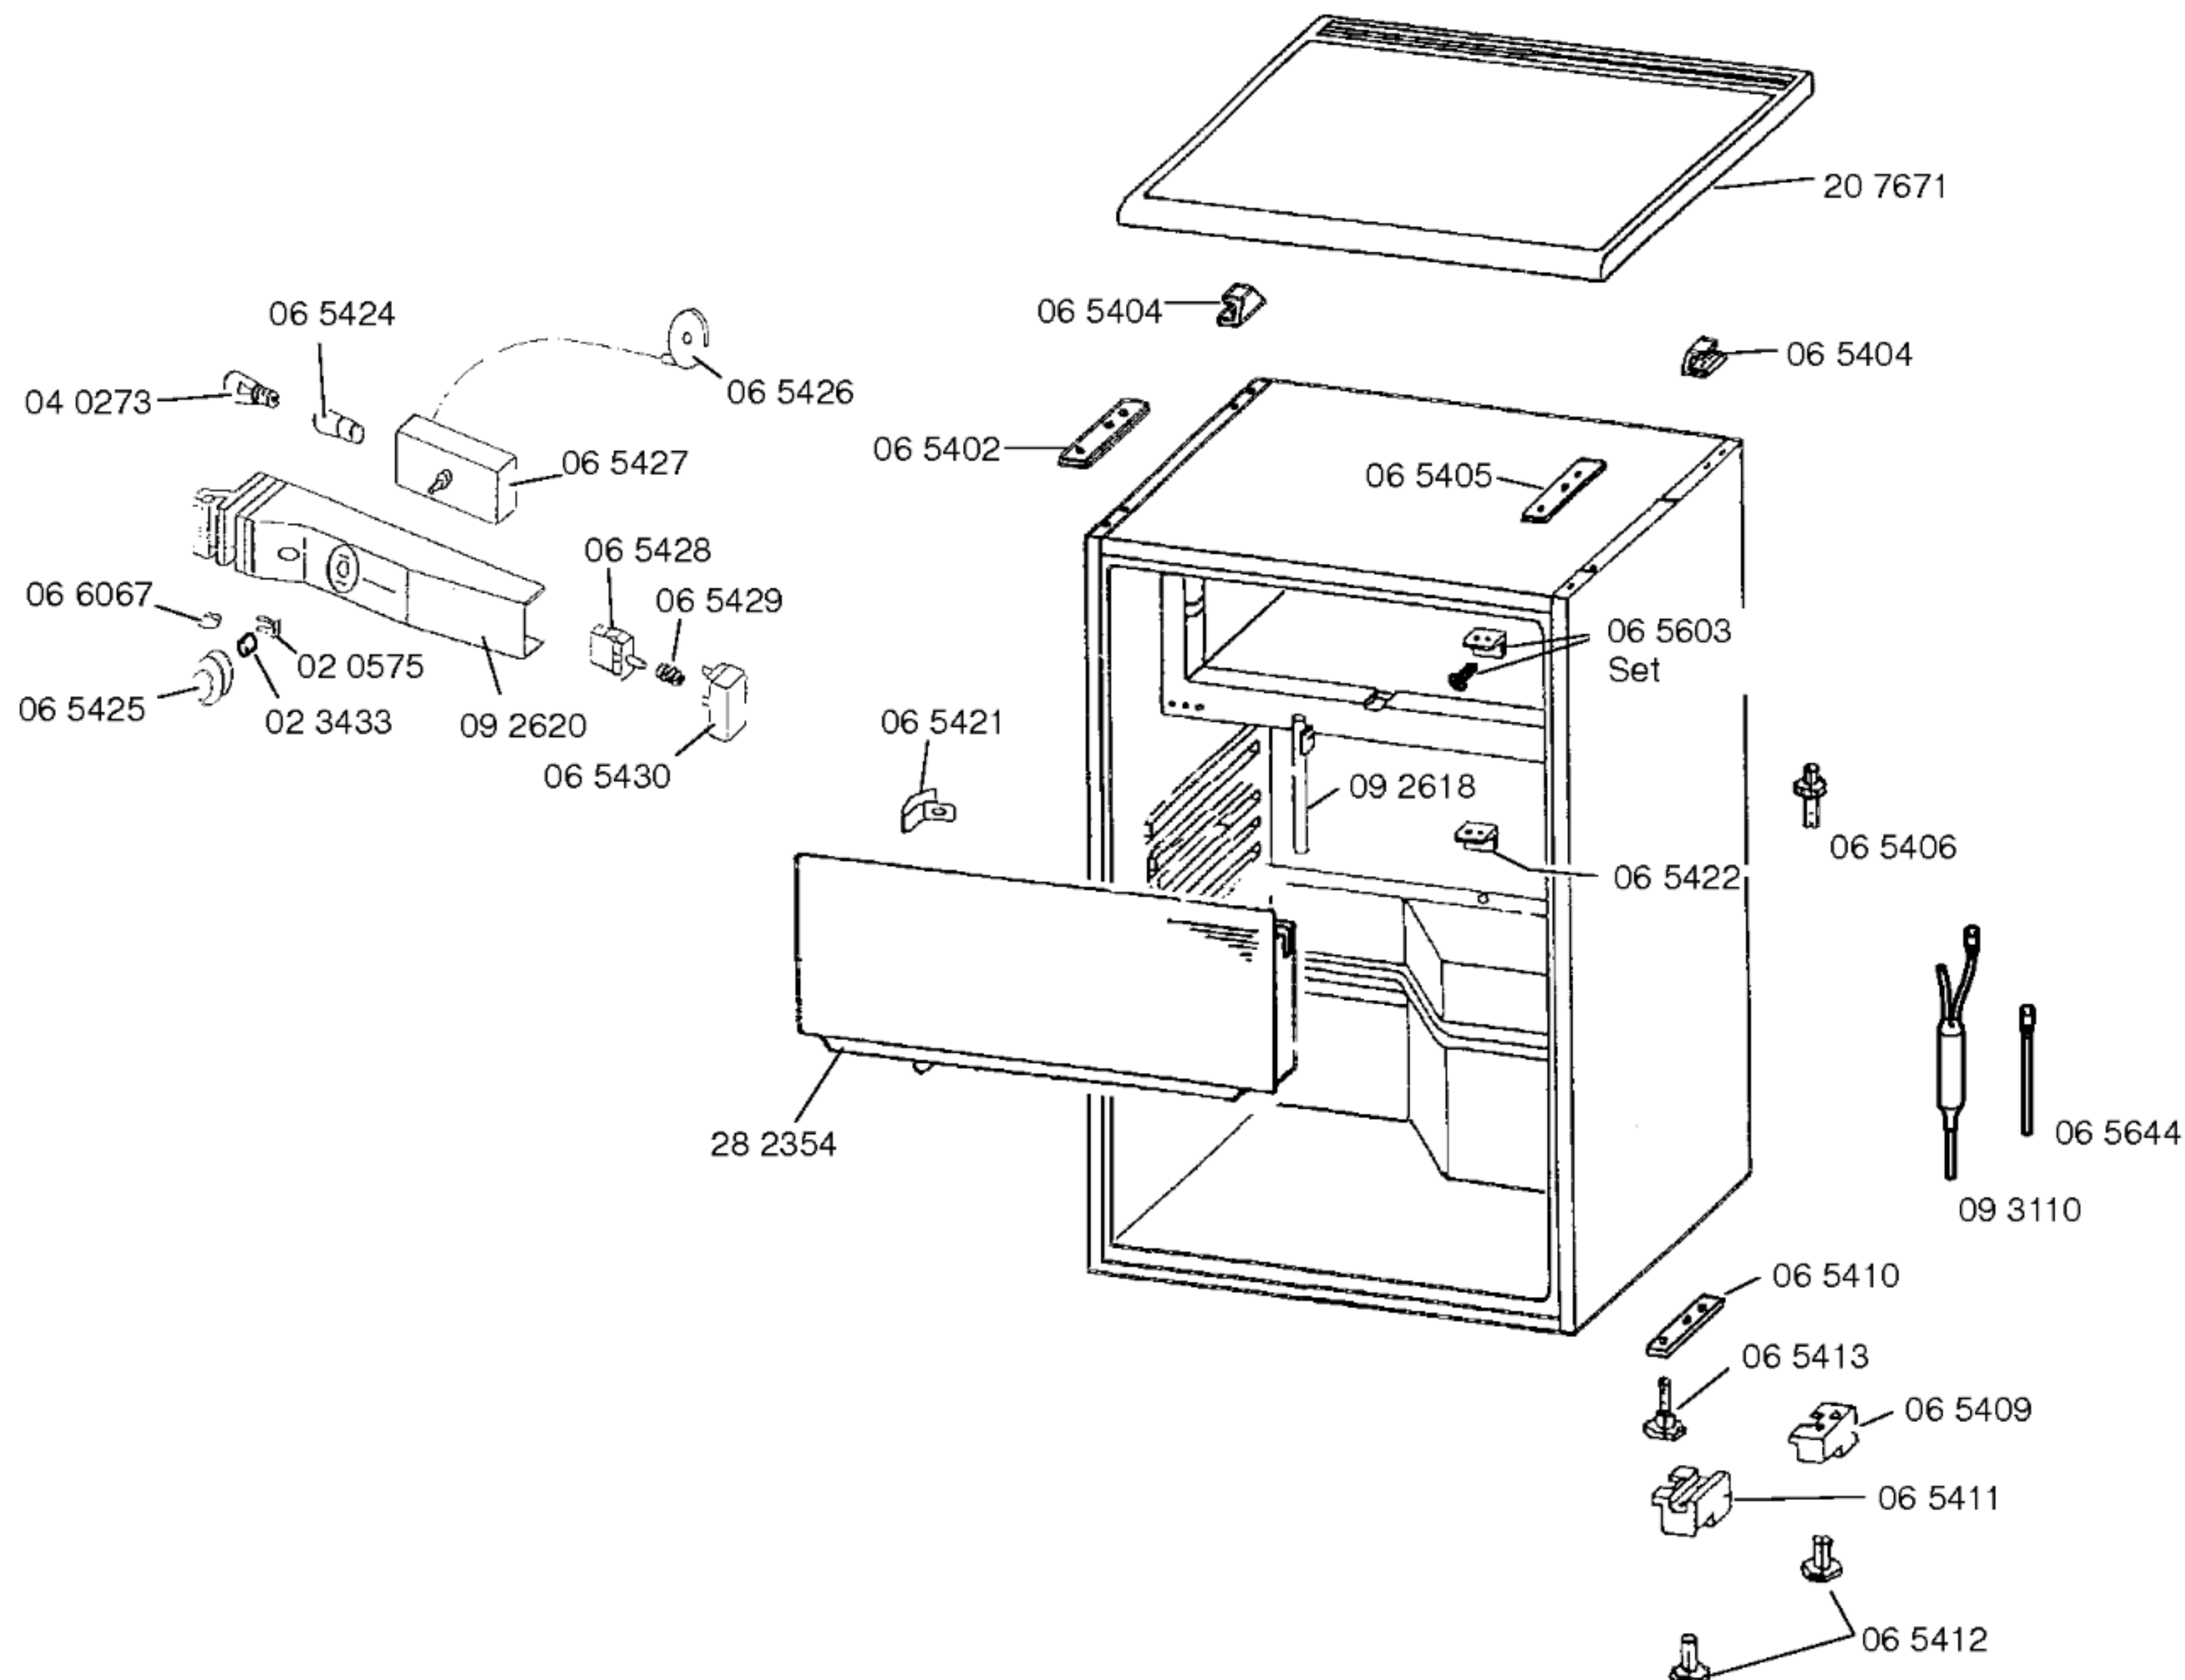


**BOSCH**

KTL1570/01-V01
KTL1570CH/01-V02
KTL1570SD/01-V03
KTL1570/02-V04

KÜHL-,GEFRIERGERÄTE
Kühlschränke, Tisch

Ident – Nummern – Konstante
3740

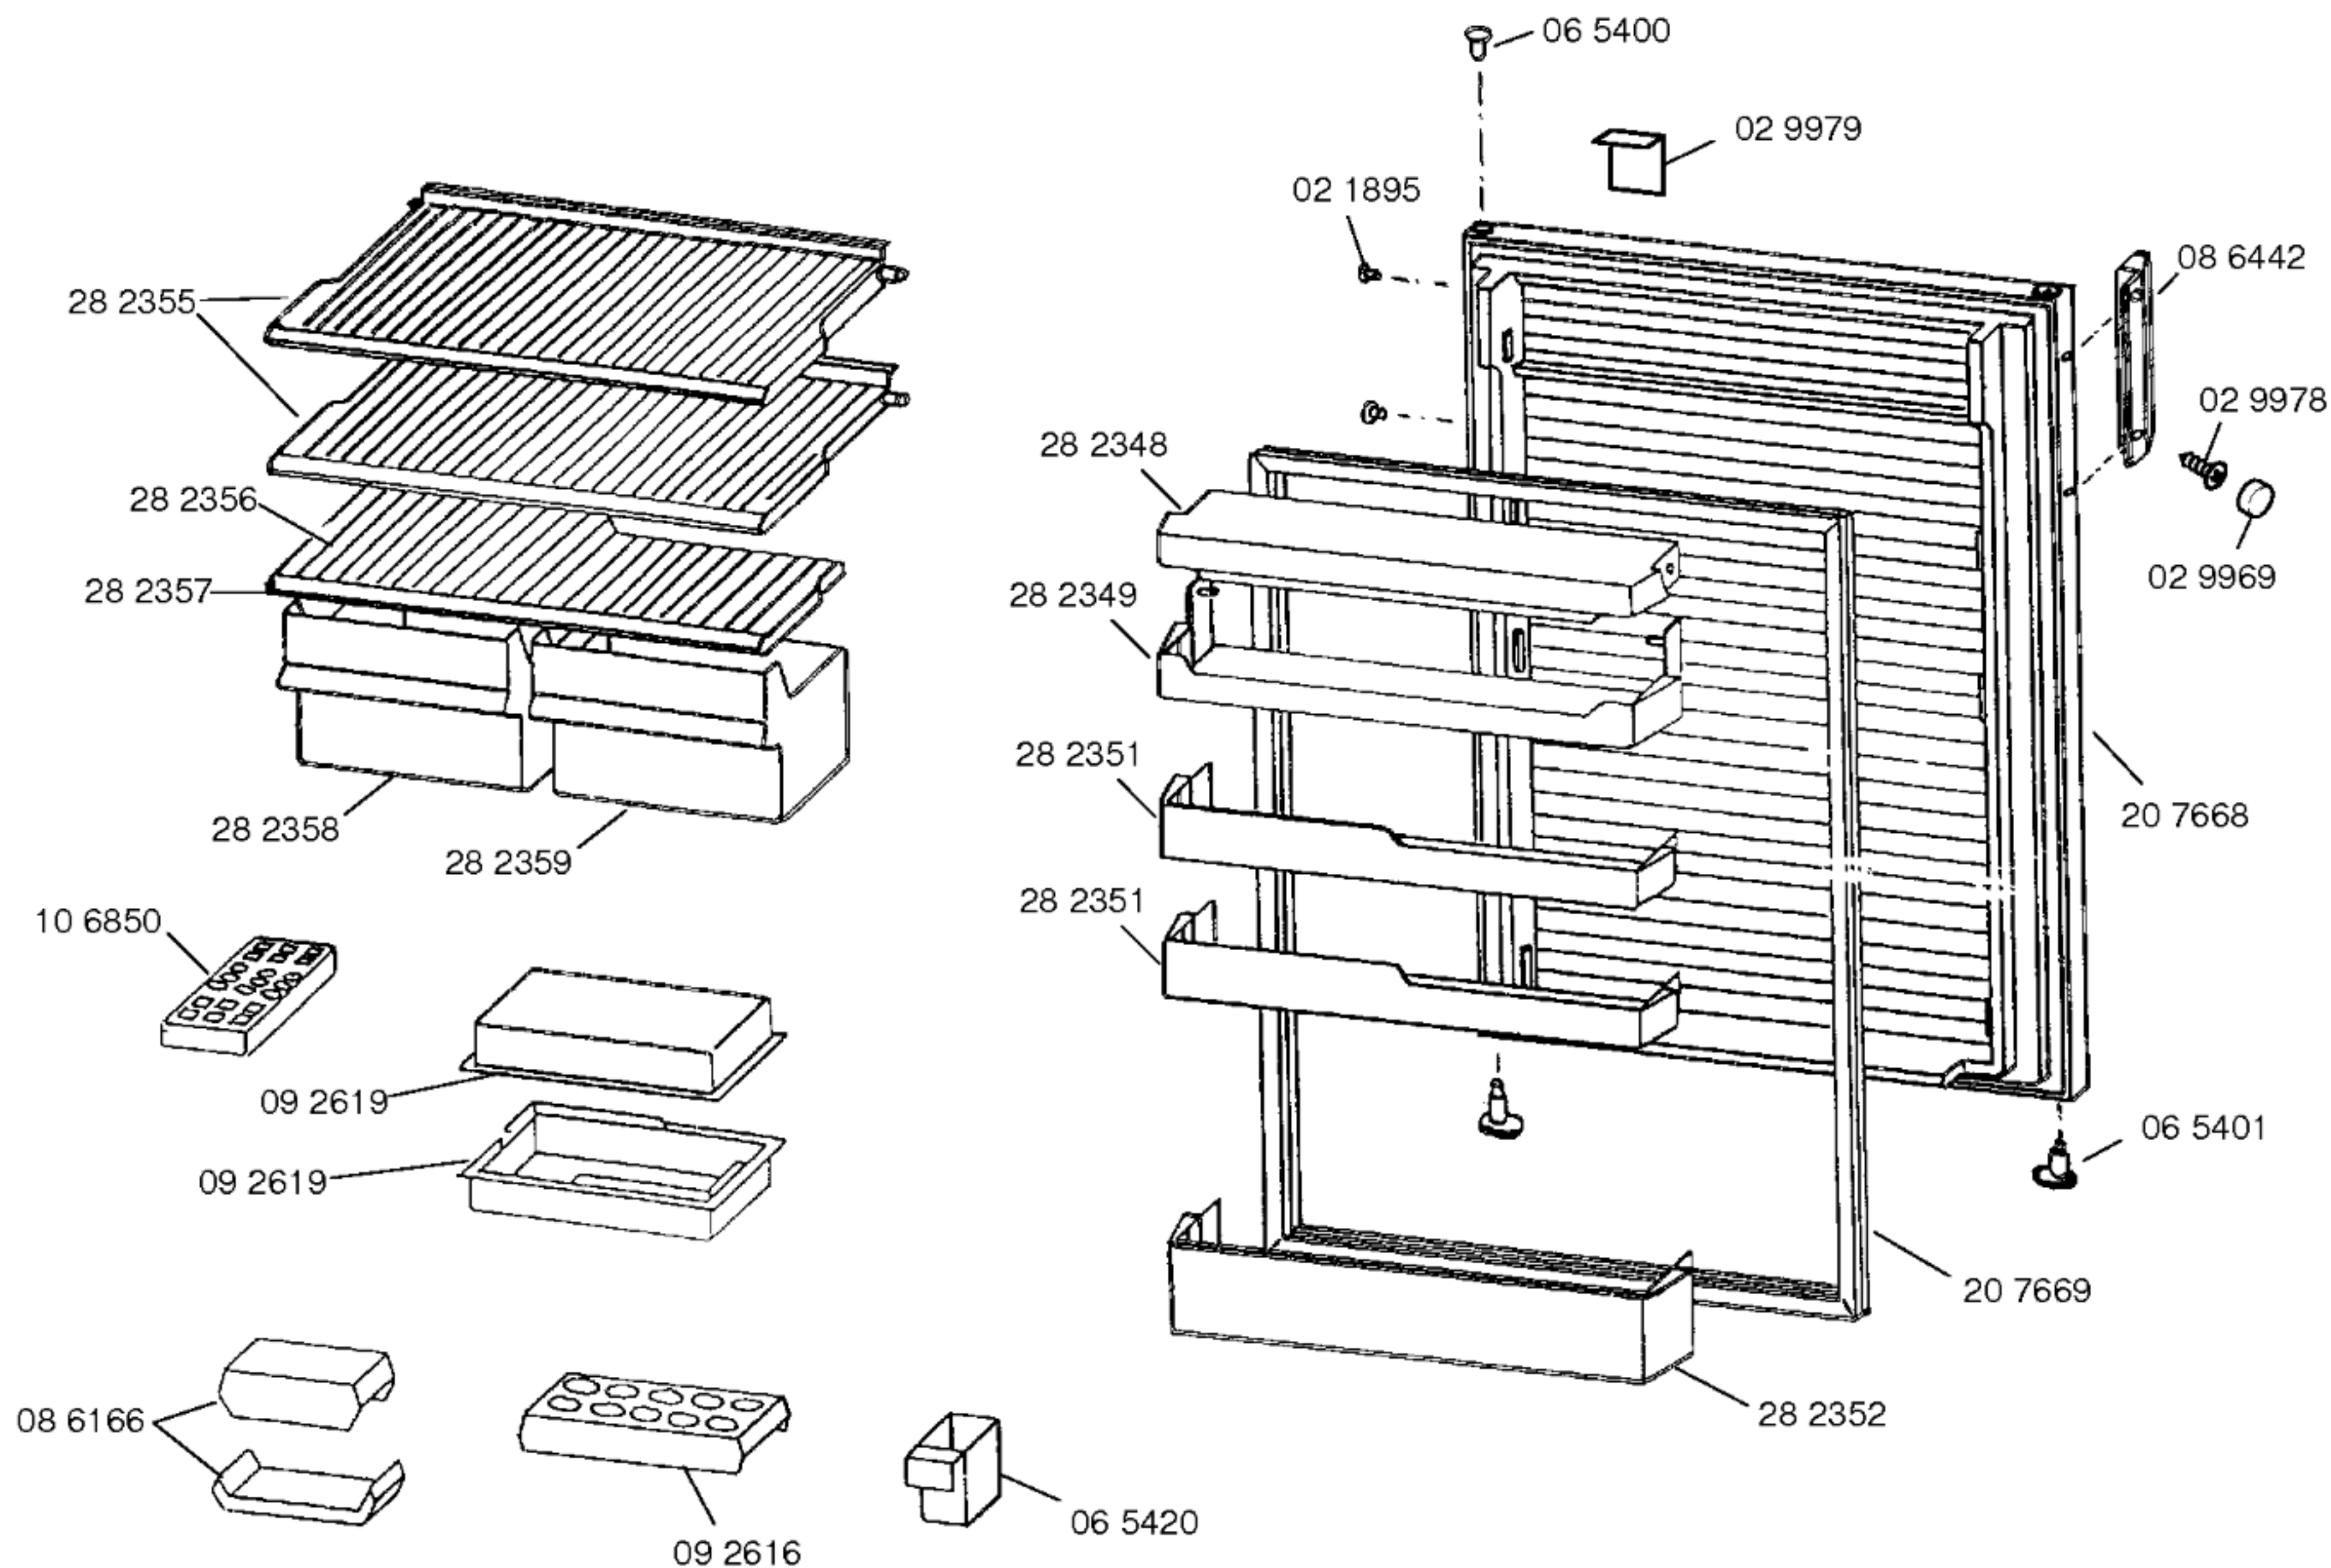


**BOSCH**

KTL1570/01-V01
 KTL1570CH/01-V02
 KTL1570SD/01-V03
 KTL1570/02-V04

KÜHL-,GEFRIERGERÄTE
 Kühlschränke, Tisch

Ident – Nummern – Konstante
 3740

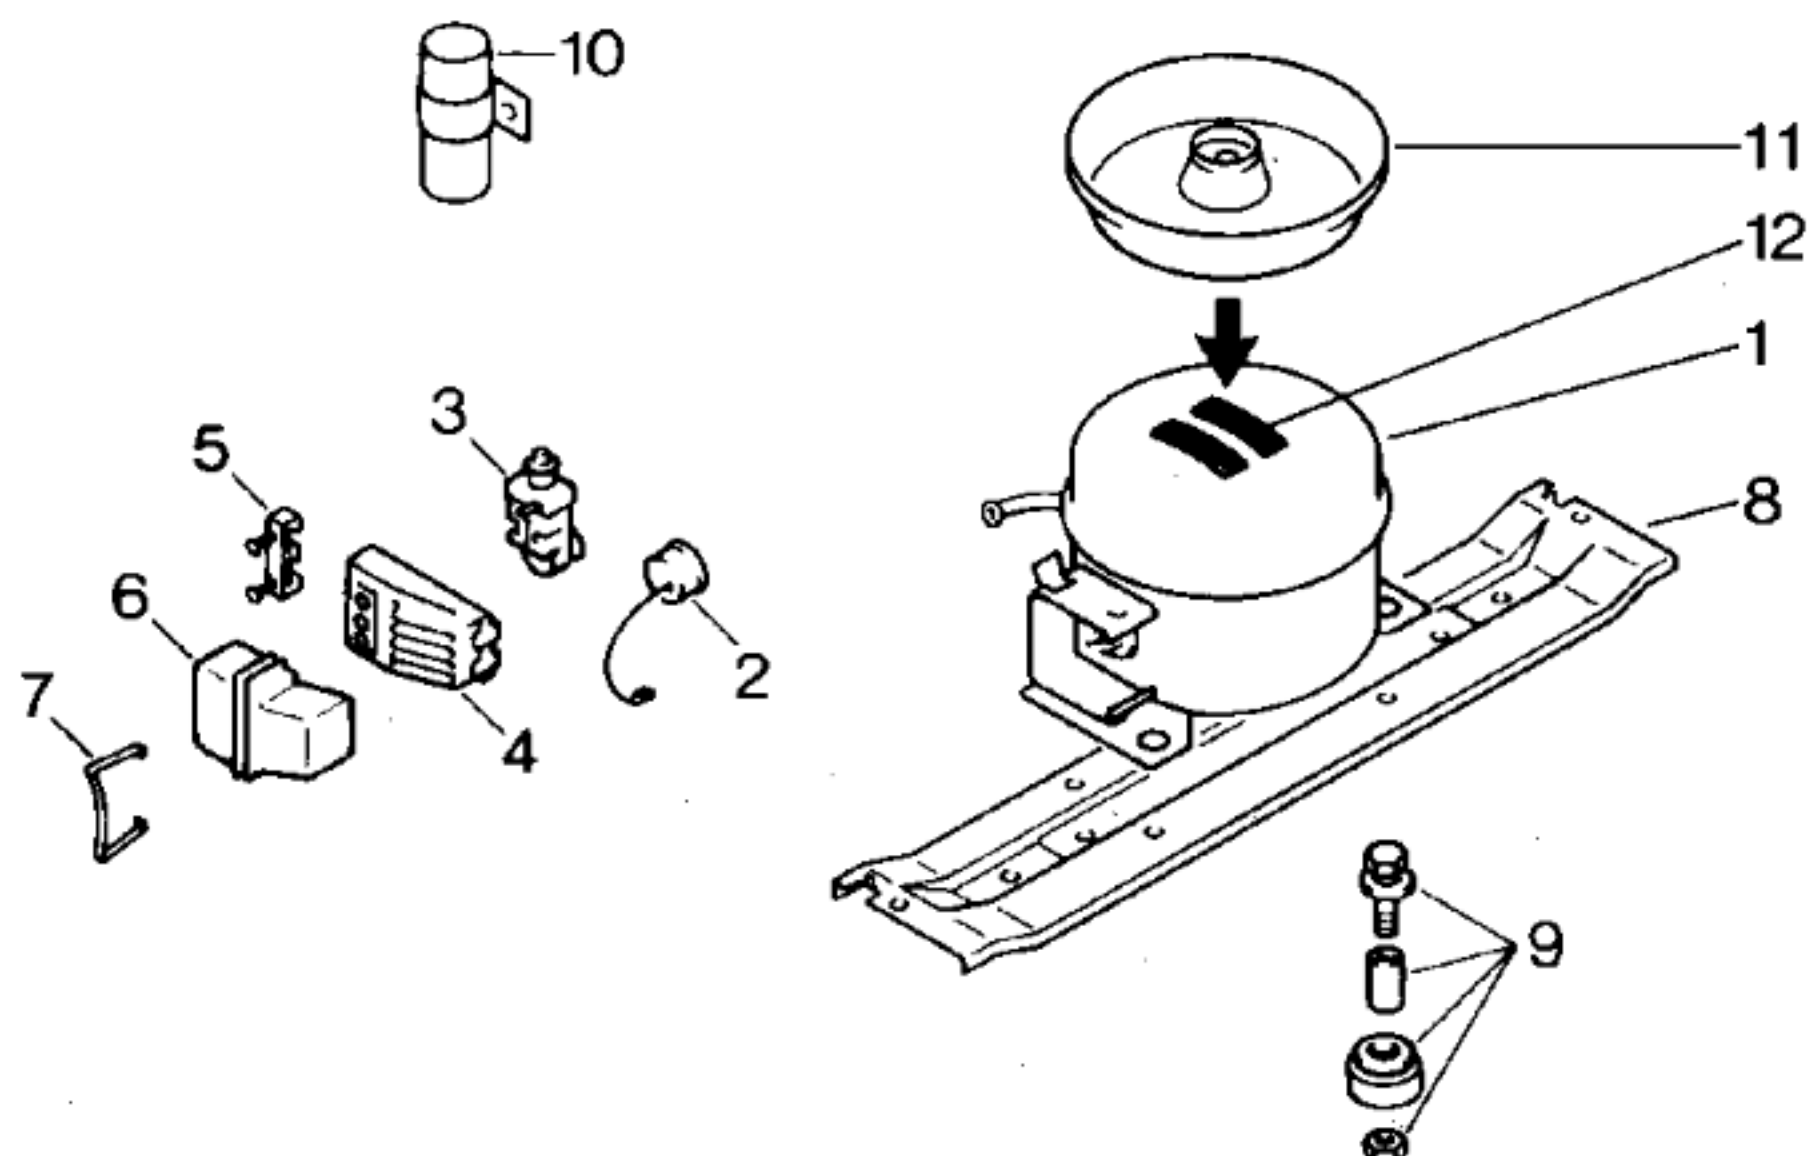

Pos.	V01,V02,V03	V04	
	Danfoss	Unidad	
	TL 3 A	L33AS	
1	14 0080		
2		06 5605	
3	05 9191	06 5604	
4		06 5607	
5	02 7310		
6	05 1413	06 5608	
7		06 5609	
8			
9	05 0166		
10			
11	08 4744	09 5157	
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Unidad	
Typ/Type		TL3A	L33AS	
Förderleistung/Delivery/Débit		l/h	563	–
Anlaufstrom/Starting current/Cour de démarrage		A	7,2	–
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	31,4	41,7
	Hi/aux	Ω	15,5	69,6
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57		
Reglerstellung/Position		warm kalt		
Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	„ein“	°C	+4	+4
	„aus“		–16	–28,5
	„alarm“			
Füllmenge/Fill.quantity/Charge		R12	g	80
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		