



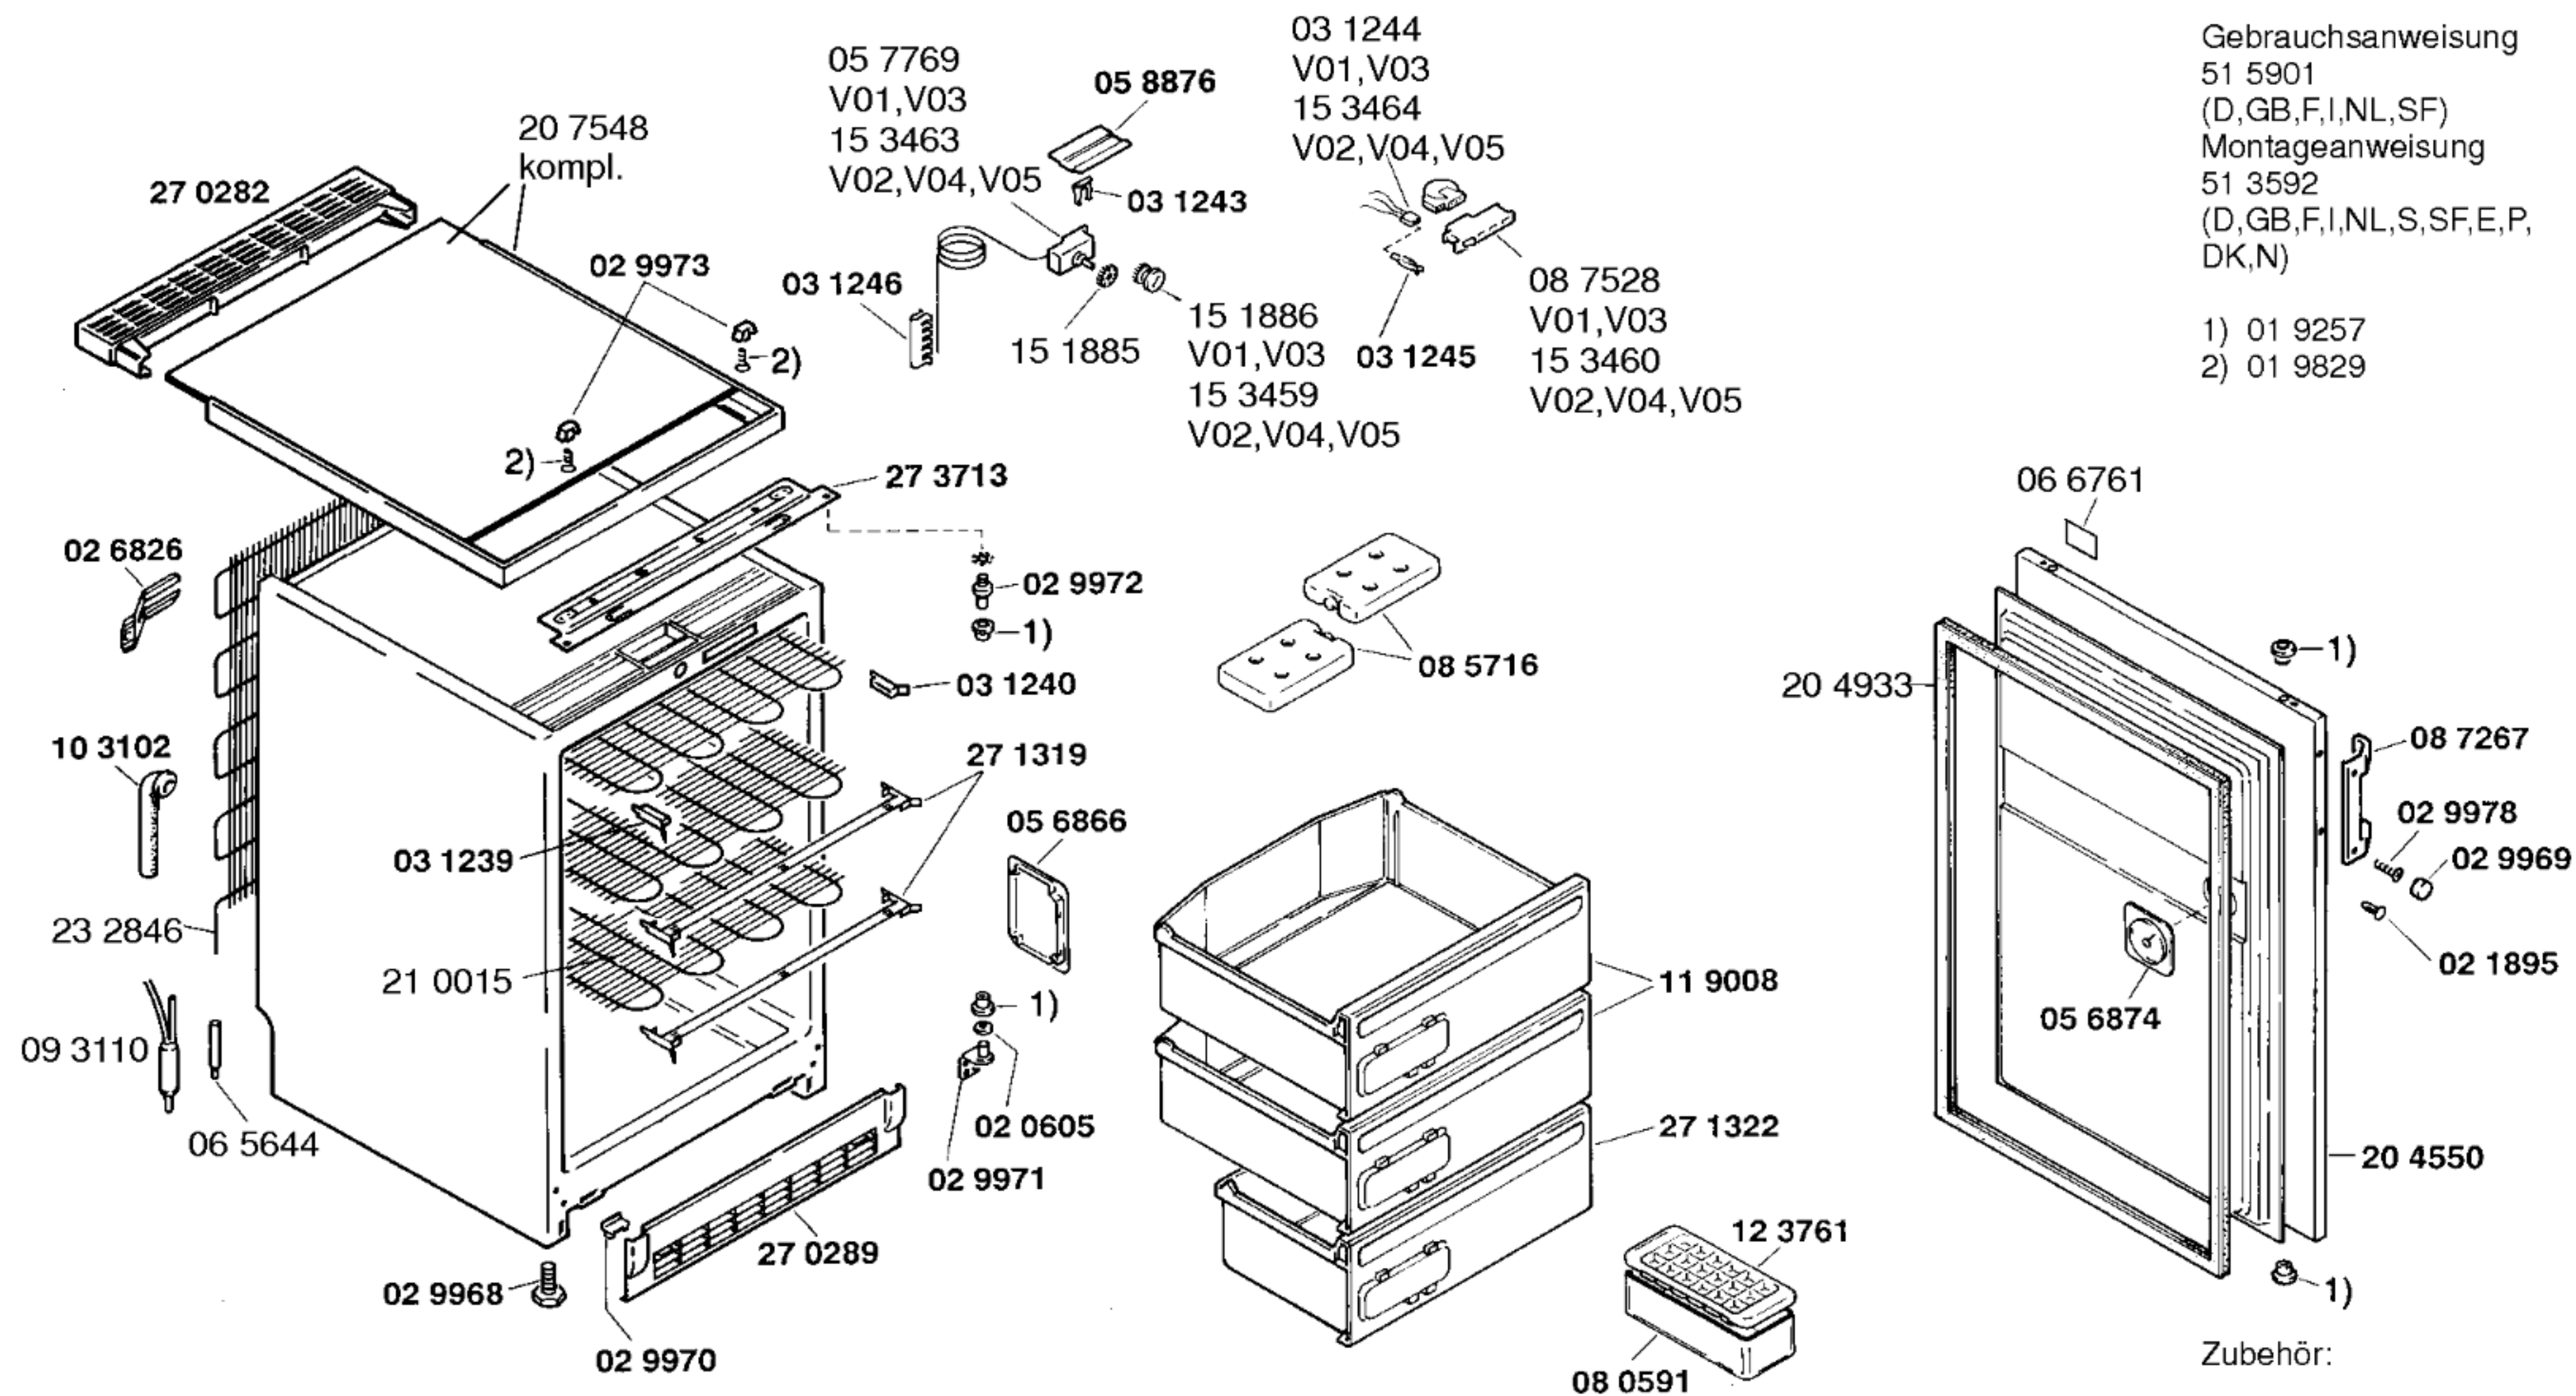

Gebrauchsanweisung
51 5901
(D,GB,F,I,NL,SF)
Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9257
2) 01 9829

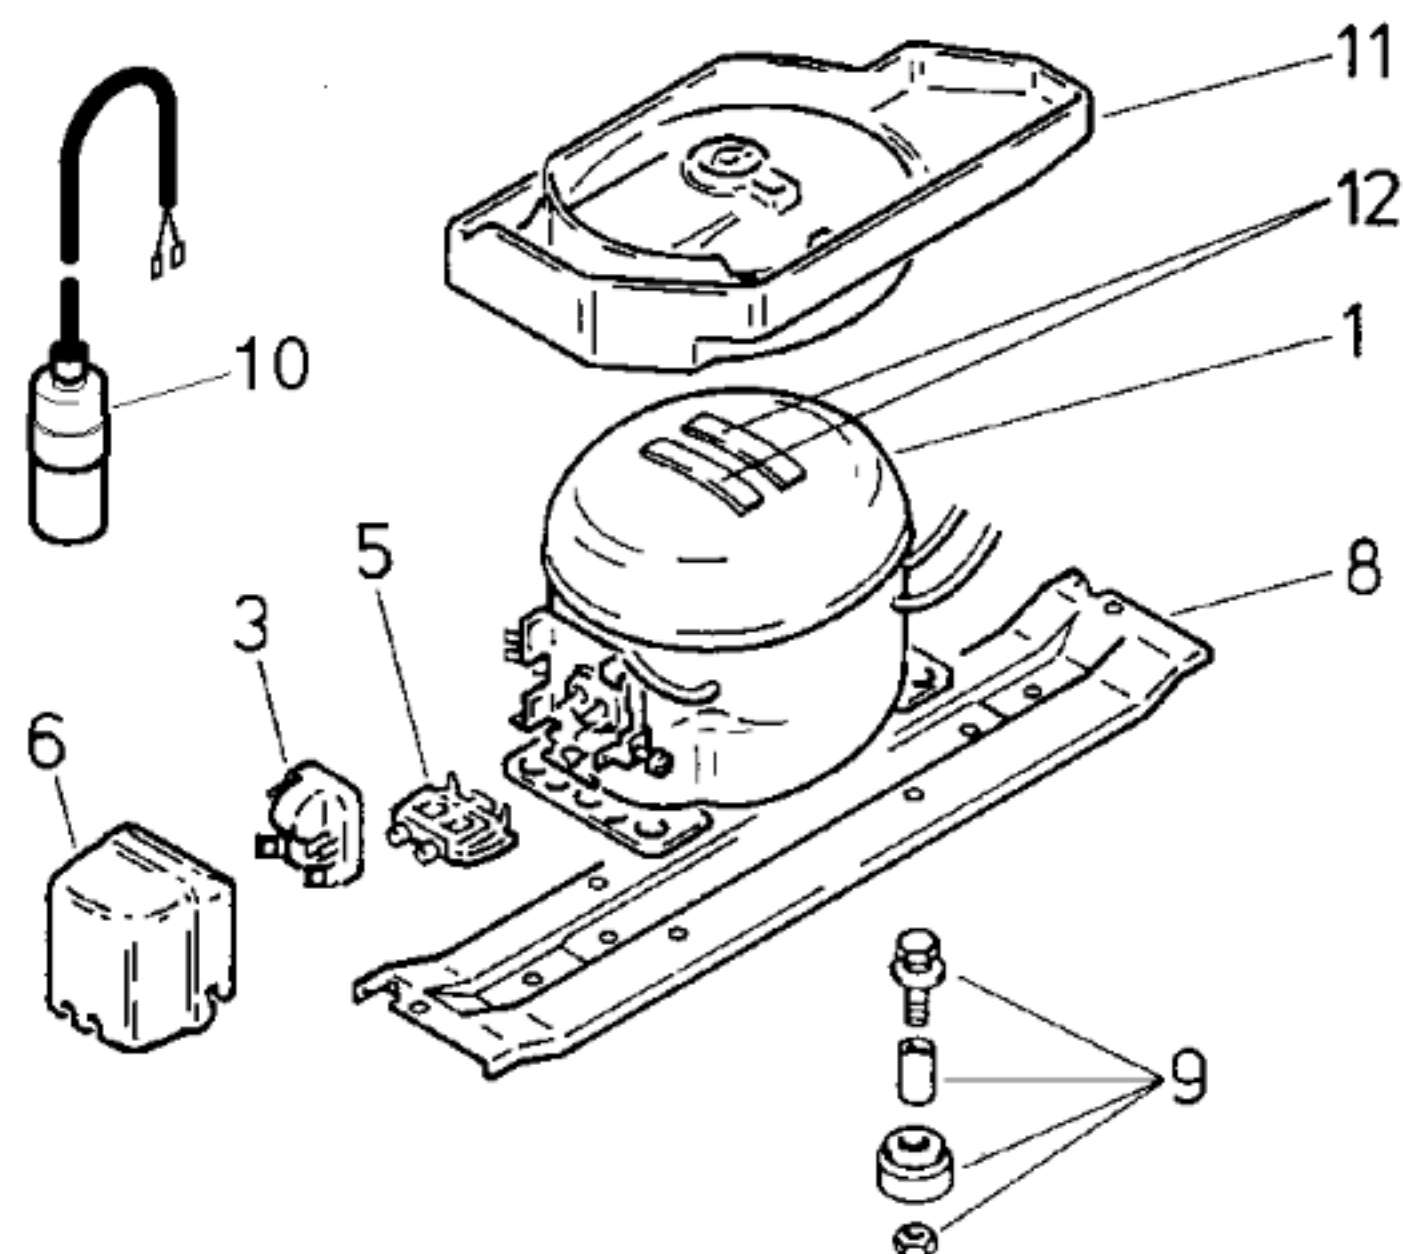

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 7 K		
Förderleistung/Delivery/Débit	l/h	1168		
Anlaufstrom/Starting current/Cour de démarrage	A	4,5		
Widerstand/Resistance/Résistance	Ha/main/prin.	16,5		
	Hi/aux	16,9		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF2		
Reglerstellung/Position		kalt	warm	Danfoss
Schaltwerte/Switching values/	„ein“	-25	-17	BE 002
Valeurs de commutation	„aus“	-33	-23	kalt
(„abtauen“ od.)	„alarm“	-19,5	-13	warm
Füllmenge/Fill.quantity/Charge	R600a	g	45	
Anschlußwert/Conn.load/Puiss. connectée	W	79	78	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	V01-V04	V05	
	Danfoss	Matsushita	
	TLES 7 K	SD 65 E	
1	14 1239	14 1316	
2			
3	15 1055	15 3306	
4			
5	15 0760	15 3865	
6	15 1072	15 3303	
7			
8	27 0291	27 0291	
9	05 0166		
10			
11	08 4744		
12			