

Electrolux

ELECTROLUX HOME PRODUCTS PTY LTD

ABN 51 004 762 341

Technical Publication N° CG1158

Issue: 1

Date: 10/19

WESTINGHOUSE

***GAS
COOKTOPS***

MODEL

WHG955SA

PNC

94325394006

First Built Dates	
WHG955SA	11/19


Contents

First Built Dates.....	2
Contents.....	3
HOB ASSEMBLY	4
BURNER BOX ASSEMBLY	6
Gas Conversion – Important	8
CIRCUIT DIAGRAM.....	10


NOTE: In Parts Listings

N.I.	=	Not Illustrated
N.P.A.	=	No Part Available
N.P.N.	=	Not Used on this Model

EX. VIEW DRAWING 8287

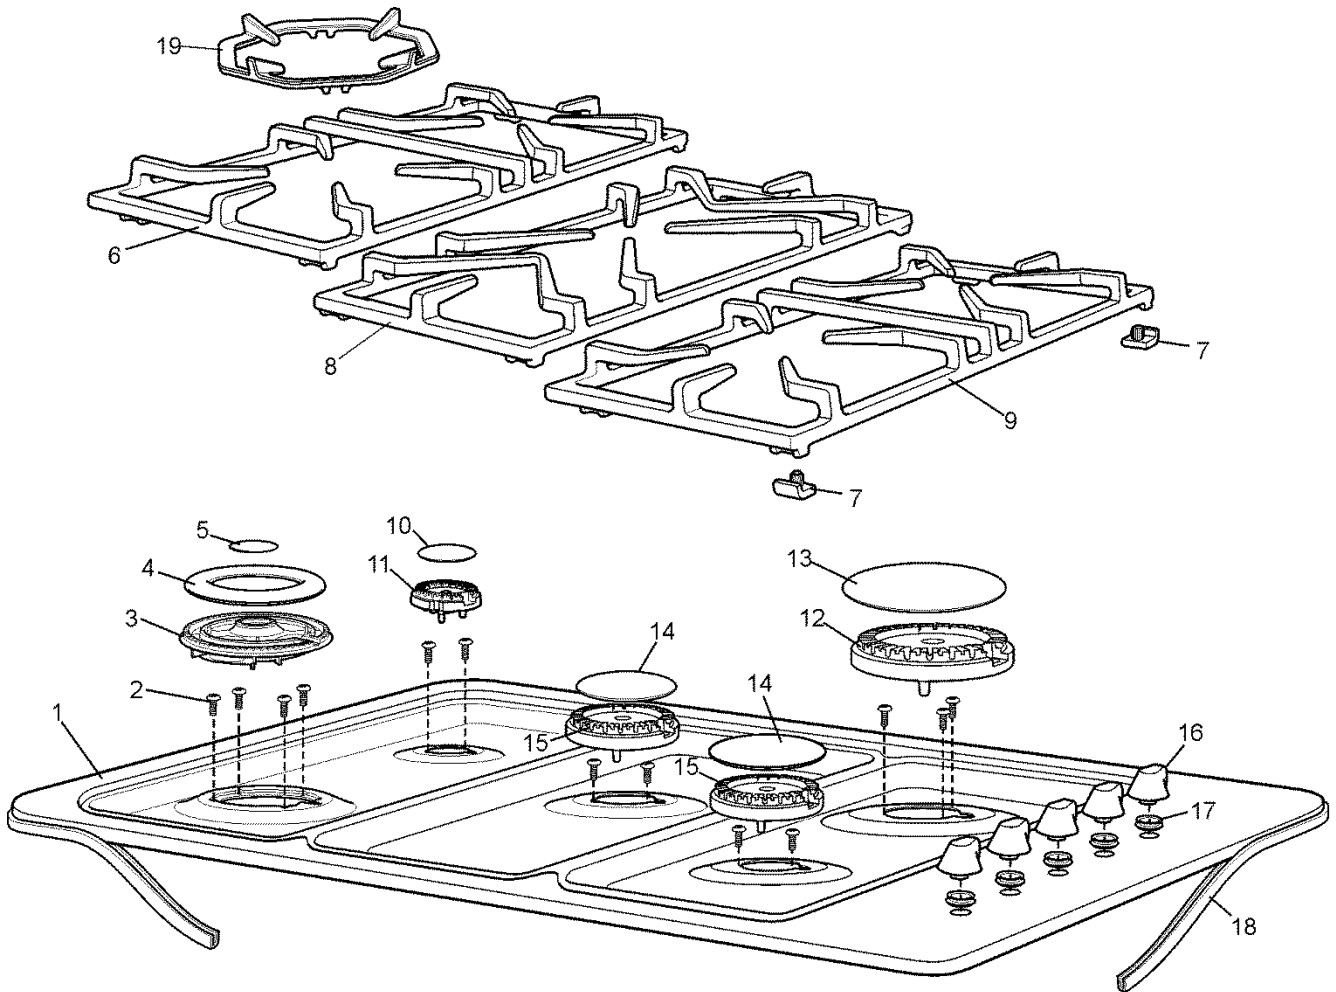

ITEM	PART N°	DESCRIPTION Ex 8287	S
1	A03560408	HOB LASER ETCHED SS	1
2	354 3203 01	SCREW 2.9 X 13 PAN T10 ZP	13
3	357 7259 15	BURNER ASSY TRIPLE CROWN WOK	1
4	305 4317 03	BURNER CAP MATT OUTER WOK	1
5	305 4316 06	BURNER CAP MATT INNER WOK	1
6	A04238701	TRIVET CAST 90 WOK FORTE SC	1
7	305 4388 00	FOOT TRIVET	12
8	A04238801	TRIVET CAST 90 CENT FORTE SC	1
9	A04238601	TRIVET CAST 90 STD FORTE SC	1
10	808950804	BURNER CAP AUX MATT BLACK ENAM	1
11	354 0138 02	BURNER CROWN AUX CYLINDER MCH	1
12	354 0136 06	BURNER CROWN RAPID CYLIND MCH	1
13	808950806	BURNER CAP RAP MATT BLACK ENAM	2
14	808950805	BURNER CAP SR MATT BLACK ENAM	1
15	354 0137 02	BURNER CROWN SEMI-RAP CYL MCH	2
16	A01389118	KNOB ASSY SS FORTE FC GAS COMM	5
17	808738501	GROMMET	5
18	305 5221 01	SEAL SURROUND 2800MM	1
19	305638800	TRIVET CAST WOK SUPPORT FORTE	1

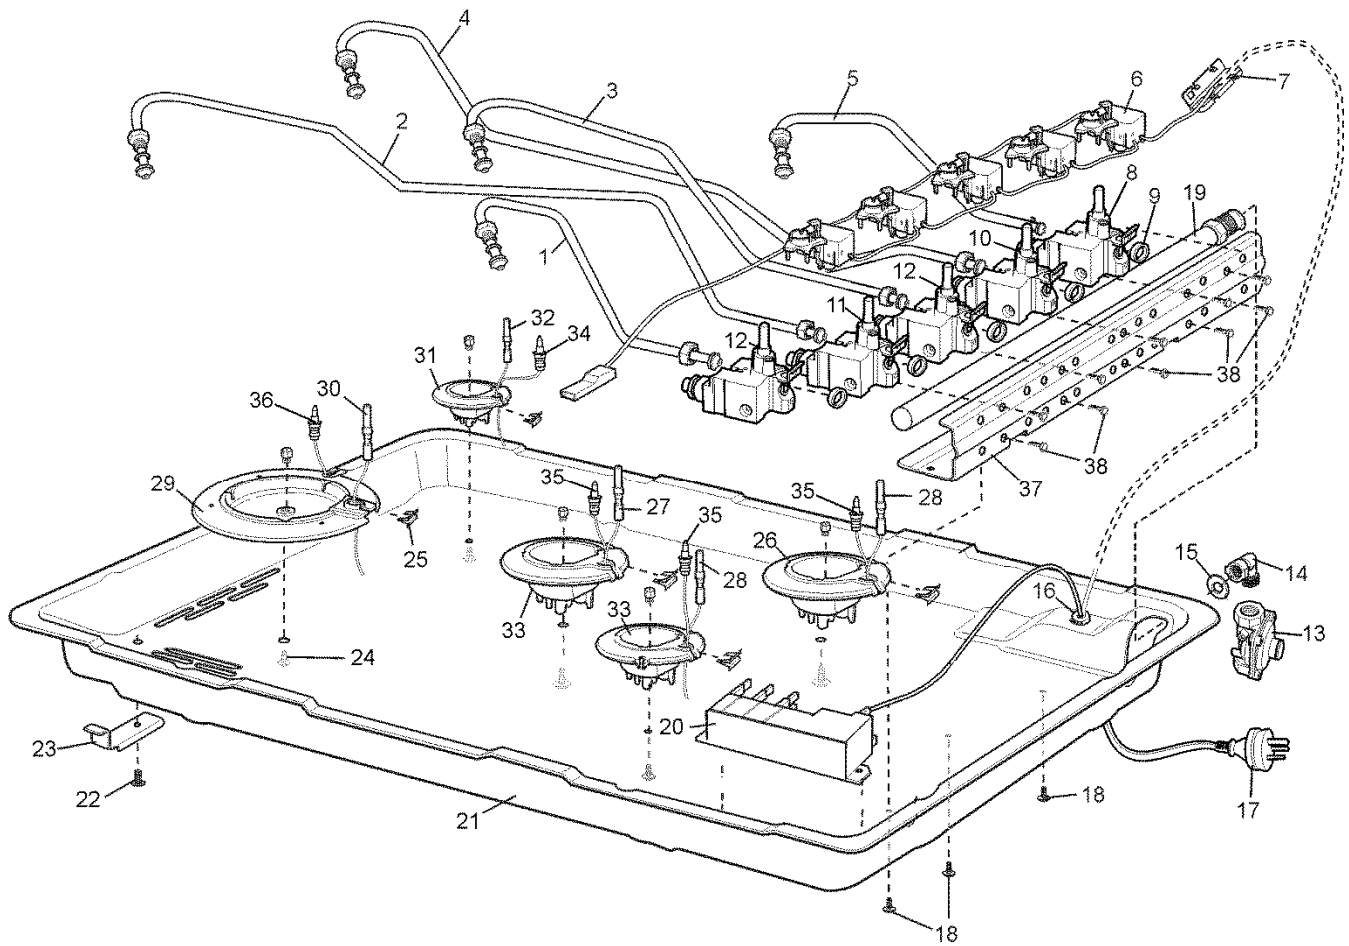

ITEM	PART N°	DESCRIPTION Ex 8288	QTY
1	A03852901	TUBE BURN 90 C/TOP RF FSG	1
2	A03853201	TUBE BURN 90 C/TOP LR FSG	1
3	A03853101	TUBE BURN 90 C/TOP MID FSG	1
4	A03853301	TUBE BURN 90 C/TOP LF FSG	1
5	A03853001	TUBE BURN 90 C/TOP RR FSG	1
6	A01014006	SWITCH HARNESS 5PT SC 90	1
7	0712 014 030	COFFIN INSULATOR 140C NYLON	2
8	305 4486 18	VALVE GAS BSI FSG RAPID RED	1
9	0208 003 419	SEAL VALVE SOURDILLON	5
10	305 4486 16	VALVE GAS BSI FSG AUX GREEN	1
11	305 4486 19	VALVE GAS BSI FSG WOK BLACK	1
12	305 4486 17	VALVE GAS BSI FSG SEMI RAP BL	2
13	A00338701	REGULATOR GAS NG INTEG TEST PT	1
14	0068 007 037	FITTING GAS INLET TAPERED BSPT	1
15	0115 009 011	WASHER SEALING	1
16	305 5322 00	GROMMET CORD GRIP MP6N4	1
17	0215 002 092	CABLE - ELECT SUPPLY (10 A)	1
18	305 3882 01	SCREW 6/32 X 3/8 M/SERATED T/C	3
19	0011 002 591	RAIL GAS COOKTOP 5 HOLE GAIL	1
20	809165701	IGN BOX 5PT 240V JAVA	1
21	N.P.A.	BURNER BOX GAIL WASHED HZ	1
22	305 3761 02	SCREW 3/4X8 PAN Z/P (LP HP AER	4
23	A00561202	CLAMP BURNER BOX CORAL/GAIL HZ	4
25	354 3081 02	CLIP SPARK PLUG ELUX	5
26	357 7298 42	BURNER BODY ASSY RAPID IGN NG	1
27	357 0698 04	PLUG SPARK 600 MM ENAMELLED	1
28	357 0698 02	PLUG SPARK 400 MM ENAMELLED	2
29	357 7331 30	BURNER BODY ASSY WOK NG	1
30	305 5230 02	PLUG SPARK WOK 900MM ENAMELLED	1
31	0004 008 424	BURNER BODY ASSY AUX IGN NG	1
32	357 0698 06	PLUG SPARK 900 MM ENAMELLED	1
33	357 7298 48	BURNER BODY ASSY S/RAP IGN NG	2
34	305 5976 01	T'COUPLE TT ELUX BURNER 500	1
35	305 5976 00	T'COUPLE TT ELUX BURNER 275	3
36	305 5977 01	T'COUPLE TT ELUX BRNR WOK 750	1
37	305 4891 00	BRACKET GAS RAIL 600/900 WELD	1
38	305 5175 00	SCREW M4 X 15 HEX ZC	10
N.I.	0065 009 254	NUT METRIC M12 X 1.00	3
N.I.	305 3386 02	SCREW M4 X 8 PHIL	2

Gas Conversion – Important

NOTE: THIS KIT MUST BE FITTED BY A LICENSED GAS FITTER.
A CERTIFICATE OF COMPLIANCE MUST BE SUPPLIED TO BE KEPT BY THE CUSTOMER.

Please follow the procedure below if a conversion to LPG or NG is required.

The conversion kit contains injectors to suit NG and LPG
1 X LPG sticker and 1X NG sticker. (see overleaf)

1. Remove the hotplate burners to access the hotplate injectors.
2. Replace the injectors with the appropriate injectors. (see table below).
3. Unscrew the hex nut from the regulator. The hex nut, brass washer and nylon insert will disengage from the regulator as an assembly.
4. Unclip the nylon insert from the nut assembly by rotating the insert 1/4 turn and pulling it free. (Figure 2)
5. Correctly orientate the insert and clip back into position. (Figure 3)
6. Refit the hex nut assembly to the regulator ensuring that it is fully screwed down.
7. Turn on the gas supply and at each new connection, check for leaks using soapy water.

8. The operation of the regulator can be confirmed by connecting a manometer to the pressure test point located on the side of the regulator body. (Fig 1) With the appliance operating check the outlet pressure. (see table below)

- When all burners of the appliance are operating at maximum,
- When the smallest burner of the appliance is operating at minimum.

9. One by one, turn the knobs to minimum and adjust the bypass screw (accessible when the knob is removed) until a small stable flame results. Turn the knob to maximum and then back to minimum to ensure that the correct minimum flame is maintained.

10. Attach the correct sticker to the cooker, near the gas supply inlet. (Remove or cover the old sticker)

Burner Type	Natural Gas (Nominal test point pressure: 1.00kPa)	LPG (Nominal test point pressure: 2.60kPa)
Small	1.00	0.55
Medium	1.35	0.70
Fish	1.45	0.78
Large	1.60	0.90
Wok	1.75	1.00

Fig 1

Hex nut assembly fully screwed down.

Pressure Test Point.

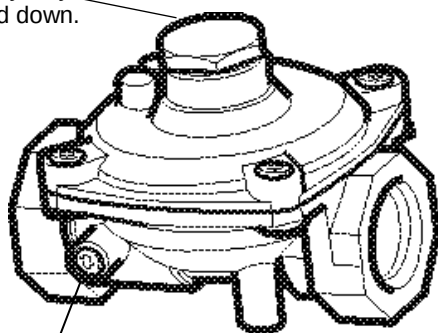


Fig 2

Hex nut assembly removed from regulator and insert disassembled.



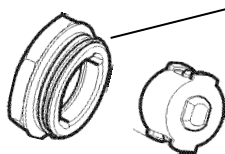


Fig 3


Insert orientated for natural gas operation.

Insert orientated for LPG operation.

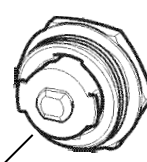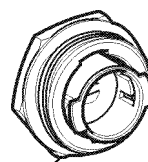

Kit Part N° ES6013		
PT N°	DESCRIPTION	QTY
0131 002 100	NIPPLE INJECTOR LP/NG 1.0 MM	1
0131 002 135	NIPPLE INJECTOR SEMI R NG 1.35 MM	2
0131 002 406	NIPPLE INJECTOR FISH NG 1.45 MM	1
0131 002 393	NIPPLE INJECTOR RAPID NG 1.60 MM	2
0131 002 403	NIPPLE INJECTOR WOK NG 1.75 MM	1
0131 001 148	NIPPLE INJECTOR AUX LP 0.55 MM	1
0131 001 149	NIPPLE INJECTOR SEMI R LP 0.70 MM	2
0131 001 186	NIPPLE INJECTOR RAPID LP 0.90 MM	2
0294 001 032	REGULATOR GAS NG INTEG TEST PT	1
0296 004 103	STICKER GAS TYPE LPG	1
0296 004 100	STICKER GAS TYPE NG	1
ES6012	INSTRUCTION SHEET	1

DANGER
220-240 VOLTS AC
DISCONNECT FROM SUPPLY
BEFORE REMOVING PANEL

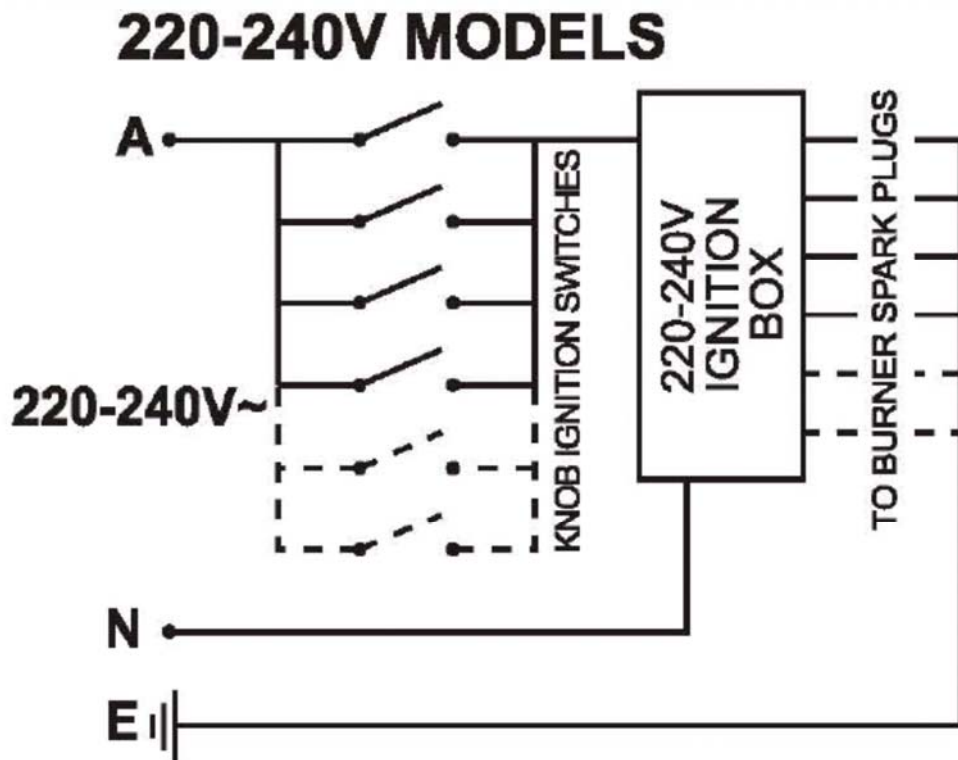

WARNING

IT IS ILLEGAL FOR PERSONS OTHER THAN LICENSED ELECTRICAL MECHANICS OR PERSONS AUTHORISED BY LEGISLATION TO WORK ON THE FIXED WIRING OF ANY ELECTRICAL INSTALLATION. PENALTIES FOR CONVICTION ARE SEVERE.

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.