

INSTRUCTION LEAFLET

Leaflet No.	Part Nos.
8200981	C00282396
Supersedes Leaflet No.	

SAFETY NOTES:

- 1 This part should **ONLY** be fitted by suitably qualified persons having technical competence, applicable product knowledge and suitable tools and test equipment.
- 2 Servicing of electrical appliances must be undertaken with the appliance disconnected (unplugged) from the electrical supply.
- 3 Servicing must be preceded by Earth Continuity, Earth Resistance & Insulation Resistance Checks.
- 4 Personal safety precautions must be taken to protect against accidents caused by sharp edges on metal and plastic parts.
- 5 After servicing, the appliance must be rechecked for Electrical Safety.

Alternative Tumble Dryer Heater Assembly

Heater Assembly Part No. **C00282396** can be used to replace earlier Heater Assembly Part No. **C00281561** after swapping over the plastic terminal housing from the failed Heater to the new one.

The wiring layout is identical.

The correct housing must be used for the Tumble Dryer being repaired.

Disconnect the dryer from the electricity supply before commencing any work.

Handle the Heater Assembly with care as it can be easily damaged by rough handling.

Swapping the Cables:



To ensure that the wires are placed in the correct position you must only swap the cables over **one at a time**, matching colour for colour. The removal method is provided below.

Removing the Cables:

The cable ends are fitted in the housing by small latches which must be released before the wires can be removed. The later housing has hinged sides which must be opened with a flat bladed screwdriver before latches are released (Fig.4).

Working from inside the open end of each plug, use a suitable flat bladed screwdriver to **CAREFULLY** bend the latch flat to release each cable (Fig.2). Swap cables over **one at a time**, matching colour for colour. Each latch must be carefully bent up (as in Fig.1.) before refitting to the housing. Once all 4 wires have been swapped over, fit the Heater assembly to the tumble dryer, and plug the Heater in to the harness connector. Pull each wire firmly from both sides of the block to make sure all cable ends are securely latched in the housing.

After reassembling the dryer check that the heater and heat select settings work correctly.

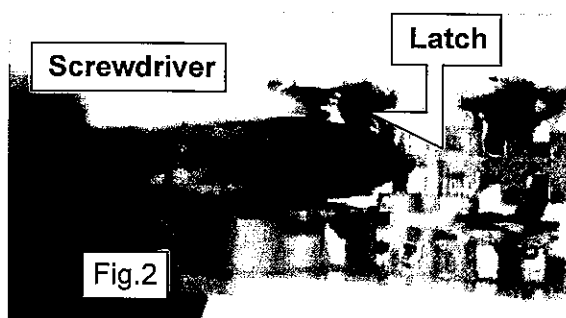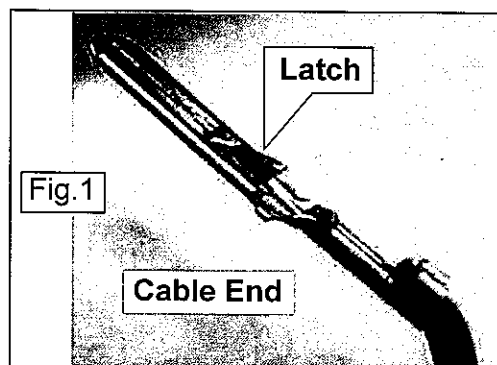

Housing fitted to C00281561

Housing fitted to C00282396

