


Ident-Nummern-Konstante
 3740

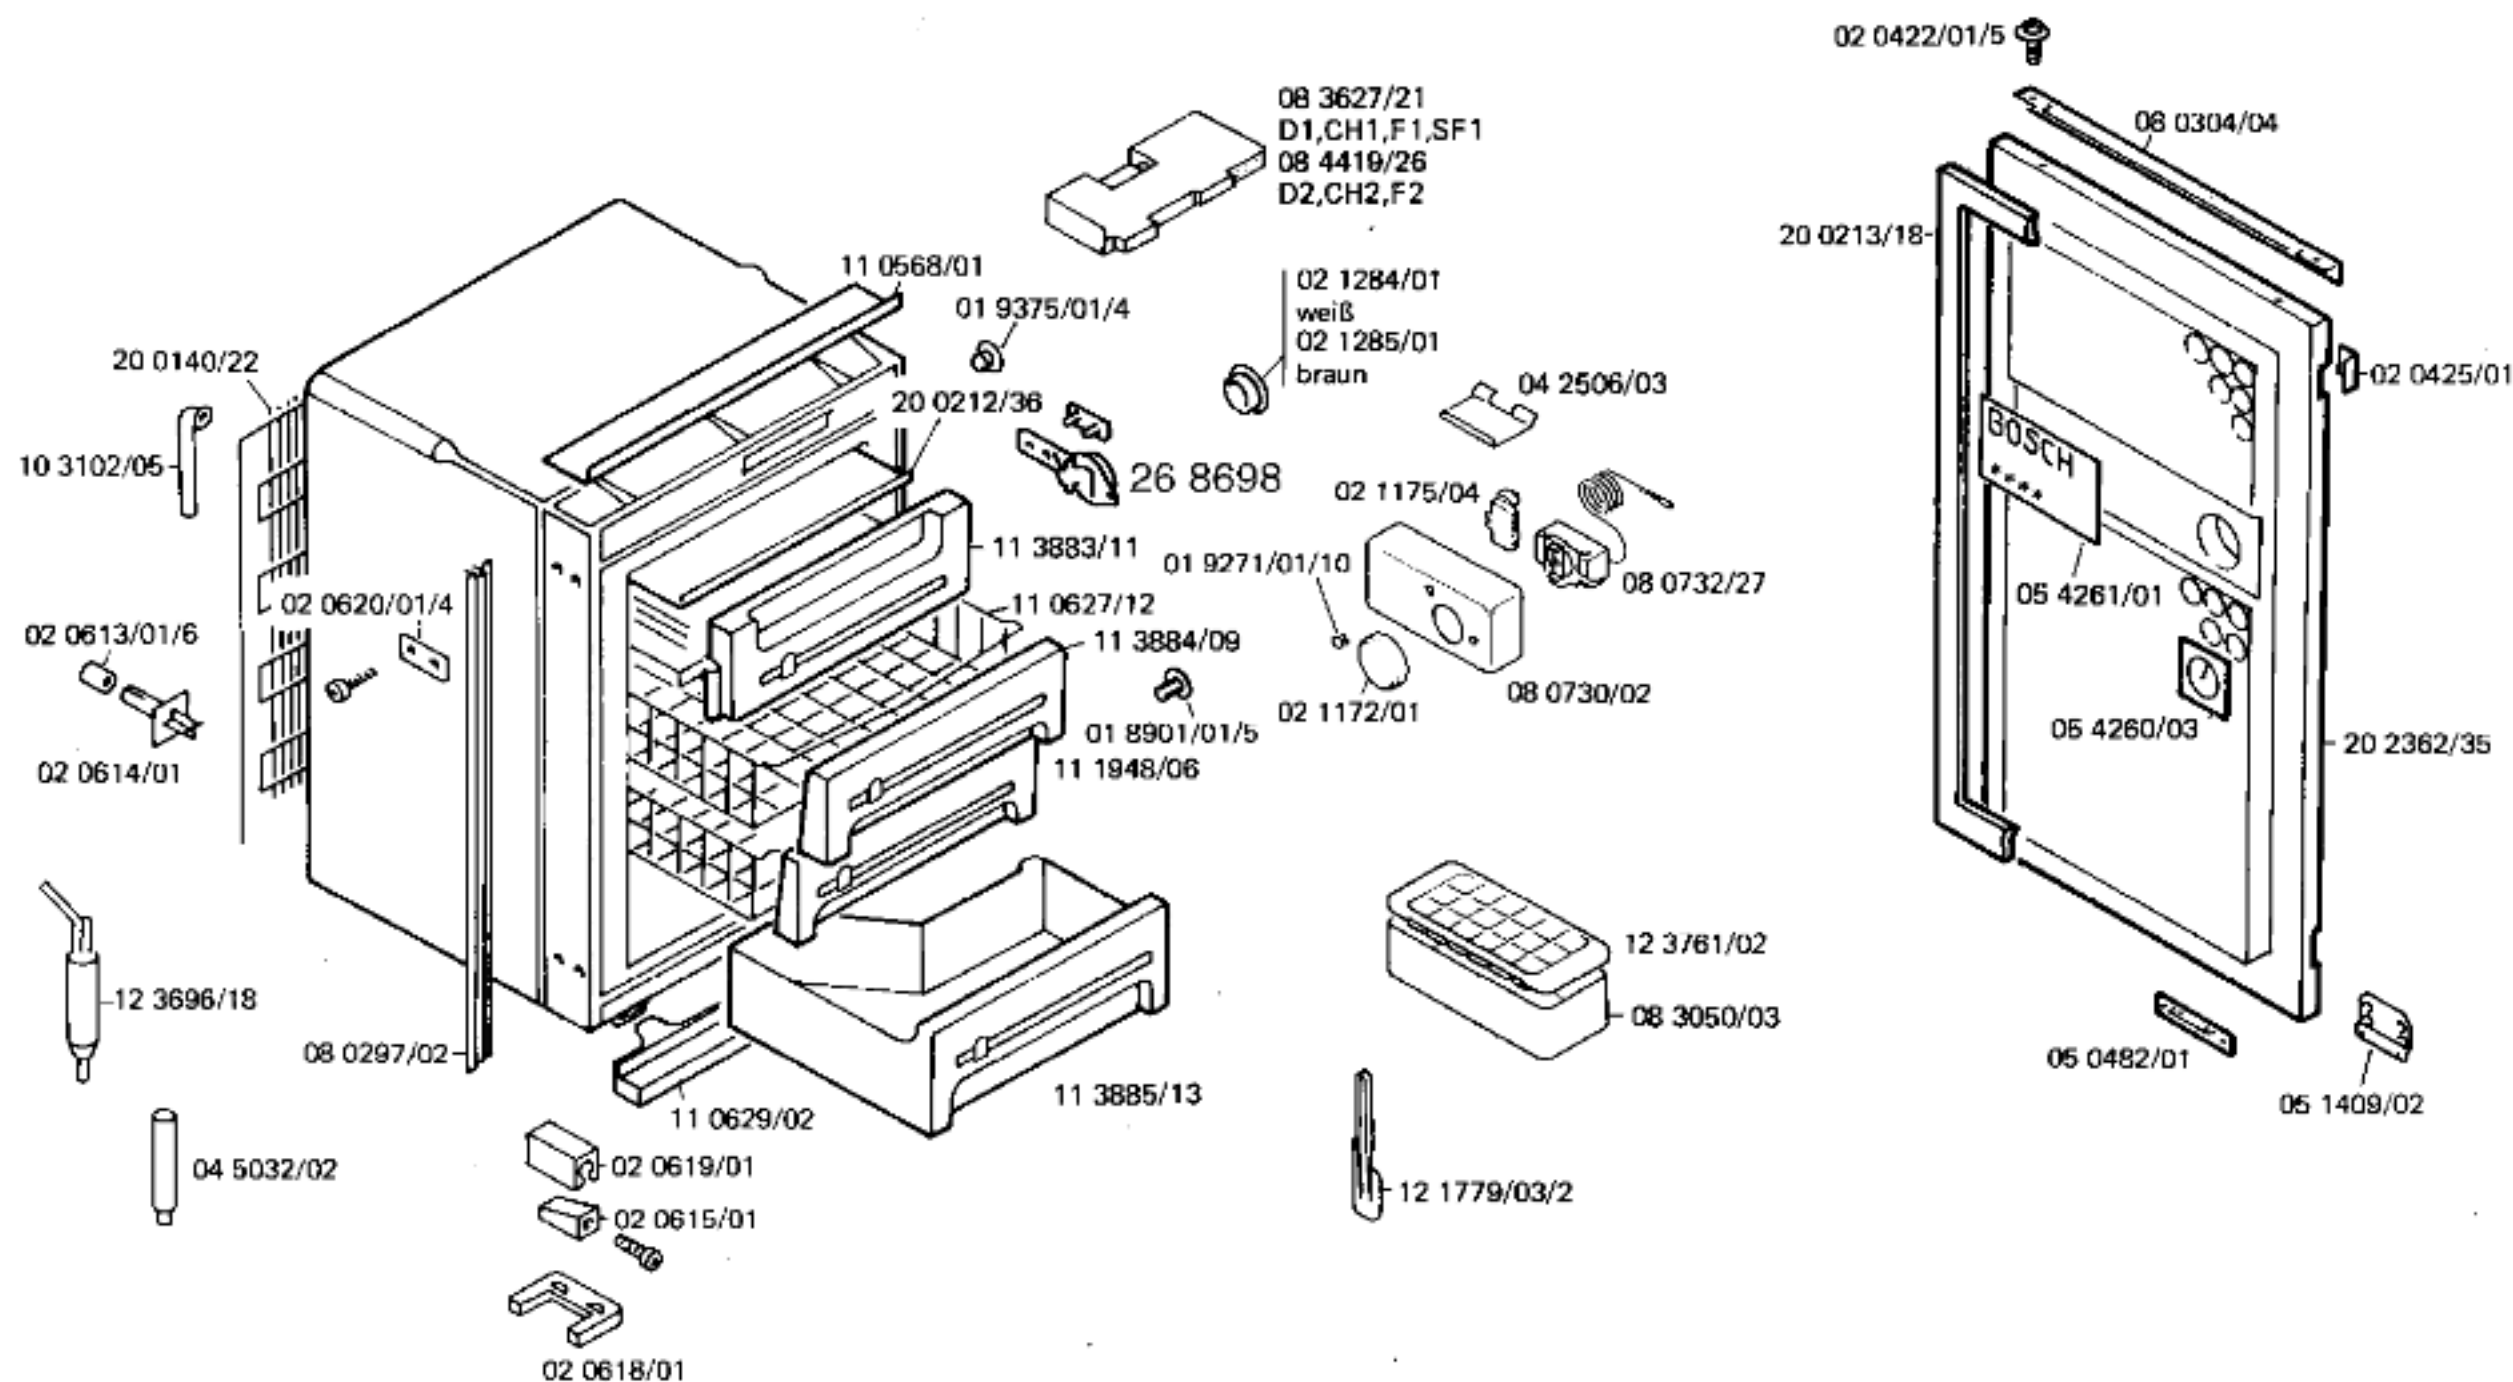

51 0384/00
 D1,CH1,F1,SF1
 D2,CH2,F2
 Aufstellanleitung
 (D,GB,F,I,NL,DK,S,SF,E)

51 1734/00
 D1,CH1,F1,SF1
 D2,CH2,F2
 Gebrauchsanweisung
 (D,GB,F,I,NL,DK,N,S,SF,E)


**BOSCH**

GIL 130 - 0 705 134 170-D1
 - 0 705 134 171-CH1
 - 0 705 134 172-F1
 - 0 705 134 191-D2

GIL 130 - 0 705 134 192-CH2
 - 0 705 134 193-F2
 - 0 705 134 212-SF1

GEFRIERGERÄTE
 Gefrierschränke, Einbau

Ident-Nummern-Konstante
 3740

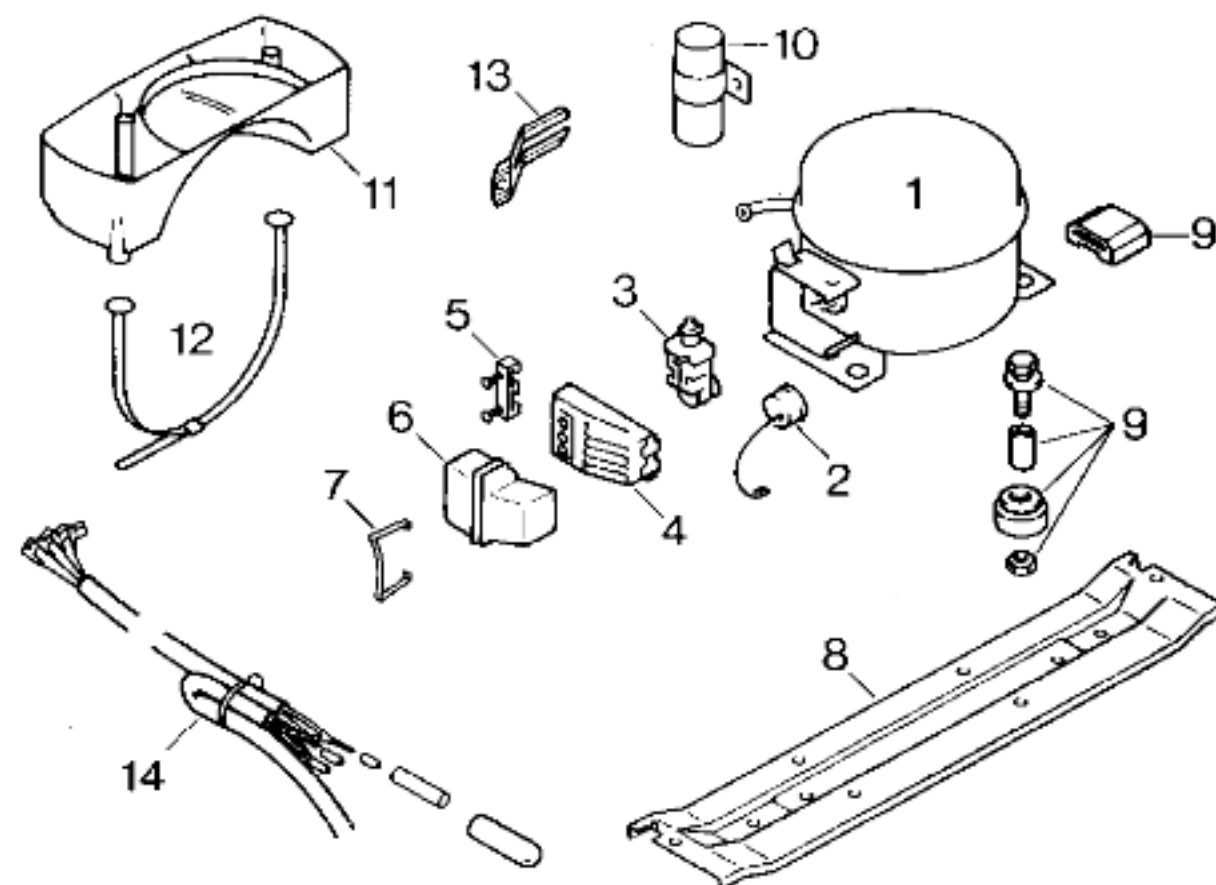

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 5 A				
Förderleistung/Delivery/Débit		V 920				
Anlaufstrom/Starting current/Cour. de démarrage		A	9,0			
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	15,7		
		Hi/aux	Ω	18,8		
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57 SF				
Reglerstellung/Position		kalt		warm		
Schaltwerte/Switching values/		„ein“	°C	- 28	- 19	
Valeurs de commutation		„aus“		- 34	- 26	
		(„abtauen“ od.)	„alarm“	- 20	- 15	
Füllmenge/Fill.quantity/Charge		R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée			W	120		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance			Ω			
Leistung/Power/Puissance			W			
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance			Ω			
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance			Ω			
Spannung/Voltage/Tension			V			

Pos.	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				