



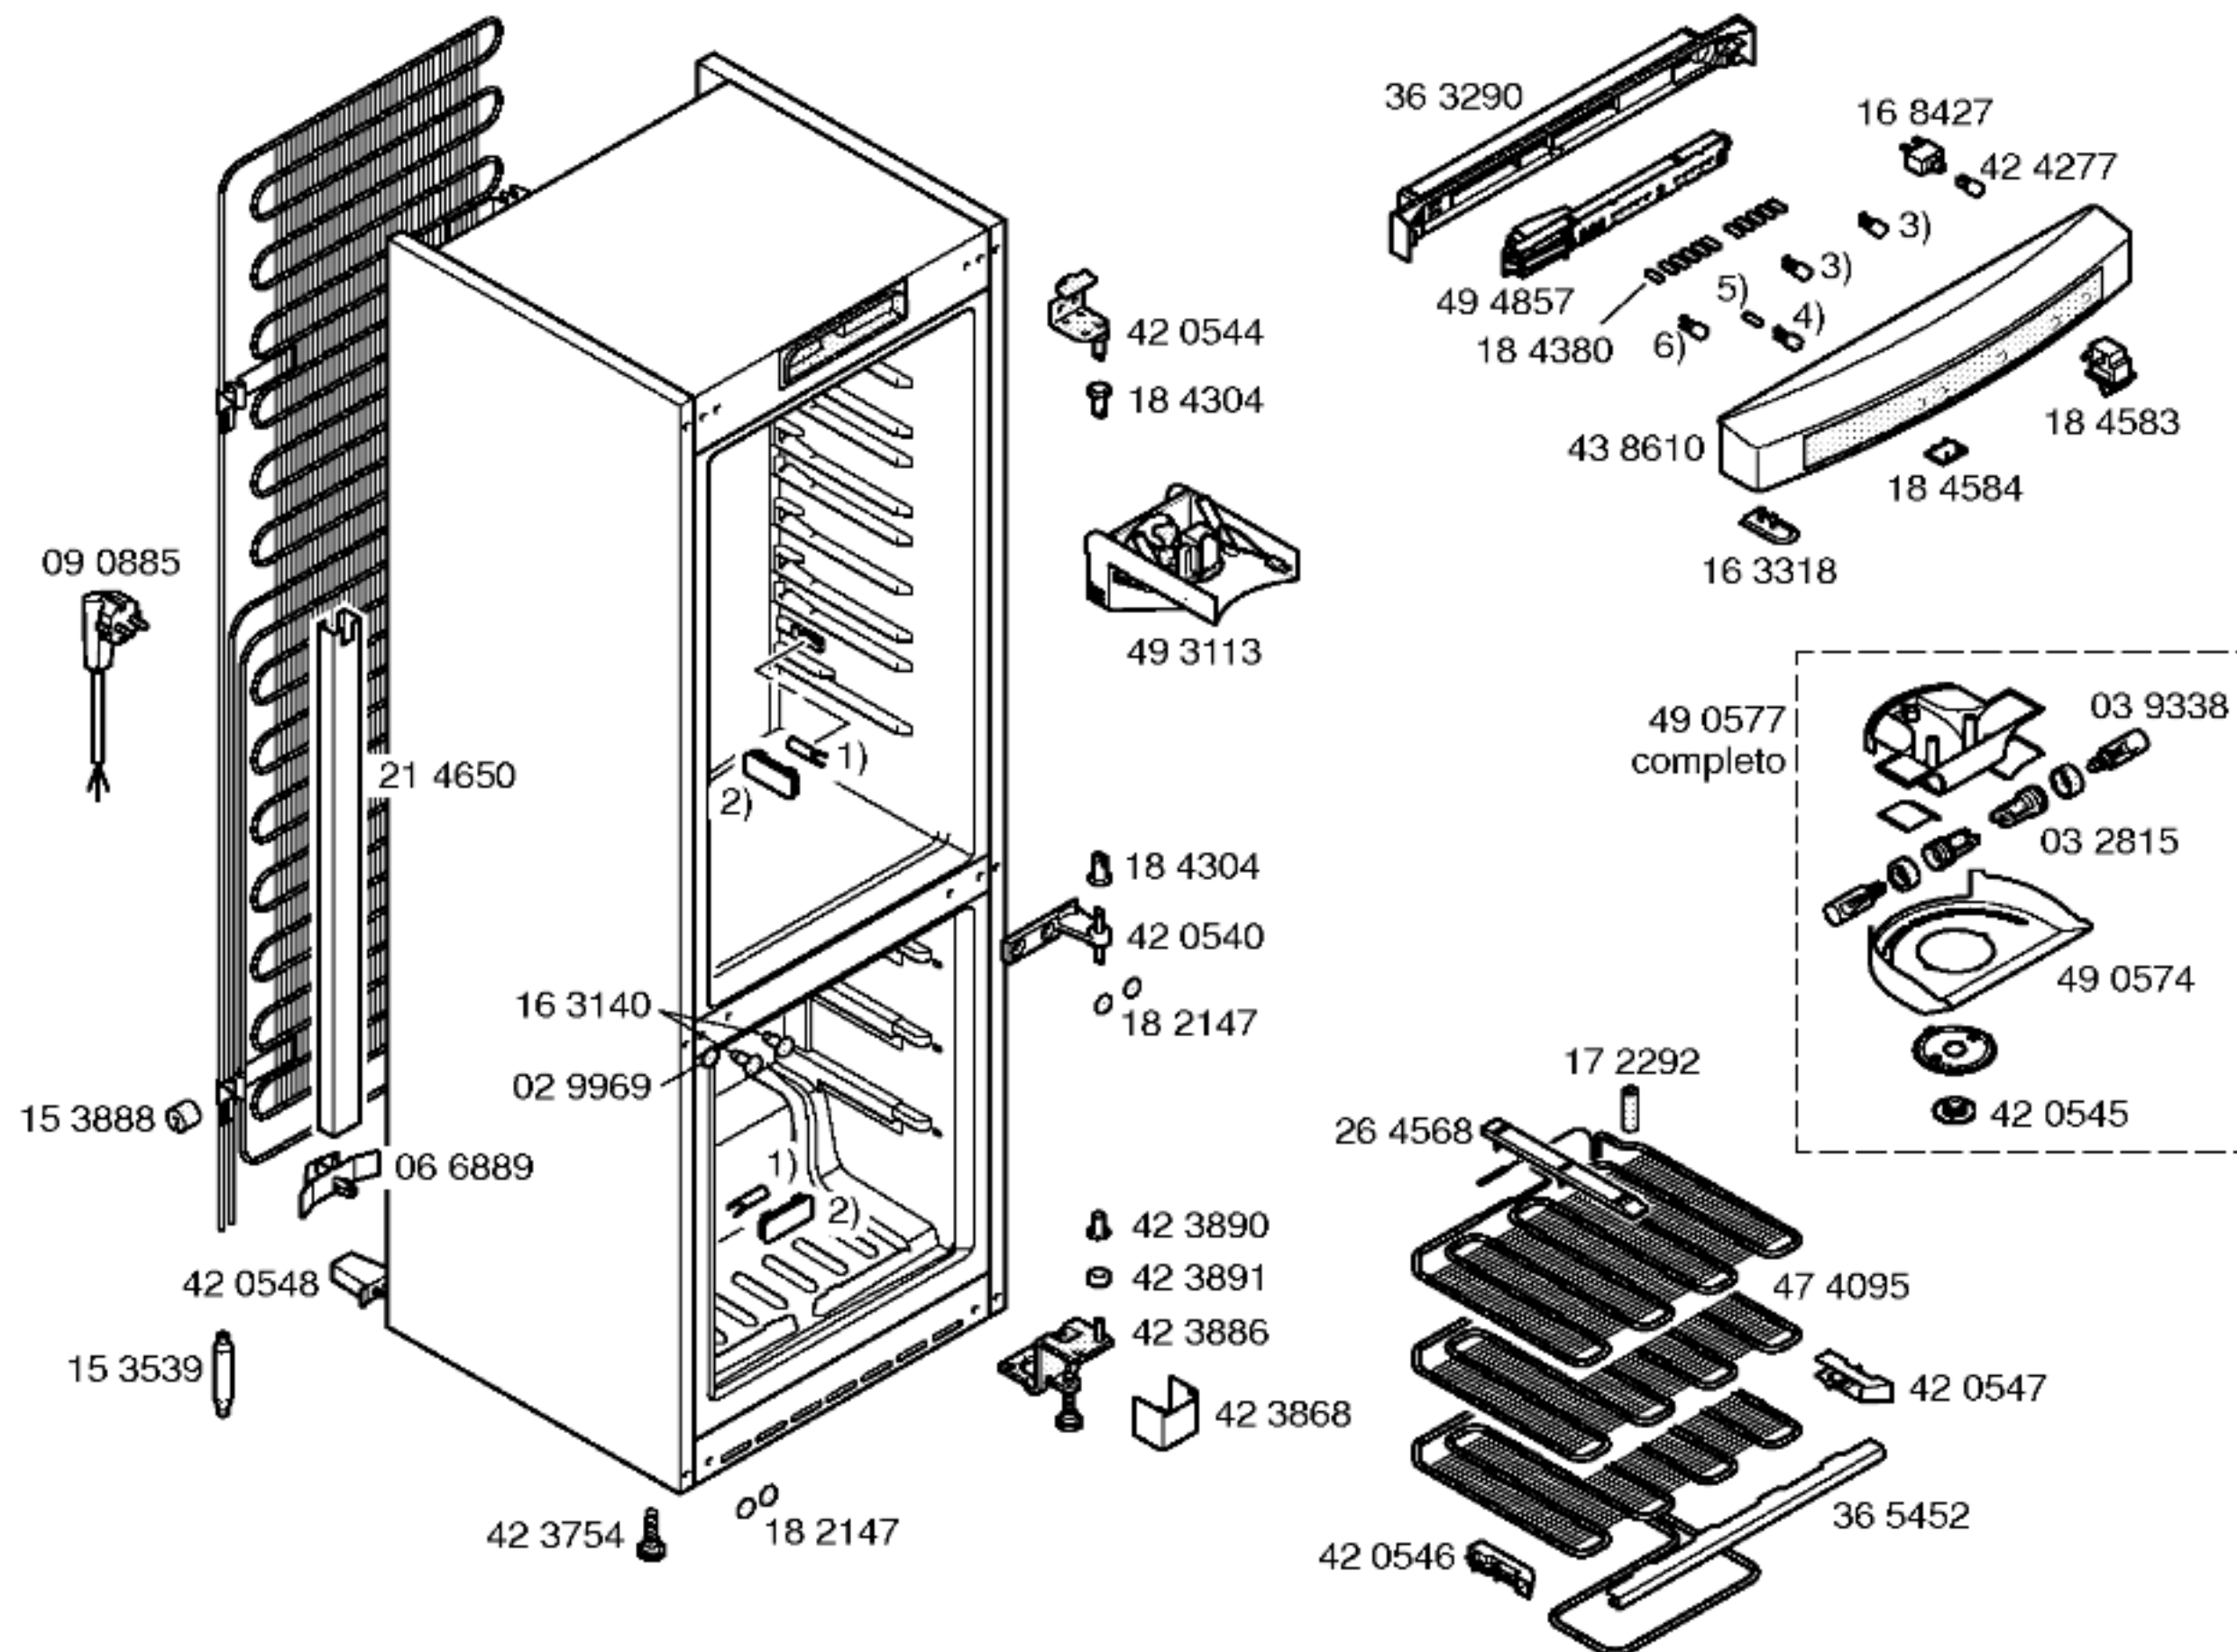


Libro de instrucciones
58 9827
(es,pt)

Instrucc. de instalación
58 9445
(de,en,es,pt)

- 1) 16 8766
Cjto.reparación
- 2) 16 9176
- 3) 18 7068
- 4) 18 7069
- 5) 18 4433
- 6) 42 4276

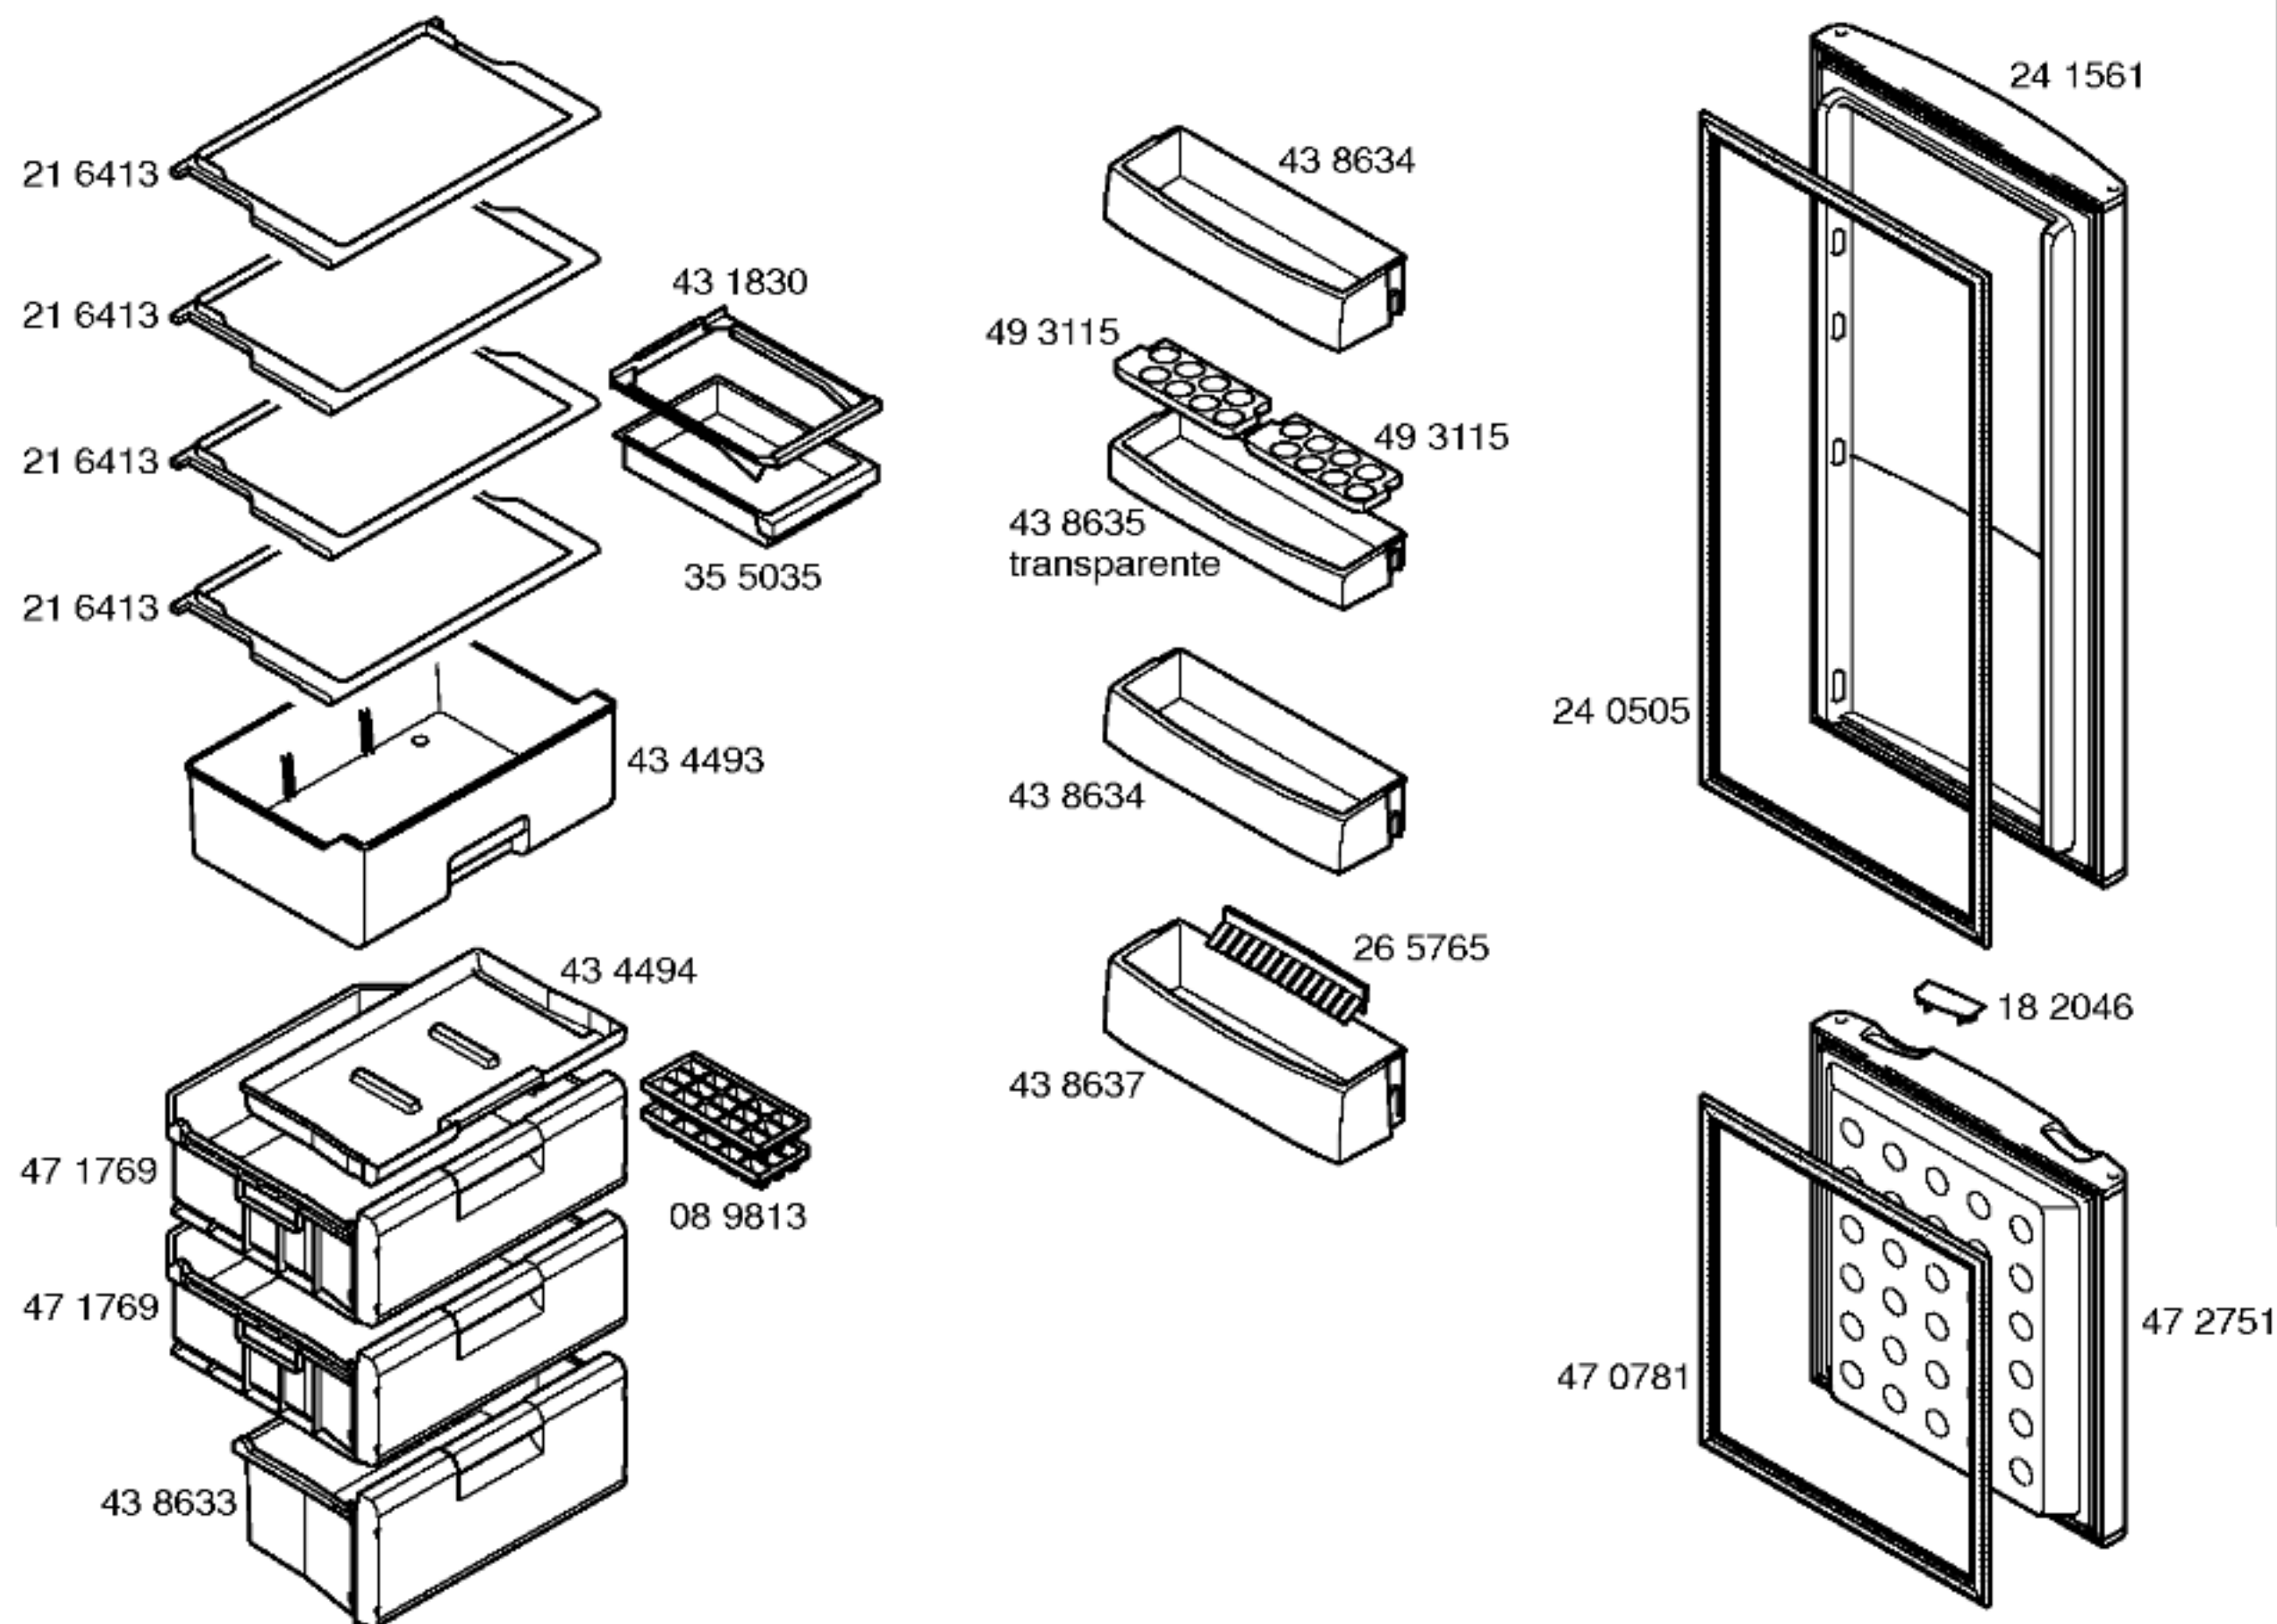

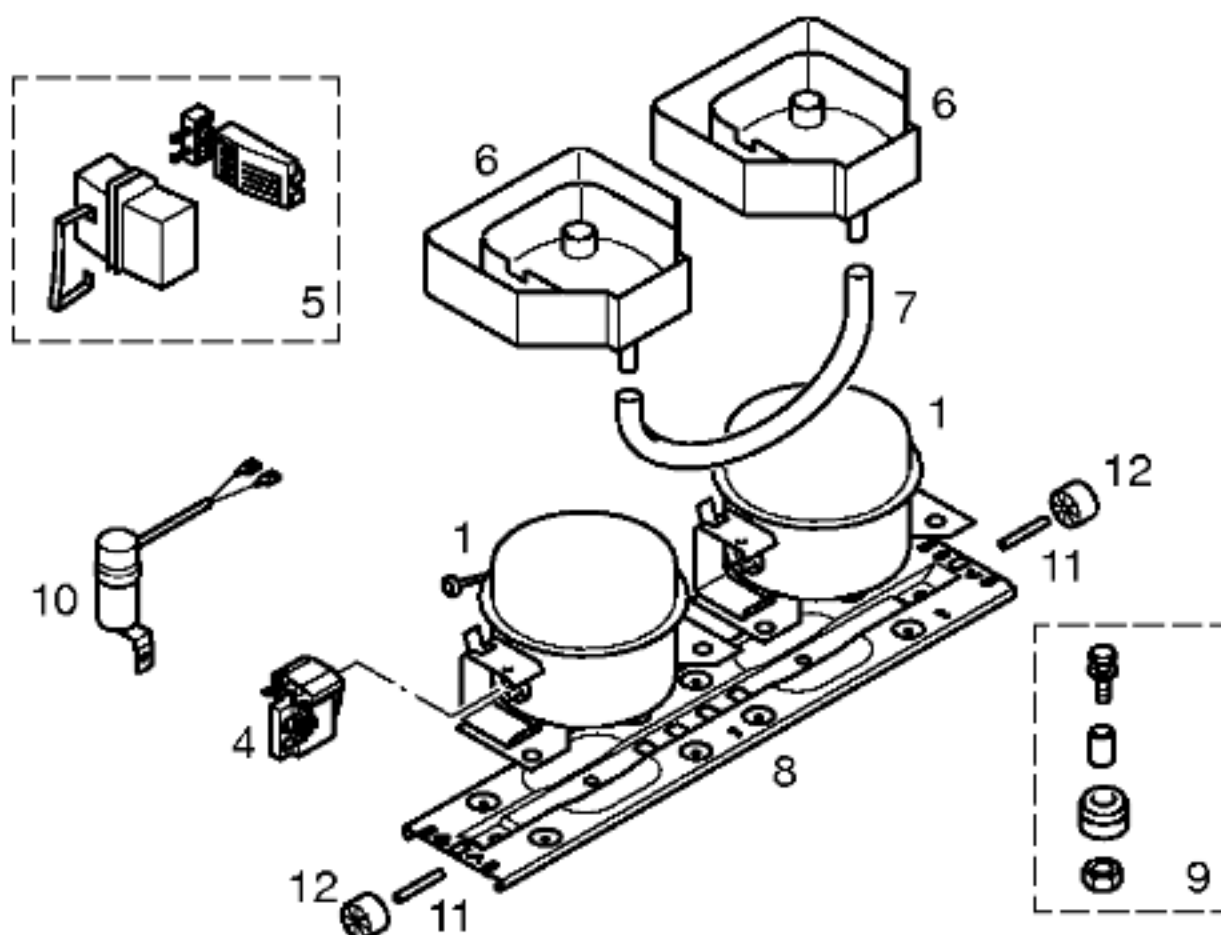

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor		LG	Danfoss
Typ/Type/Tipo		NDA62NAEG	TLY7KK.2
Förderleistung/Delivery/Debit/Aspiración l/h			
Strom/Current/Courant/Intensidad	A	0,48	0,46
Widerstand/Resistance/Resistencia.	Ha/main/prin. Ohm	35,21	27,10
	Hi/sub/aux. Ohm	21,49	27,10
Temp.Reyler/Thermostat/Termostato		Electronic. KS	Electronic. GS
Typ/Type/Tipo		E2000 Komfort	E2000 Komfort
Reglerstellung/Position/Conexión		MIN. MAX.	MIN. MAX.
Schaltwerte/Switching values/	..ein/conexión °C	11 1	-17,5 -25,5
Valeurs de commutation/Desconex.	..aus"/desconex. °C	10 0	-18,5 -26,5
(..abtaven' od)	..alarm' °C		
Verdampfersensor/Evaporator sensor/Sonda evaporador			
Schaltwerte/Switching values/	..ein/conex. °C	4 4	
Valeurs de commutation/Desconex.	..aus"/descon. °C	— —	
Füllmenge/Fill. quantily/Charge/Carga	R600a. g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potencia	W	71	72
Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Voltage/Tension/Tensión	V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			

* Siehe Typenschild /See identification plate /Voir plaque de caractéristiques /Ver plaqueta de características

Pos.	LG	Danfoss		
	NDA62NAEG	TLY7KK.2		
1	14 2000	14 2004		
2				
3				
4	17 1011	42 7718		
5				
6	49 0594	49 3856		
7	49 0755	49 0755		
8	44 0795	44 0795		
9	05 0166	05 0166		
10		42 4945		
11	15 2770	15 2770		
12	03 1961	03 1961		
13				