


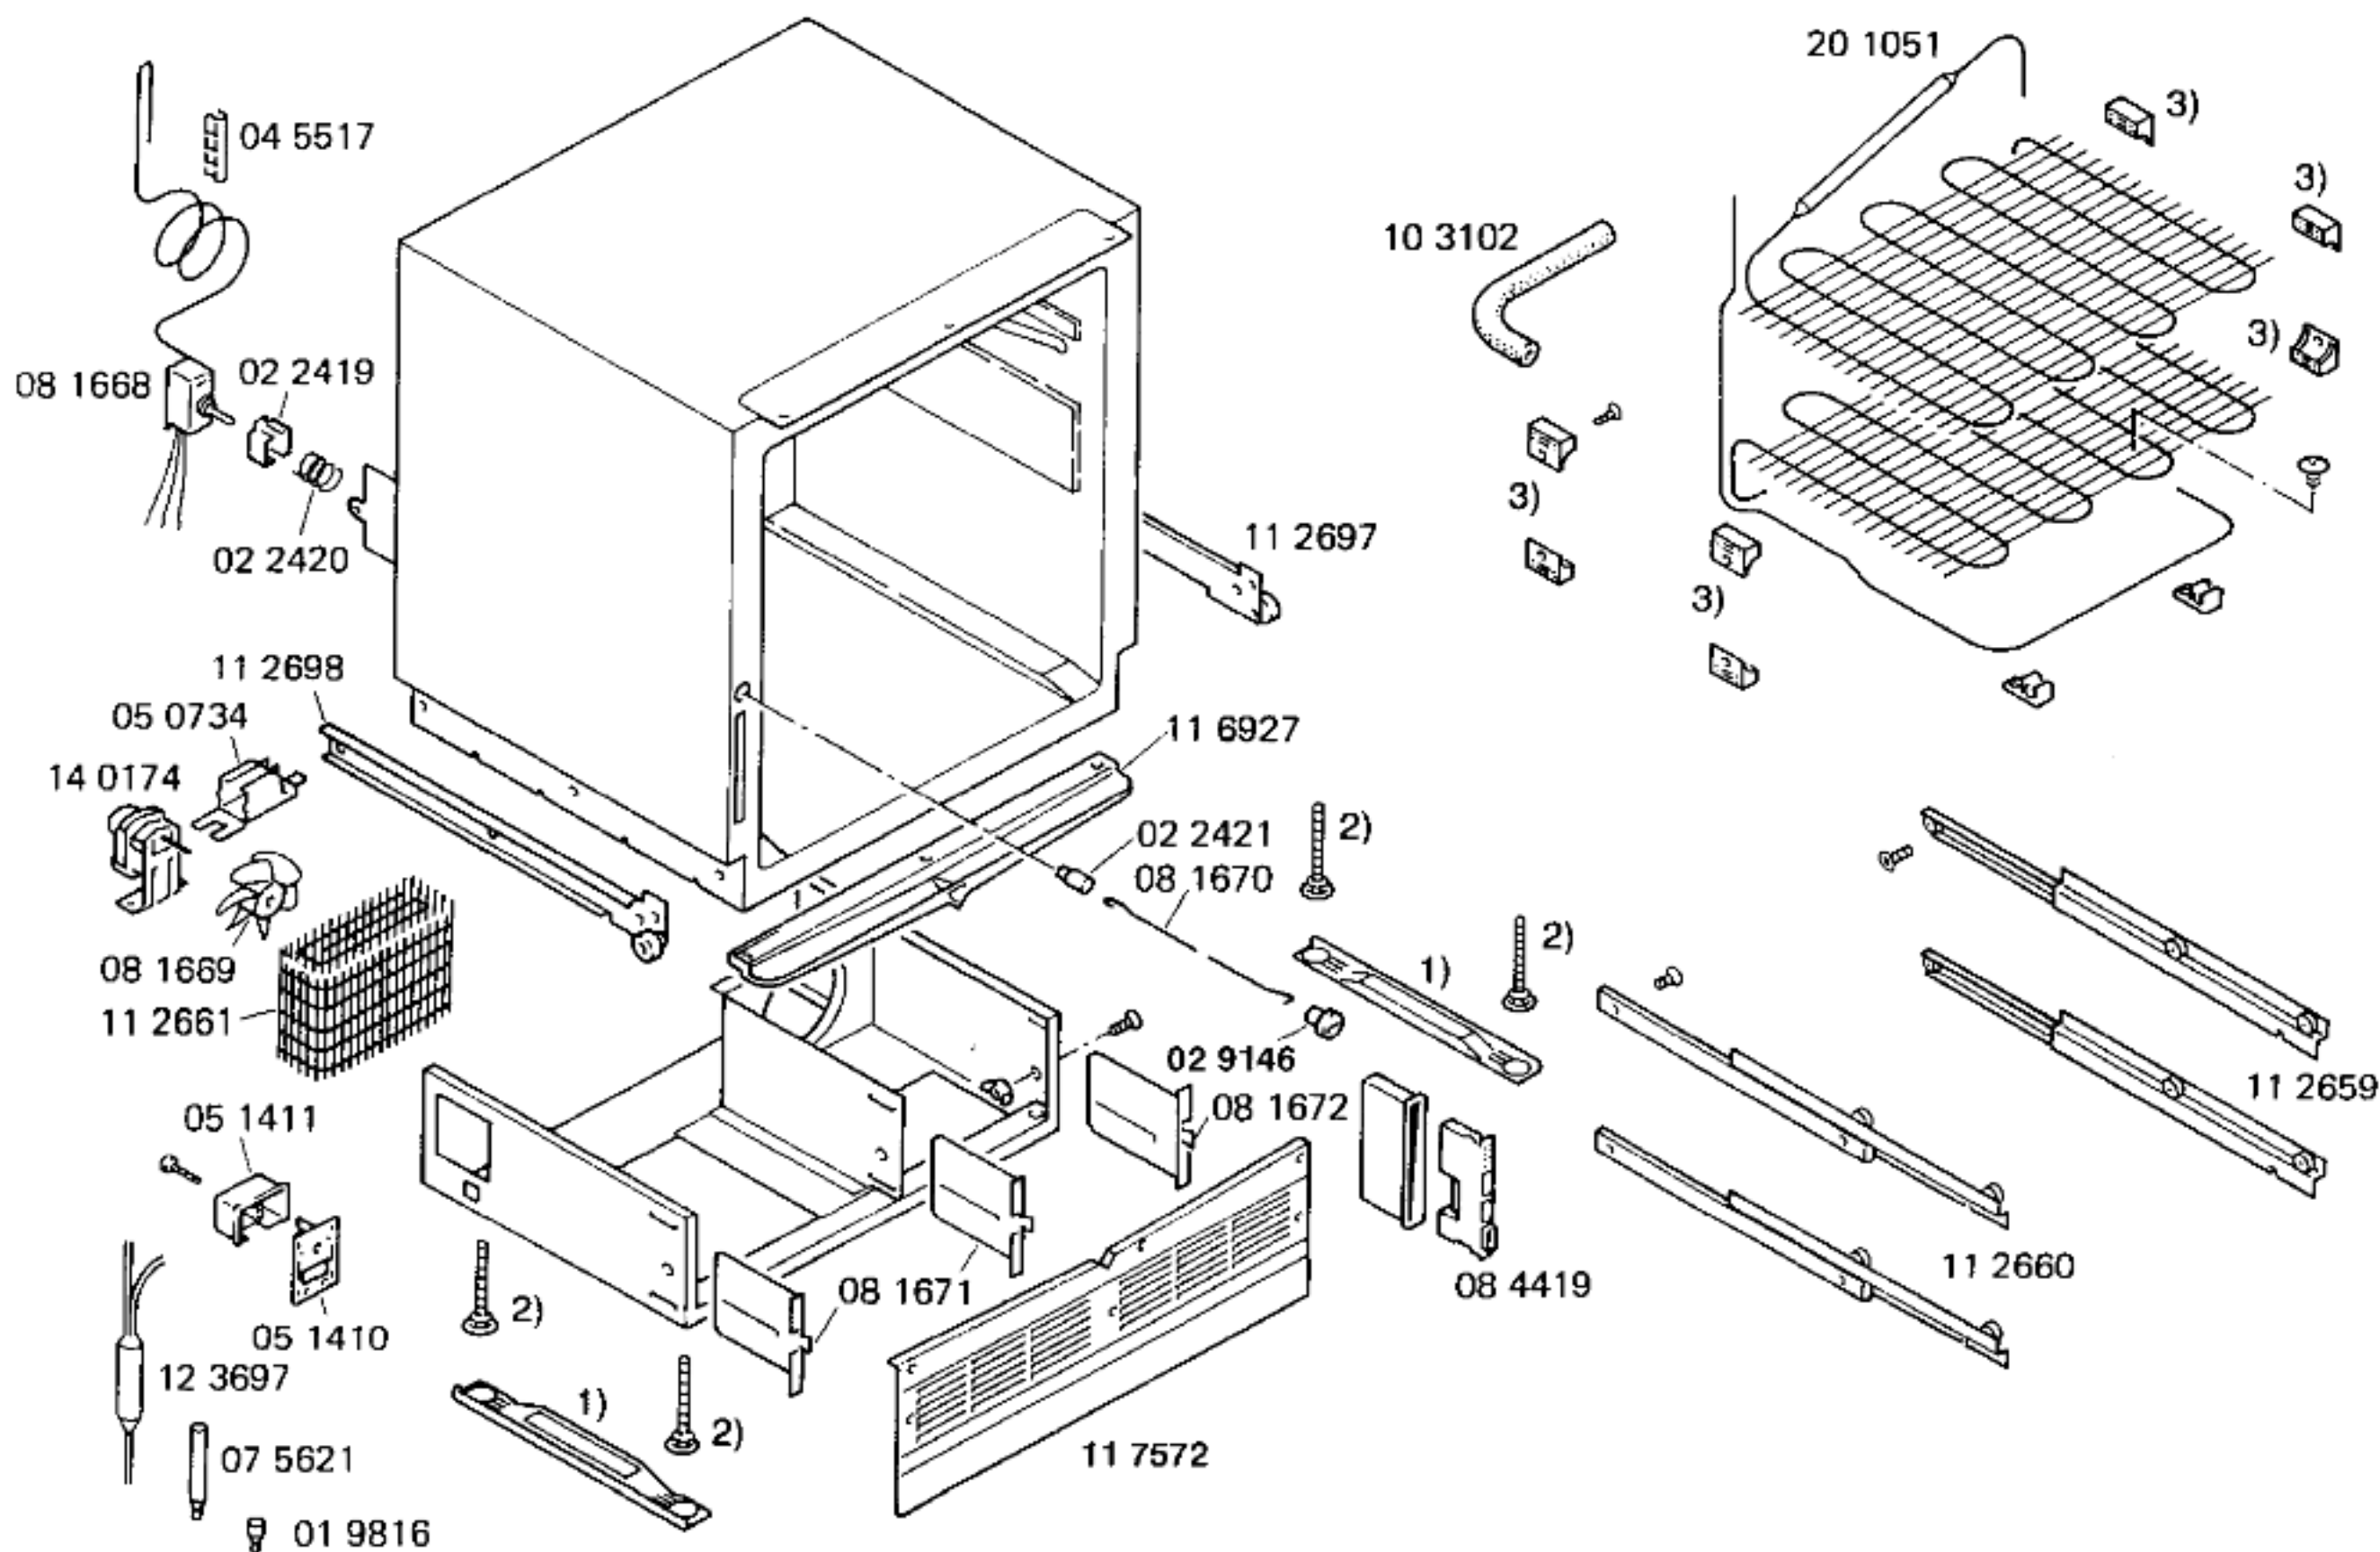

51 1314
EU1,F1,SF1,CH1
Gebrauchsanweisung
(D,GB,F,I,NL,N,E,SF)
51 1315
EU1,F1,SF1,CH1
Montage-Anleitung
(D,GB,F,I,NL,N,E,SF)

1) 11 2700

2) 05 4927

3) 02 2423

**BOSCH**

GUL 1210 - 0 705 124 429-EU1
 - 0 705 124 430-F1
 - 0 705 124 431-CH1

GUL 1210 - 0 705 124 432-SF1

GEFRIERGERÄTE
 Gefrierschränke, Unterbau

Ident-Nummern-Konstante
 3740

4) 02 2424

5) 02 2425


6) 02 0422

7) 02 2426

8) 02 2427

9) 05 0482

10) 11 8000

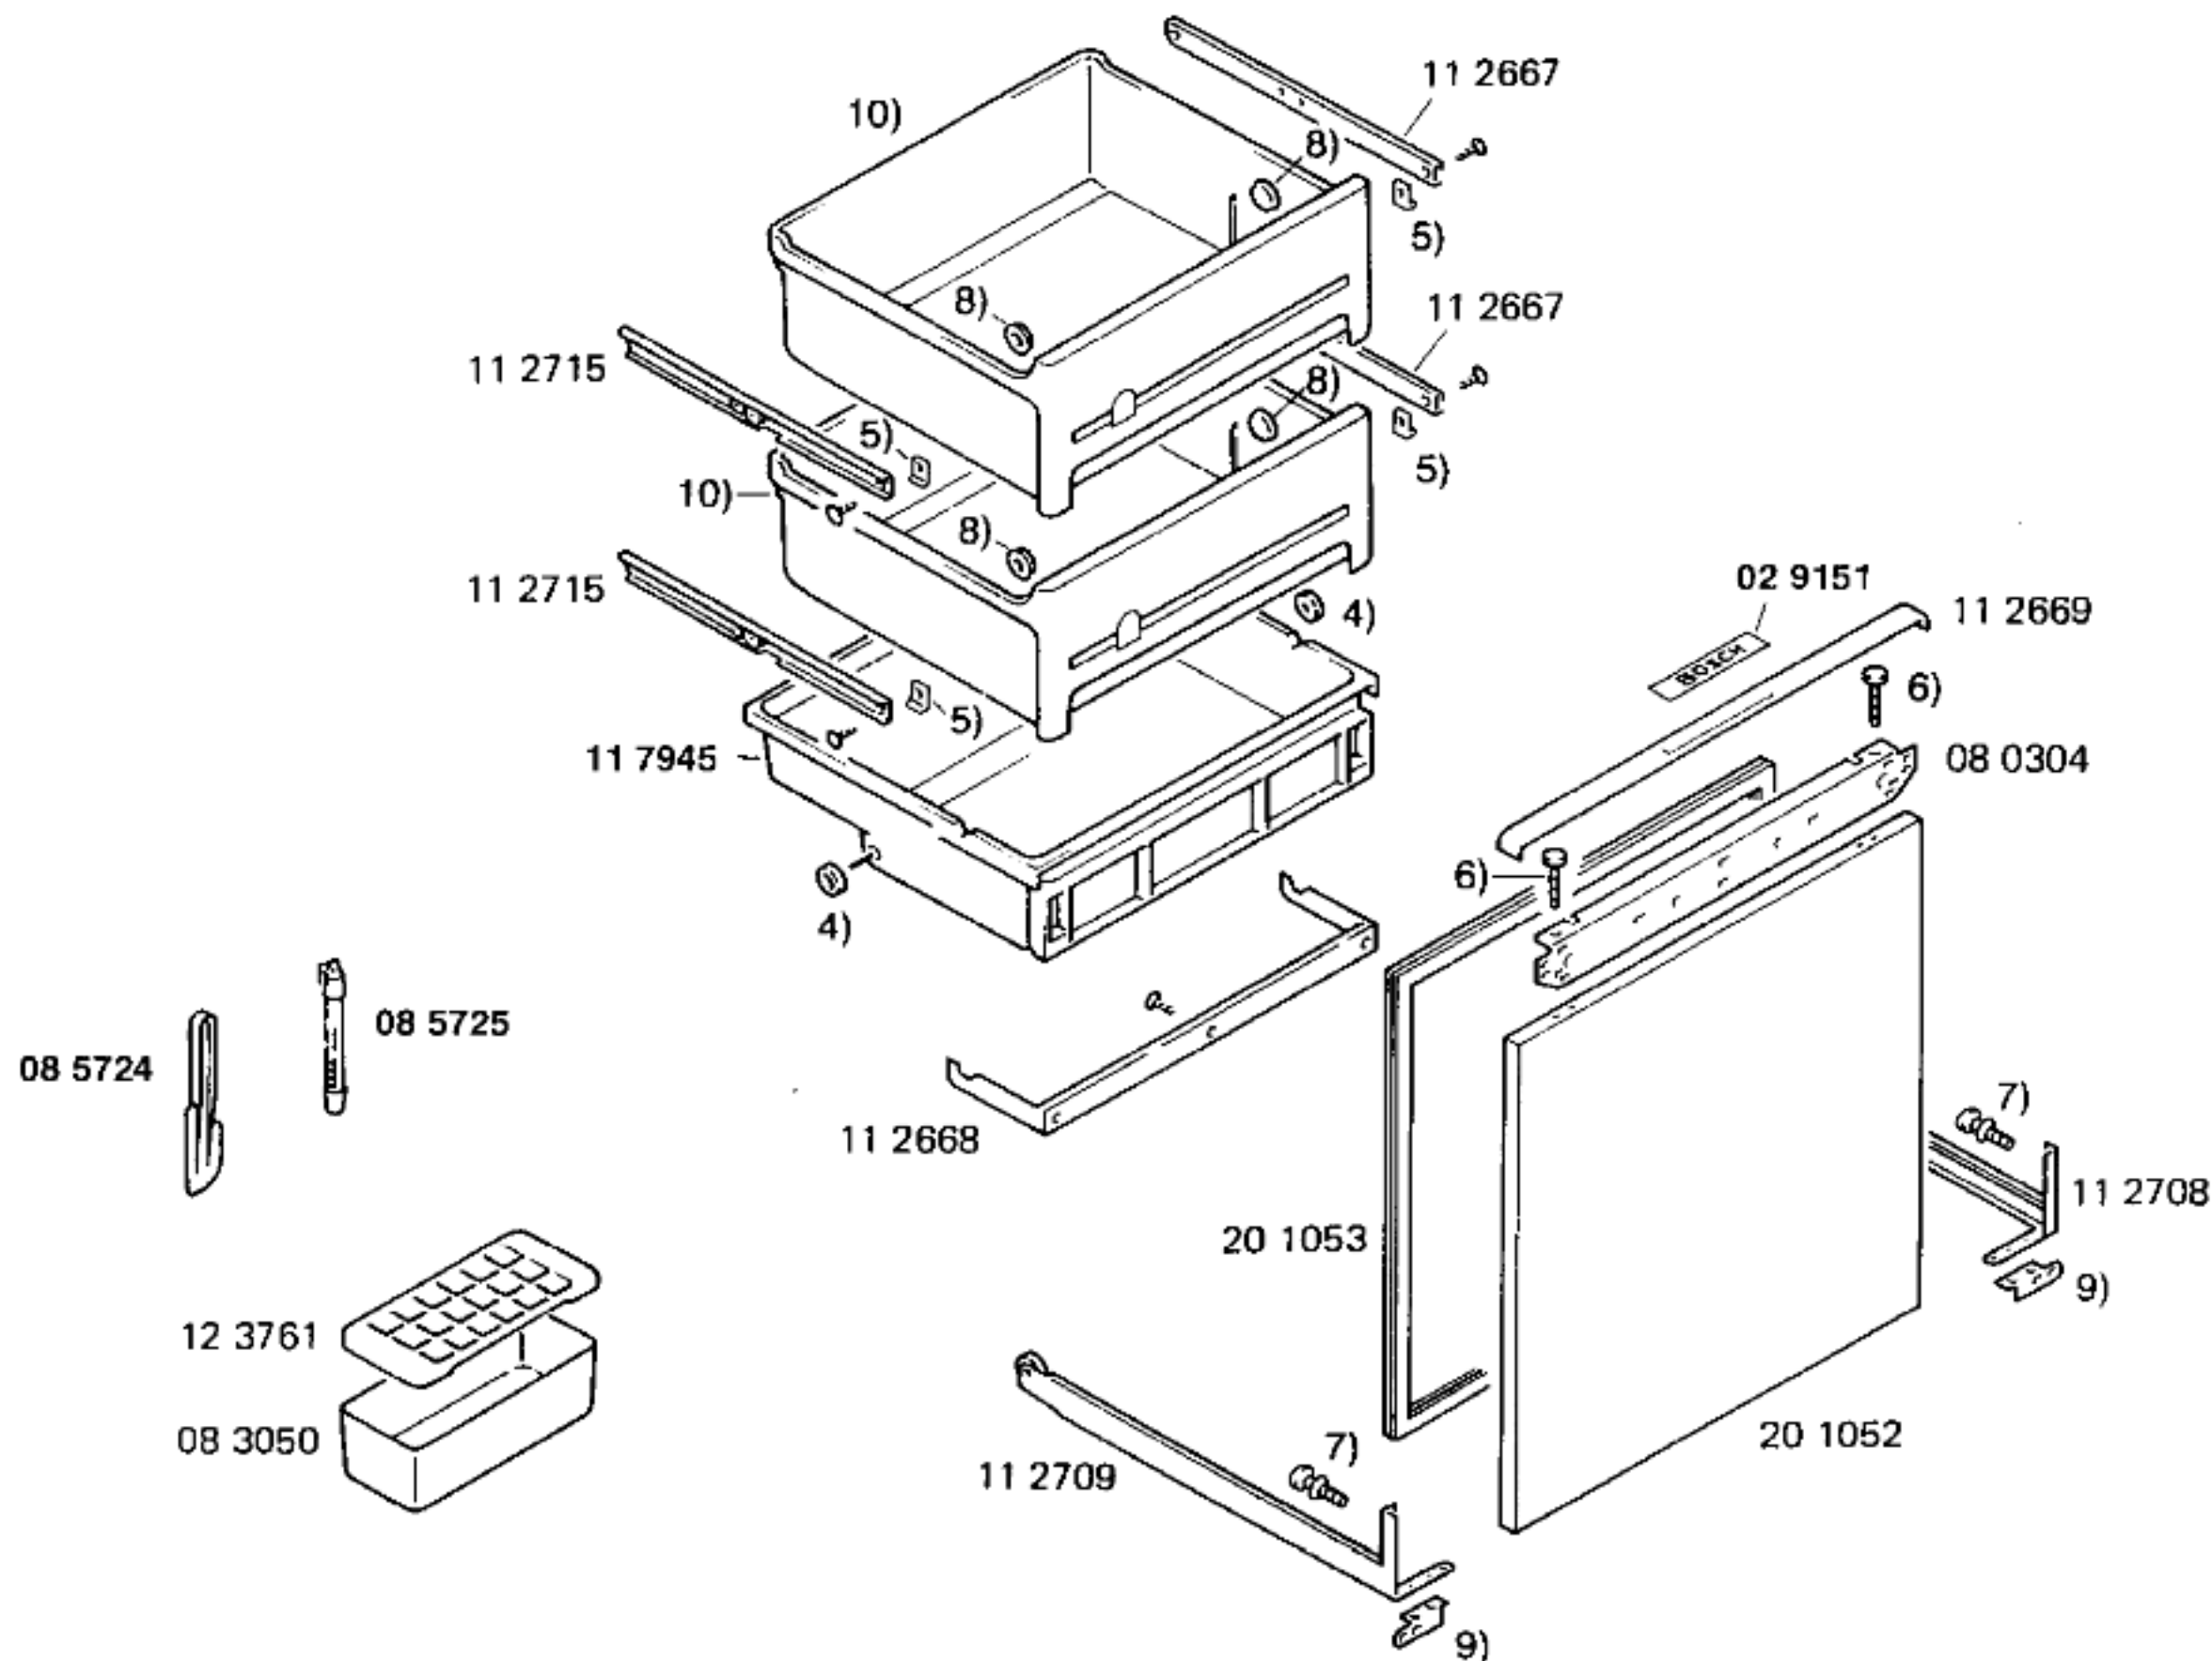


**BOSCH**

GUL 1210 - 0 705 124 429-EU1
 - 0 705 124 430-F1
 - 0 705 124 431-CH1

GUL 1210 - 0 705 124 432-SF1

GEFRIERGERÄTE
 Gefrierschränke, Unterbau

Ident.-Nummern-Konstante
 3740

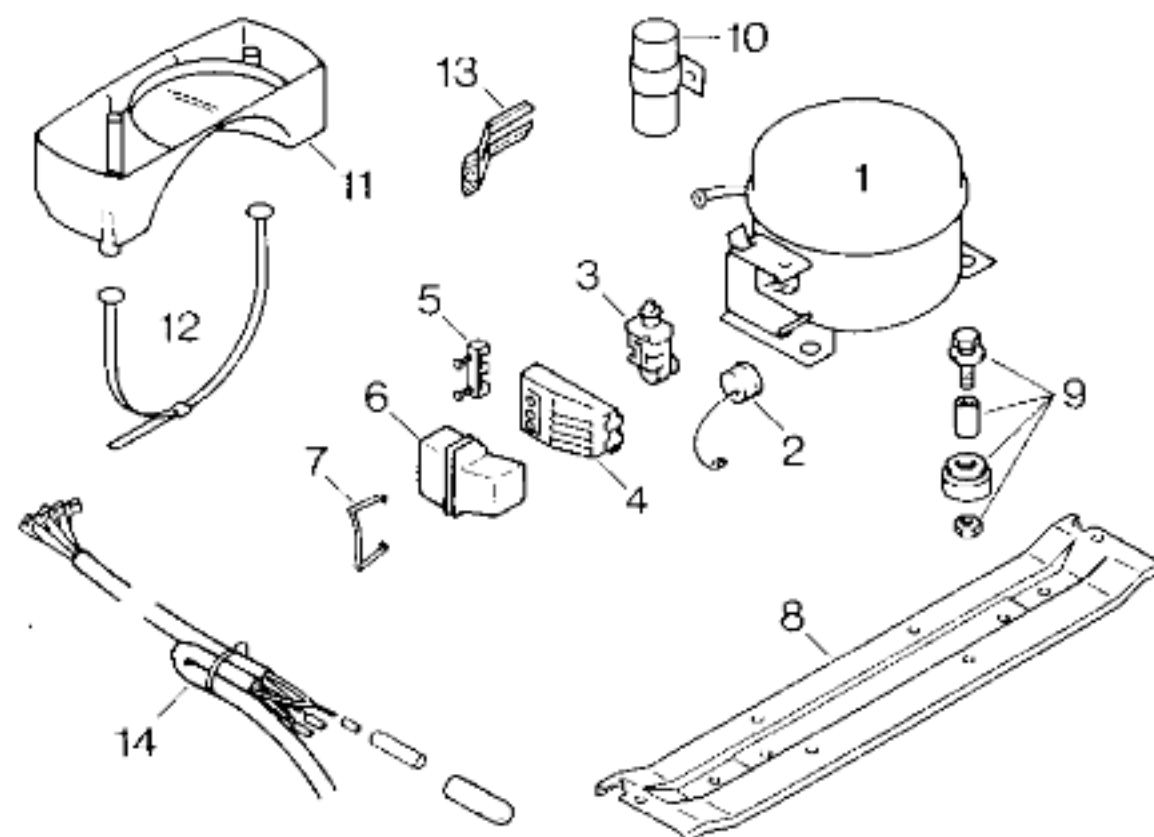

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera			
Typ/Type		BY 1112 A			
Förderleistung/Delivery/Débit	l/h	1060			
Anlaufstrom/Starting current/Cour. de démarrage	A	8,5			
Widerstand/Resistance/Résistance	Hi/main/prin.	Ω 17,9			
	Hi/aux	Ω 43,7			
Temp. Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/	„ein“ °C	-25 -17			
Valeurs de commutation	„aus“	-37 -27			
(„abtauen“ od.)	„alarm“	-20 -13			
Füllmenge/Fill.quantity/Charge	R12 g	150			
Anschlußwert/Conn.load/Puiss. connectée	W	130			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω	6000			
Leistung/Power/Puissance	W	8			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω	285			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				

Pos.	Aspera			
1	14 0166			
2	02 2337			
3	02 2342			
4	05 1748			
5				
6	05 1746			
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				